



## Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir la dirección que se incluye a continuación. Solicite la P/N 131853100.

Spanish Owner's Guides  
Frigidaire Home Products  
P. O. Box 212378  
Augusta, GA 30917

## Before Operating Your Laundry Center

Read your laundry center Owner's Guide. It has important safety and warranty information. It also has many suggestions for obtaining the best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your laundry center Owner's Guide before operating this appliance.

## Operating Steps

- Sort laundry into loads that can be washed together.
- Prepare items for washing.
- Pretreat stains and heavy soil.
- Add the measured amount of detergent to the washer before adding the laundry load.
- If desired, add liquid bleach to the Bleach Dispenser.
- Add the laundry load to the wash tub.
- Set the Load Size control according to type, size, and soil level of the load.
- Push in the cycle selector knob and turn it clockwise to the desired wash cycle. See Cycle Selection for cycle descriptions and Control Settings Chart for suggested cycle settings.
- Start the washer by closing the lid and pulling out the cycle selector knob. The washer will operate with the lid open; however, the tub will not spin unless the lid is closed.

To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart the washer.

- If desired, add diluted liquid fabric softener during the final rinse.
- Remove items when the cycle is completed. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the end of the spin cycle.

## Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the Control Settings Chart (reverse side) if the care label is not available.

The Regular, Perm Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and a final spin.

*(continued, reverse side)*

## Cycle Selection (continued)

### Regular Cycle

Up to 15 minutes of wash agitation for most fabrics.

- **15 hot** 15 minutes of wash agitation. A hot water wash and cold water rinse are provided for heavily soiled items.
- **10 warm** 10 minutes of wash agitation. A warm water wash and cold water rinse are provided for normally soiled items.
- **5 cold** 5 minutes of wash agitation. A cold water wash and cold water rinse are provided for lightly soiled items.

### Perm Press Cycle

Up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

- **12** 12 minutes of wash agitation. A hot water wash and cold water rinse are provided for heavily soiled permanent press items.
- **8** 8 minutes of wash agitation. A warm water wash and cold water rinse are provided for normally soiled permanent press items.
- **4** 4 minutes of wash agitation. A cold water wash and cold water rinse are provided for lightly soiled permanent press items.

### Knits & Delicates Cycle

Eight minutes of wash/pause action. A warm water wash and cold water rinse are provided for knit and delicate items.

## Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle settings.

**This is only a general guide. For best results, follow fabric care label directions on specific items to be washed.**

Fabric Type	Temperature (Wash / Rinse)		Wash Cycle	Cycle Setting
<b>REGULAR</b> Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular	15 hot
Lightly Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular	10 warm
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular	5 cold
<b>PERMANENT PRESS</b> White or Heavily Soiled	Warm or Hot	Cold	Perm Press	8 warm or 12 hot
Colored or Lightly Soiled	Cold or Warm	Cold	Perm Press	4 cold or 8 warm
<b>KNITS/DELICATES</b> Knitted Fabrics Delicates	Warm Warm	Cold Cold	Knits & Delicates Knits & Delicates	Start* (8) Start* (8)
Washable Woolens	Warm	Cold	Knits & Delicates	Start* (8)

\*Always set the Knits & Delicates cycle to begin at the START position.