


# OPERATING INSTRUCTIONS

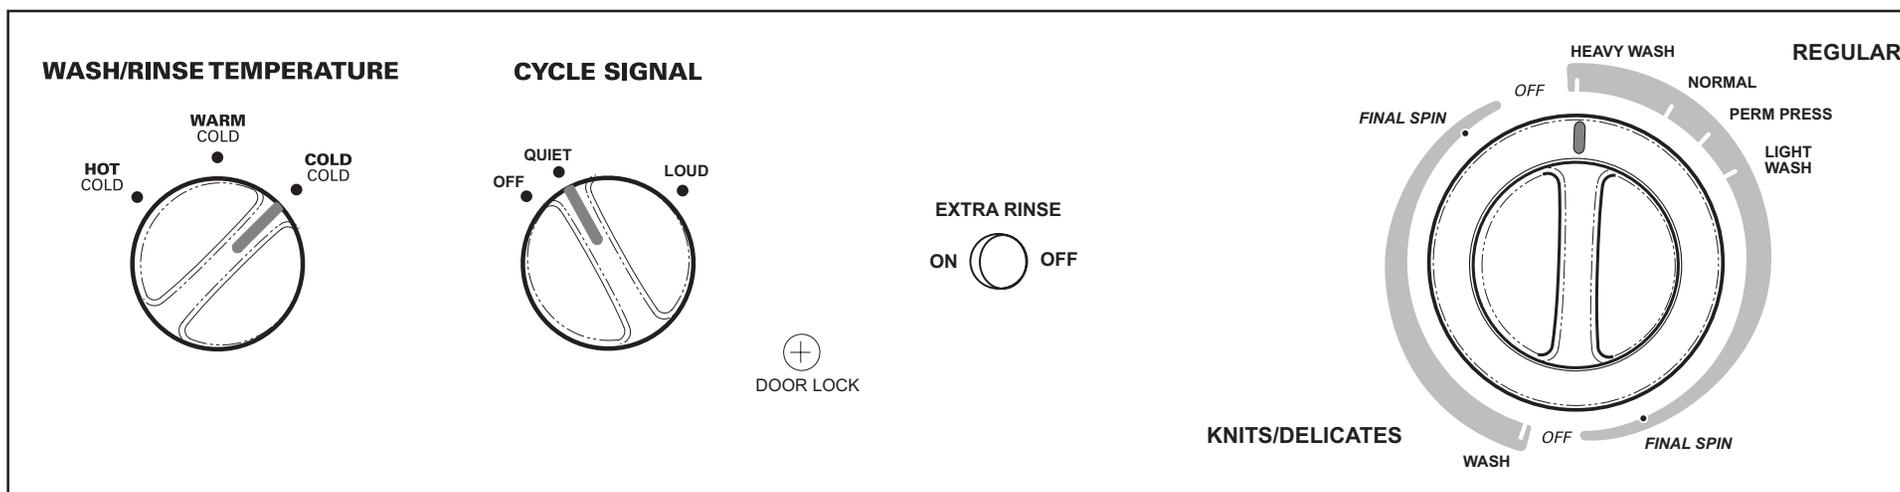

## Before Operating Your Washer

Read your washer **Use and Care Guide**. It has important safety and warranty information. It also has many suggestions for best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Use and Care Guide before operating this appliance.

## Operating Steps

Read and follow **Washing Procedures** in your Use and Care Guide. It provides detailed information for preparing the wash load and choosing control settings to ensure best washing results.

1. **Sort laundry into loads that can be washed together.**


2. **Prepare items for washing.**
3. **Pretreat stains and heavy soil.**
4. **Add laundry load to the wash drum.**
5. **Open the dispenser drawer and add the measured amount of detergent to the detergent compartment.** If desired, add liquid bleach and fabric softener to the appropriate compartments. Slowly close dispenser drawer. The washer will not operate with the drawer open.
6. **Set Temperatures switch according to fabric type and soil level of each load.**
7. **Push in the cycle selector knob and turn it clockwise to the desired wash cycle and setting.**

8. **Start the washer by closing the door and pulling out the cycle selector knob.** The washer will **not** operate with the door open. As a safety measure, the door will automatically lock during the entire wash cycle. When the door is closed, the **Door Lock Indicator** lights up when the washer starts, and turns off at the end of the cycle.

- To stop the washer, push in the cycle selector knob.
- To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting.
- Pull out the knob to restart the washer.

9. **Remove items when cycle ends.** A signal will sound at the end of the cycle when the Cycle Signal **ON** is selected.

**Note:** From time to time you may see water in the bleach and fabric softener compartments. This is a result of the siphoning action and is part of the normal operation of the washer.

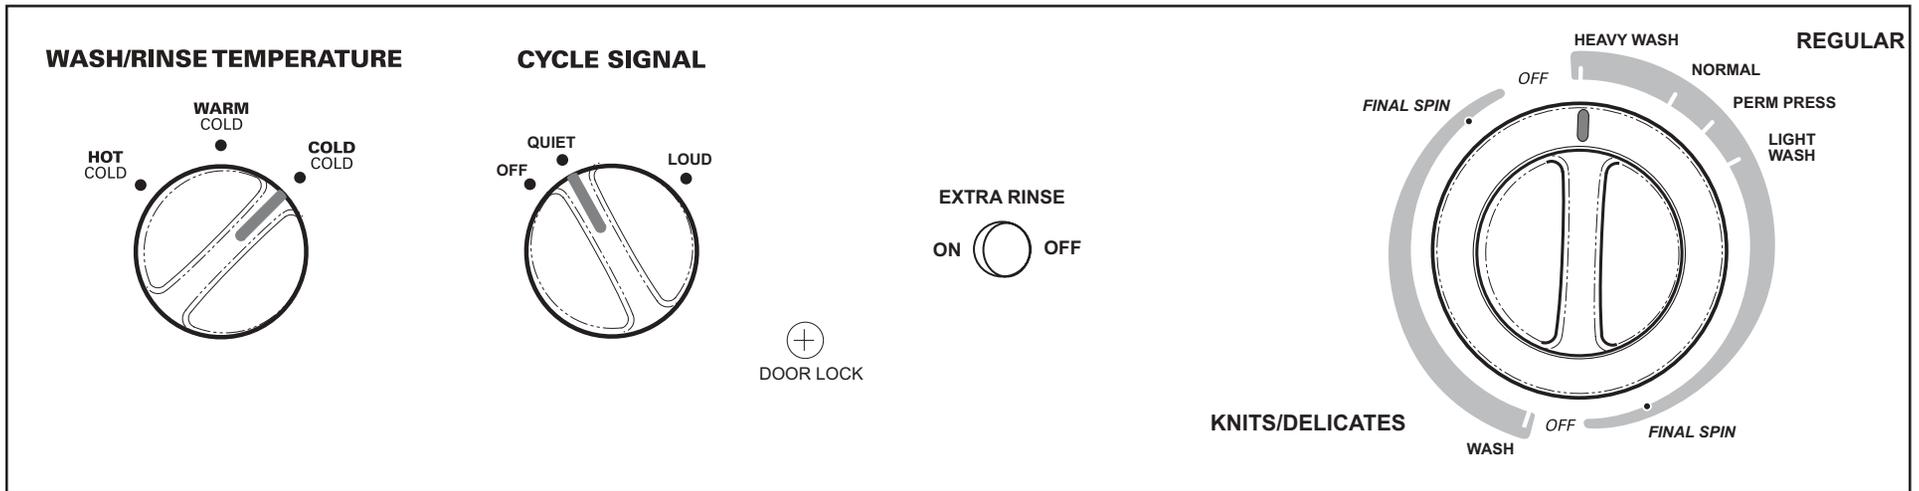

## Cycle Selection

For best results, follow the fabric care label directions on items to be washed.

### Regular Cycle

Up to 17 minutes of reversing tumble action for most fabrics. Three rinses, three spins, a pause and a brief tumble complete the cycle.

- **Heavy Wash** provides up to 17 minutes of reversing tumble action for heavily soiled fabrics.
- **Normal** provides up to 12 minutes of reversing tumble action for normally soiled fabrics.
- **Perm Press** provides up to 9 minutes of reversing tumble action for normally soiled fabrics.
- **Light Wash** provides up to 6 minutes of reversing tumble action for lightly soiled fabrics.

### Knits/Delicates Cycle

Up to 11 minutes of gentle tumble action for the gentle care of knit, delicate and hand washable items. Two rinses and two spins complete the cycle.

## Controls

Always follow instructions on fabric care labels.

**Note:** There is no need to select a water level because the washer automatically adjusts the water level to the type and size of wash load.

**TEMPERATURES** - This determines water temperatures for washing and rinsing. For example, the Warm/Cold setting provides a warm water wash and a cold water final rinse.

**Note:** Detergents are not as effective at wash water temperatures below 65°F (18.3°C).

**CYCLE SIGNAL** - A signal will sound at the end of the cycle. The Cycle Signal is adjustable and can be set at OFF or from QUIET to LOUD.

**Note:** If the signal is turned to the OFF position, it will not sound at the end of the cycle.

The following chart suggests wash/rinse temperatures for basic fabric types.

<u>Fabric Type</u>	<u>Wash/Rinse Temperature</u>
Heavily soiled white/colorfast cotton, perm press	Hot/Cold
Normally soiled white/colorfast cotton, perm press	Warm/Cold
Lightly soiled/noncolorfast fabrics, knits, delicates, hand washables	Cold/Cold
Washable woolens	Warm/Cold

**EXTRA RINSE** - Use Extra Rinse when additional rinsing is desired to remove excess dirt and detergent from heavily soiled loads.

- Select **Extra Rinse ON** to automatically include an extra rinse in Regular or Perm Press cycle.
- Select **Extra Rinse OFF** to conserve water when an extra rinse is not desired.

When the door is closed, the **Door Lock Indicator** lights up when the cycle selector knob is pulled out, and turns off at the end of the cycle.