### PRODUCT MODEL NUMBERS

RCS2002GS	RCS3014GB
RCS2002GW	RCS3014GQ
RCS2012GS	RCS3014GS
RCS2012GW	RCS3014GT
RCS3004GS	RCS3614GB
RCS3004GV	RCS3614GQ
RCS3004GW	RCS3614GS
	RCS3614GT


#### **Electrical:**

**240-volt cooktop:** A three-wire or four-wire, single phase, 240-volt, 60-Hz, AC-only electrical supply is required on a separate, 40-ampere circuit (note: the RCS2012 series requires a 20 ampere circuit), fused on both sides of the line. Use copper wire only. A time-delay fuse or circuit breaker is recommended.

**120-volt cooktop:**120-volt, 60-Hz, AC-only, 20-amp. electrical supply. Use copper wire only. A time-delay fuse or circuit breaker and separate circuit is recommended.

Grommet is required for electrical cable or power supply cord hole cut in a metal cabinet.

# **OVERALL DIMENSIONS**

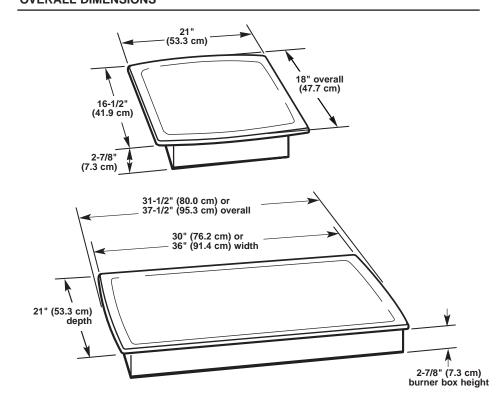

## **CABINET OPENING DIMENSIONS**

Cooktop width	A	<b>3</b>	Θ
21"	18-5/8"	15-1/2"	21"
(53.3 cm)	(33.7 cm)	(34.4 cm)	(53.3 cm)
30"	28-7/8"	18-5/8"	30"
(76.2 cm)	(73.3 cm)	(47.3 cm)	(76.2 cm)
36"	35"	18-5/8"	36"
(91.4 cm)	(89 cm)	(47.3 cm)	(91.4 cm)

### Base cabinet:

21" (53.3 cm) cooktop requires a 24" (61 cm) min. base cabinet.

30" (76.2 cm) and 36" (91.4 cm) cooktops require a 30" (76.2 cm) base cabinet.

If cabinet has a drawer, a 4" (10.2 cm) depth clearance from the countertop to the top of the drawer (or other obstruction) in base cabinet is required.

