



### Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131869800.

Spanish Owner's Guides  
Frigidaire Home Products  
P. O. Box 212378  
Augusta, GA 30917

## Before Operating Your Washer

Read your washer Owner's Guide. It contains important safety and warranty information. It also contains many suggestions for obtaining the best results from your washer.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

## Operating Steps

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to the washer before adding the laundry load.
5. Add the laundry load to the wash tub.
6. Push in the cycle selector knob and turn it clockwise to the desired wash cycle. See **Cycle Selection** for cycle descriptions and the **Control Settings Chart** for suggested cycle settings.
7. Start the washer by closing the lid and pulling out the cycle selector knob. The washer will operate with the lid open; however, the tub will not spin unless the lid is closed.

To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart washer.

8. If desired, add diluted bleach after the tub has filled. DO NOT pour bleach directly onto wash load.
9. If desired, add diluted liquid fabric softener during the final rinse.
10. Remove items when the cycle is completed. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the tub stops spinning.

*(continued, reverse side)*

## Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the **Control Settings Chart** to the right if the care label is not available.

Both settings provide wash agitation as described below, followed by a deep rinse and a final spin.

The **15 warm wash** setting provides 15 minutes of wash agitation. A warm water wash and cold water rinse are provided for normally soiled items.

The **8 cold wash** setting provides 8 minutes of wash agitation. A cold water wash and cold water rinse are provided for lightly soiled items.

## Control Settings Chart

Locate fabric type and read across guide for suggested cycle settings.

**This is only a general guide. For best results, follow label directions on specific items to be washed.**

Fabric Type	Temperature (Wash/Rinse)		Cycle Setting
<b>REGULAR</b> Heavily Soiled Colorfast & White Cotton & Linen	Warm	Cold	15 warm wash
Lightly Soiled Colorfast & White Cotton & Linen	Warm	Cold	15 warm wash
Noncolorfast Bright Colors All Fabrics	Cold	Cold	8 cold wash
<b>PERMANENT PRESS</b> White or Heavily Soiled	Warm	Cold	15 warm wash
Colored or Lightly Soiled	Cold	Cold	8 cold wash
<b>KNITS/DELICATES</b> Knitted Fabrics	Cold	Cold	8 cold wash
Delicates	Cold	Cold	8 cold wash
Washable Woolens	Cold	Cold	8 cold wash