





WASHER OPERATING INSTRUCTIONS FLXE/FLXG52RB

FRIGIDAIRE
HEAVY DUTY

WASH/RINSE TEMPERATURE LOAD SIZE KNITS & DELICATES

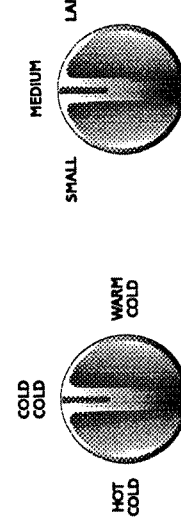


EXTRA LARGE CAPACITY
2 SPEED - 3/4 HP MOTOR

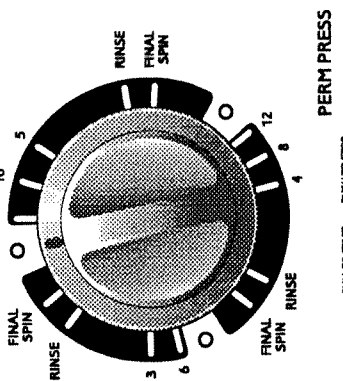

Before Operating Your Laundry Center

Read your laundry center Owner's Guide. It contains important safety and warranty information. It also contains many suggestions for obtaining the best results from your laundry center.

Operating Steps

Read and follow **Washing Procedures** in your Owner's Guide. It provides detailed information for preparing the wash load and choosing control settings to ensure best washing results. **Washing Products** in your Owner's Guide provides detailed information for choosing effective products and using them safely.

- Sort laundry into loads that can be washed together.
- Prepare items for washing.
- Pretreat stains and heavy soil.
- Add the measured amount of detergent to the washer before adding the laundry load.

- If desired, add liquid bleach to the Bleach Dispenser.
- Add the laundry load to the wash tub.
- If desired, add liquid fabric softener to the Fabric Softener Dispenser.
- Set washer controls according to type, size, and soil level of the load.

Wash/Rinse Temperature
Load Size

See **Controls** and the **Control Settings Chart** on the reverse side for more information on suggested water temperatures and water level.

- Push in the cycle selector knob and turn it clockwise to the desired wash cycle. See **Cycle Selection** for cycle descriptions and **Control Settings Chart** for suggested cycle settings.
- Start the washer by closing the lid and pulling out the cycle selector knob. The washer will operate with the lid open; however, the tub will

not spin unless the lid is closed. To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart the washer.

- Remove items when the cycle is completed. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the tub stops spinning.

Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the **Control Settings Chart** on the reverse side if the care label is not available.

The Regular, Perm Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and a final spin.

(continued, reverse side)

Cycle Selection (continued)

Regular Cycle

Up to 15 minutes of normal agitation followed by a fast spin for most fabrics.

Perm Press Cycle

Up to 12 minutes of normal agitation followed by a slow spin for cottons and blends with a no-iron finish.

Knits & Delicates Cycle

Up to 6 minutes of gentle agitation followed by a slow spin for knit and delicate items.

Controls

Select the desired control settings according to load size, fabric type and degree of soiling. See the **Control Settings Chart** at the right or **Washing Procedures** in your laundry center Owner's Guide for detailed information on choosing control settings.

WASH/RINSE TEMPERATURE determines water temperatures for washing and rinsing.

LOAD SIZE determines the amount of wash and rinse water for the wash load.

Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle settings.

This is only a general guide. For best results, follow fabric care label directions on specific items to be washed.

Fabric Type	Temperature (Wash / Rinse)	Wash Cycle	Cycle Setting
REGULAR Heavily Soiled Colorfast & White Cotton & Linen	Hot Cold	Regular	15
Lightly Soiled Colorfast & White Cotton & Linen	Warm Cold	Regular	5 to 10
Noncolorfast Bright Colors All Fabrics	Cold Cold	Regular	5 to 10
PERMANENT PRESS White or Heavily Soiled	Warm or Hot Cold	Perm Press	8 to 12
Colored or Lightly Soiled	Cold or Warm Cold	Perm Press	4 to 8
KNITS/DELICATES Knitted Fabrics Delicates	Cold Cold Cold	Knits & Delicates Knits & Delicates	3 to 6 3 to 6
Washable Woolens	Warm Cold	Knits & Delicates	3 to 6