


# OPERATING INSTRUCTIONS

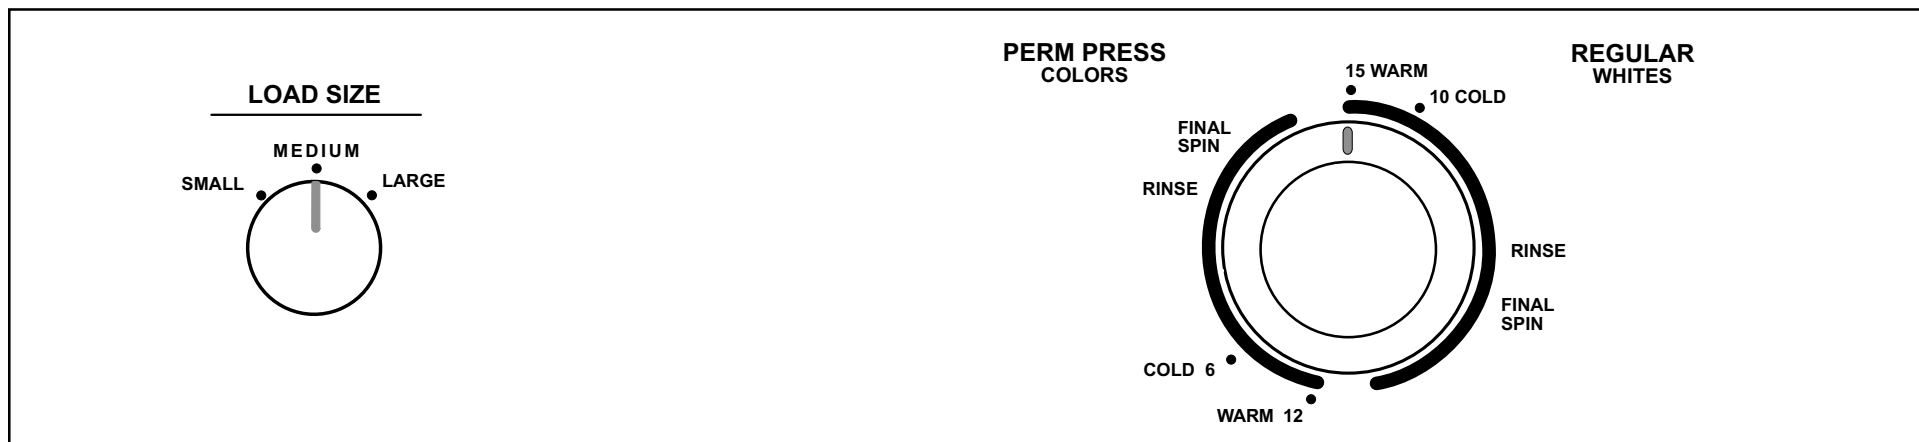

## Before Operating Your Washer

**Read your washer Owner's Guide.** It has important safety and warranty information. It also has many suggestions for best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

## Operating Steps

Read **Washing Procedures** in your Owner's Guide. It explains these operating steps in detail.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.

3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to wash tub.
5. Add laundry load to wash tub.
6. Select the desired load size.
7. Push in the cycle selector knob and turn it clockwise to the desired wash cycle. See **Cycle Selection** for cycle descriptions and the **Control Settings Chart** for suggested cycle settings.
8. Start the washer by closing the lid and pulling out the cycle selector knob. The washer will operate with the lid open; however, the tub will not spin unless the lid is closed.

To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart washer.

9. If desired, add diluted bleach after the tub has filled. DO NOT pour bleach directly onto wash load.
10. If desired, add diluted liquid fabric softener during the final rinse.
11. Remove items when the cycle is completed. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the tub stops spinning.

## Cycle Selection

Always follow instructions on fabric care labels.

The Regular/Whites and Perm Press /Colors cycles provide wash agitation as described below, followed by a deep rinse and a final spin.

### Regular/Whites Cycle

Up to 15 minutes of wash agitation for most fabrics.

#### • 15 Warm Wash

15 minutes of wash agitation. A warm water wash and a cold water rinse are provided for normally soiled items.

#### • 10 Cold Wash

10 minutes of wash agitation. A cold water wash and a cold water rinse are provided for lightly soiled items.

### Perm Press/Colors Cycle

Up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

#### • 12 Warm Wash

12 minutes of wash agitation. A warm water wash and a cold water rinse are provided for normally soiled items.

#### • 6 Cold Wash

6 minutes of wash agitation. A cold water wash and a cold water rinse are provided for lightly soiled items.

## Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle settings.

**This is only a general guide. For best results, follow fabric care label directions on specific items to be washed.**

| Fabric Type  | Temperature<br>(Wash / Rinse) |              | Wash Cycle               | Cycle Setting                   |
|--|-------------------------------|--------------|--------------------------|---------------------------------|
| <b>REGULAR</b><br>Normally Soiled<br>Colorfast & White<br>Cotton & Linen | Warm                          | Cold         | Regular                  | 15 Warm Wash                    |
| Lightly Soiled<br>Colorfast & White<br>Cotton & Linen                    | Warm or<br>Cold               | Cold         | Regular                  | 15 Warm Wash or<br>10 Cold Wash |
| Noncolorfast<br>Bright Colors<br>All Fabrics                             | Cold                          | Cold         | Regular                  | 10 Cold Wash                    |
| <b>PERMANENT PRESS</b><br>White or<br>Normally Soiled                    | Warm                          | Cold         | Perm Press               | 12 Warm Wash                    |
| Colored or<br>Lightly Soiled   | Warm or<br>Cold               | Cold         | Perm Press               | 12 Warm Wash or<br>6 Cold Wash  |
| <b>KNITS/DELICATES</b><br>Knitted Fabrics<br>Delicates                   | Cold<br>Cold                  | Cold<br>Cold | Perm Press<br>Perm Press | 6 Cold Wash<br>6 Cold Wash      |
| Washable Woolens   | Cold                          | Cold         | Perm Press               | 6 Cold Wash                     |