 
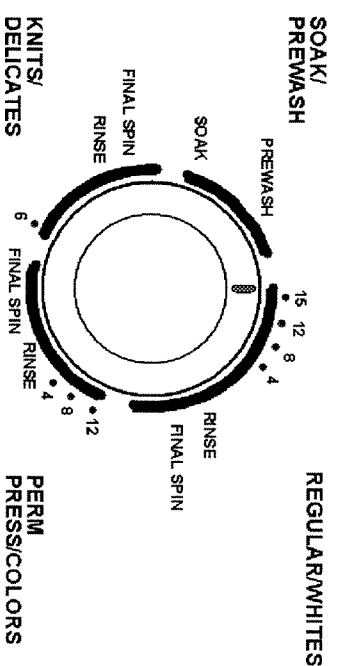 
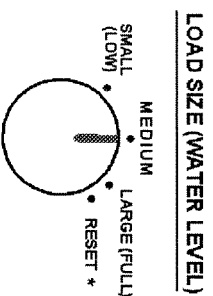 


WASHER OPERATING INSTRUCTIONS

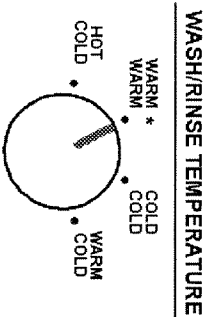

* SOME MODELS

Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir la dirección que se incluye a continuación.
Solicite la P/N 131921400.

Spanish Owner's Guides
Frigidaire Home Products
P. O. Box 212378
Augusta, GA 30917

Before Operating Your Laundry Center

Read your laundry center Owner's Guide. It has important safety and warranty information. It also has many suggestions for obtaining the best washing results.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your laundry center Owner's Guide before operating this appliance.

Operating Steps

- Sort laundry into loads that can be washed together.
- Prepare items for washing.
- Pretreat stains and heavy soil.
- Add the measured amount of detergent to the washer before adding the laundry load.
- If desired, add liquid bleach to the Bleach Dispenser.
- Add the laundry load to the wash tub.
- If desired, add liquid fabric softener to the Fabric Softener Dispenser on some models or during the final rinse.
- Set washer controls according to type, size, and soil level of the load:
 - Wash/Rinse Temperature
 - Load Size/Water Level
- Push in the cycle selector knob and turn it clockwise to the desired wash cycle. See **Cycle Selection** for cycle descriptions and

Control Settings Chart for suggested cycle settings.

- Start the washer by closing the lid and pulling out the cycle selector knob.** The washer will operate with the lid open; however, the tub will not spin unless the lid is closed. To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart the washer.

- Remove items when the cycle is completed.** As a safety measure, the lid will **AUTOMATICALLY LOCK** during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the end of the spin cycle.

Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the **Control Settings Chart** (reverse side) if the care label is not available.

The Regular, Perm Press and Knits / Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and a final spin.

Cycle Selection (continued)

Regular/Whites Cycle

Up to 15 minutes of normal agitation followed by a fast spin for most fabrics.

Perm Press/Colors Cycle

Up to 12 minutes of normal agitation followed by a fast spin for cottons and blends with a no-iron finish.

Knits/Delicates Cycle

Six minutes of gentle agitation followed by a slow spin for knit and delicate items.

Soak/Prewash Cycle

• **Soak** - The Soak setting can be used to treat heavily soiled or stained items. It provides 2 minutes of agitation and 12 minutes of soaking time, then advances to the Prewash portion of the cycle. Use the amount of detergent recommended for a normal wash cycle. For colorfast items, bleach or a soaking agent may also be used. Follow manufacturer's directions on the product label.

• **Prewash** - When soaking is not necessary, the Prewash setting can be used alone to help remove protein-based stains such as milk, grass and blood and to help loosen soils before washing. During Prewash, the washer will agitate the load for 2 minutes, then drain, spin and shut off. Use the amount of detergent and other laundry products recommended for a normal wash cycle.

Note:

• The Soak water temperature is the same as the rinse water temperature selected; the Prewash water temperature is the same as the wash water temperature selected. To avoid setting protein stains, select cold water.

• These cycle settings should always be followed by a complete wash cycle using the recommended amount of detergent.

Controls

Select the desired control settings according to load size, fabric type and degree of soiling. See **Control Settings Chart** below for detailed information on choosing control settings.

WASH/RINSE TEMPERATURE determines water temperatures for washing and rinsing.

LOAD SIZE/WATER LEVEL determines the amount of wash and rinse water used for the wash load. To increase the water level after the wash cycle begins, turn the Load Size control to "Reset" and hold. When water begins to enter the tub, turn the control to the desired setting.

Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle setting.

This is only a general guide. For best results, follow label directions on specific items to be washed.

Fabric Type	Temperature (Wash / Rinse)		Wash Cycle	Cycle Setting
REGULAR/WHITES Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular	15
Lightly Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular	8 to 12
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular	4 to 8
PERM PRESS/COLORS White or Heavily Soiled	Hot or Warm	Cold	Perm Press	8 to 12
Colored or Lightly Soiled	Warm or Cold	Cold	Perm Press	4 to 8
KNITS/DELICATES Knitted Fabrics Delicates	Cold Cold	Cold Cold	Knits/Delicates Knits/Delicates	6 6
Washable Woolens	Warm	Warm or Cold	Knits/Delicates	6

DRYER OPERATING INSTRUCTIONS

AUTOMATIC DRY

COOL DOWN

LESS DRY

NORMAL

MORE DRY

COOL DOWN

20

30

40

50

60

70

80

90

100

TIMED DRY

START

KNITS/DELICATES
LOW HEAT

WHITES/
REGULAR
HIGH HEAT

TEMPERATURE

Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación.
Solicite la P/N 131921500.

Spanish Owner's Guides
Frigidaire Home Products
P. O. Box 212378
Augusta, GA 30917

Before Operating Your Laundry Center

Center

Read your laundry center Owner's Guide. It has important safety and warranty information. It also has many suggestions for obtaining the best drying results.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your laundry center Owner's Guide before operating this appliance.

Operating Steps

1. **Prepare items for drying.**
2. **Check that lint screen is clean and in place.**
3. **Load the dryer.** If desired, add a dryer fabric softener sheet.

4. **Close the dryer door.**
5. **Set Temperature control.**
6. **Turn cycle selector clockwise to desired setting.**
7. **Start dryer.** Push the Push to Start button for 2 seconds, or turn Turn to Start knob to ON, hold for 2 seconds and release.
8. **A signal will sound when the cycle ends.**
9. **Remove items immediately and hang or fold.**
10. **Clean lint screen after every load.**

Temperature Selection

Always follow directions on fabric care labels.

The **REGULAR-HIGH HEAT**, **PERM PRESS-MEDIUM HEAT**, and **DELICATE-LOW HEAT** temperature settings may be used with any cycle setting. The **AIR FLUFF-NO HEAT** setting can be used only in the Time Dry cycle.

AIR FLUFF-NO HEAT setting tumbles the load without heat. Use Air Fluff to freshen clothing, pillows or blankets, or to dust draperies.

⚠ WARNING To avoid fire hazard, do not use heat to dry items containing feathers or down, foam rubber, plastics, or similarly textured, rubber-like materials. Use the Air Fluff-No Heat setting only.

Cycle Selection

Turn cycle selector clockwise to desired cycle and setting.

Each cycle ends with a cool down period. The heat automatically turns off and the load continues to tumble for 5-10 minutes. This reduces wrinkling and makes items easier to handle during unloading.

Drying time varies depending on size and dampness of load, weight and fabric type. Room temperature and humidity, type of installation and electrical voltage or gas pressure can also affect drying time.

Auto Dry Cycle

This cycle is best for regular and permanent press items that can be tumble dried.

 
 
Drying time is determined automatically at the temperature selection of your choice. This cycle is best for items of similar fabric, weight and construction.

- For items requiring more drying time, set cycle selector on **MORE DRY**.
- For items requiring less drying time, set cycle selector on **LESS DRY**.

Time Dry Cycle

This cycle provides up to 100 minutes of drying time at the temperature selection of your choice.

P/N 131921500 (9912)

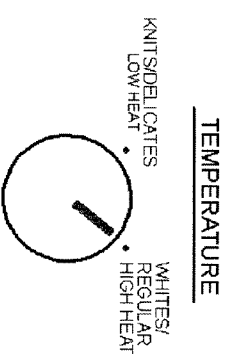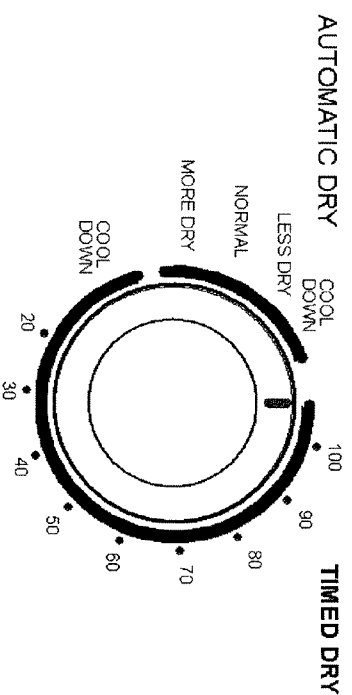

General Drying Guide

This is only a general guide. For best results, follow label directions on specific items to be dried.

Fabric Type	Select Cycle	Temperatures
Mixed Cottons and Linens	Timed Dry	Regular High Heat
Permanent Press	Auto Dry	Perm Press Medium Heat
Knits, Delicates, All Synthetics	Auto Dry	Knits/Delicates Low Heat
Plastic, Rubber Items, Dewrinkling and Air Out	Timed Dry	Air Fluff No Heat

Energy Saving Tips

- Keep the lint screen clean and exhaust the dryer correctly.
- Sort laundry properly and select proper temperature and cycle settings. Choose an automatic dry cycle whenever possible for accurate drying time.
- Dry only full loads. Single items and small loads usually take longer to dry.
- Avoid overloading, adding wet items to a partially dry load, and overdrying.
- Dry one load after another to take advantage of a warm dryer.
- Opening the door needlessly causes warm air to escape, which prolongs drying time.
- If possible, use the dryer on low humidity days.
- Install the dryer in an area where the room temperature is at least 45°F (7°C).