



Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131722300.

Spanish Owner's Guides
 Frigidaire Company
 P. O. Box 9061
 Dublin, Ohio 43017-0961

Before Operating Your Washer

Read your washer Owner's Guide. It contains important safety and warranty information. It also contains many suggestions for obtaining the best results from your washer.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

Operating Steps

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to the washer before adding the laundry load.
5. Add the laundry load to the wash tub.
6. If desired, add liquid fabric softener to the Fabric Softener Dispenser.
7. Set Load Size control according to type, size, and soil level of each load.
8. Push in the cycle selector knob and turn it clockwise to the desired wash cycle. See **Cycle Selection** for cycle descriptions and the **Control Settings Chart** (reverse side) for suggested cycle settings.
9. Start the washer by closing the lid and pulling out the cycle selector knob. The washer will operate with the lid open; however, the tub will not spin unless the lid is closed.

To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart washer.

10. If desired, add diluted bleach after the tub has filled and the load has agitated a few minutes. DO NOT pour bleach directly onto wash load.
11. Remove items when the cycle is completed. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the tub stops spinning.

Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the **Control Settings Chart** (reverse side) if the care label is not available.

(continued, reverse side)

Cycle Selection (continued)

The Regular, Perm Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and a final spin.

Regular Cycle

Up to 15 minutes of wash agitation for most fabrics.

•15 Hot Wash

15 minutes of wash agitation. A hot water wash and a cold water rinse are provided for heavily to normally soiled items.

•5 Cold Wash

5 minutes of wash agitation. A cold water wash and a cold water rinse are provided for lightly soiled items.

Perm Press Cycle

Up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

• 12 Hot Wash

12 minutes of wash agitation. A hot water wash and a cold water rinse are provided for heavily soiled permanent press items.

• 8 Warm Wash

8 minutes of wash agitation. A warm water wash and a cold water rinse are provided for normally soiled items.

• 4 Cold Wash

4 minutes of wash agitation. A cold water wash and a cold water rinse are provided for lightly soiled items.

Knits & Delicates Cycle

8 minutes of wash/pause agitation. A warm water wash and cold water rinse are provided for knit and delicate items.

Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle settings.

This is only a general guide. For best results, follow fabric care label directions on specific items to be washed.

Fabric Type	Temperature (Wash / Rinse)		Wash Cycle	Cycle Setting
REGULAR				
Heavily to Normally Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular	15 Hot Wash
Lightly Soiled Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular	5 Cold Wash
PERMANENT PRESS				
White or Heavily Soiled	Warm or Hot	Cold	Perm Press	8 Warm Wash or 12 Hot Wash
Colored or Lightly Soiled	Cold or Warm	Cold	Perm Press	4 Cold Wash or 8 Warm Wash
KNITS/DELICATES				
Knitted Fabrics	Warm	Cold	Knits & Delicates	Start* (8)
Delicates	Warm	Cold	Knits & Delicates	Start* (8)
Washable Woolens	Warm	Cold	Knits & Delicates	Start* (8)

***Always set the Delicates cycle to begin at the START position.**