


Exploded View of Wash System

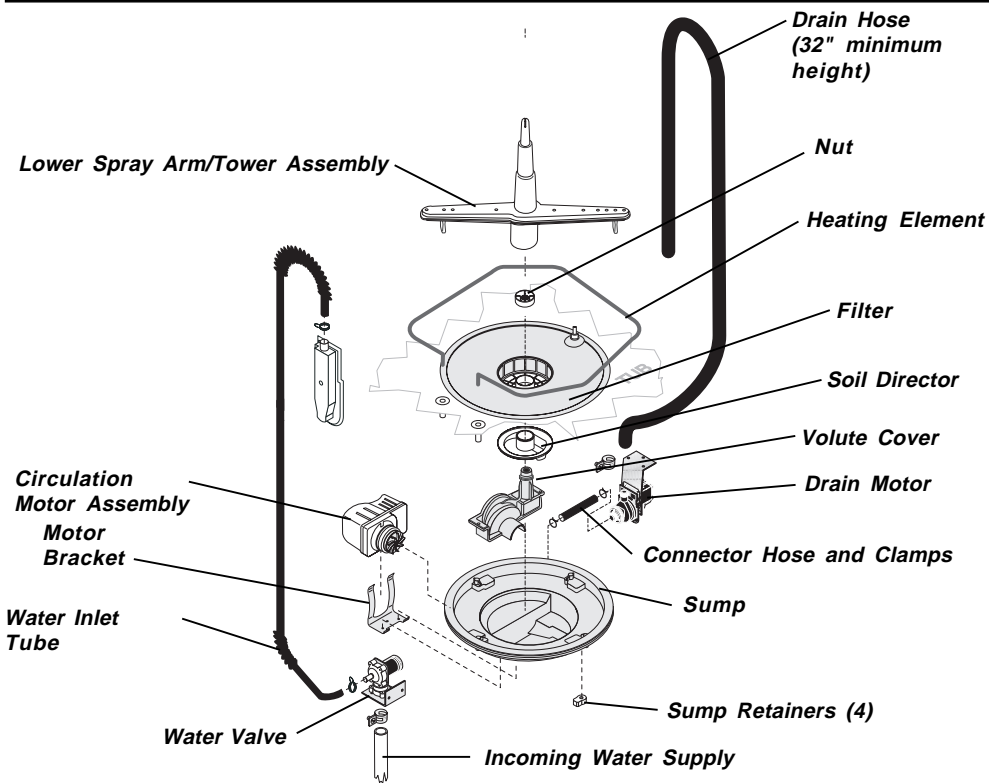

Pump Assembly

The pump assembly is driven by a synchronous motor. Rotation is in the counterclockwise direction at 3600 RPM. The motor drives a pump which supplies 100 percent filtered water at a rate to approximately 12 GPM.

Draining is accomplished by using a small separate synchronous drain pump mounted to the side of the sump. The drain pump is connected to the main pump by a small rubber hose. The drain check valve is located at the discharge end of the drain pump. The drain hose is attached by a worm gear clamp to the discharge end of the drain pump.

900 Watt Heater

Refer to the cycle chart on the reverse side to determine when the heater is on during the wash cycle.


The drain hose must have a loop at a **minimum height of 32 inches** in order to insure proper drainage.

The main pump can easily be removed by disconnecting the drain pump connector hose and the wiring harness connections made at the circulation motor and rotating the four sump retainers toward the middle of the sump.

Voltage checks of the heater should be made with the timer set in the main wash.

Tube and Door Seal

The door seal is pressed into the tub channel for an interference fit. Center the gasket (marked on back) at the tub top center and press in place without stretching or bunching. The gasket takes a short turn at the bottom of the tub channel before ending at the channel end wall.

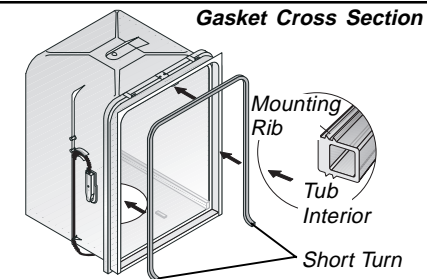

Product Specifications

Electrical

Rating	120 Volts, 60Hz
Separate Circuit	15 amp min.- 20 amp max.
Motor (Amps)	1.1
Heater Wattage	900
Total Amps (load rated)	10.0

Water Supply

Minimum incoming water temperature	120°F (49°C)
Pressure (PSI) min./max.	20/120
Connection (NPT)	3/8"
Consumption (Normal Cycle)	7.2 gal., 6.0 imp. gal., 27.3 liters

Trouble Shooting Tips

⚠ WARNING



Electric Shock Hazard

Disconnect electrical power at the fuse box or circuit breaker box before adjusting or replacing components. Failure to follow this warning could result in death or serious injury.

Check the list below each symptom. Repair or replace defective components as encountered.

Symptom. . .Dishwasher will not operate when turned on (wait at least 90 seconds).

1. Fuse (blown or tripped).
2. 120 VAC supply wiring connection faulty.
3. Timer (contacts open or defective)
4. Motor (inoperative).
5. Door switch (open contacts).
6. Door latch not making contact with door switch.
7. Selector switch (open contacts).

Symptom. . .Motor hums but will not start or run.

1. Motor (bad bearings or locked rotor).
2. Motor stuck due to prolonged non-use.

Symptom. . .Motor trips out on internal thermal overload protector.

1. Improper voltage.
2. Motor shaft binding.
3. Motor windings shorted.
4. Glass or foreign items in pump.

Symptom. . .Dishwasher runs but will not heat.

1. Heater element (open).
2. Timer defective.
3. Wiring or terminal defective.

Symptom. . .Dishwasher will not pump out.

1. Drain restricted.
2. Timer contact defective.
3. Defective drain pump.
4. Air lock in drain hose.
5. Blocked impeller.
6. Open windings.

Symptom. . .Dishwasher will not fill with water.

1. Water supply turned off.
2. Defective water inlet fill valve.
3. Check fill valve screen for obstructions.
4. Defective float switch.
5. Timer contact defective.
6. Wiring defective.
7. Float stuck in "UP" position.

Symptom. . .Timer does not advance.

1. Timer motor (stalled or open.)
2. Check timer for power to timer motor.
3. Timer shaft binding to or knob interference with escutcheon.

Symptom. . .Dishwasher water siphons out.

1. Drain hose (high) loop too low--must be a minimum height of 32 inches.
2. Drain line connected to a floor drain not vented. (Install air gap at counter top.)

SERVICE DATA SHEET

P/N: 154414801


Models: Tower Wash Series

This information is intended for use by persons having electrical and mechanical training and a level of knowledge of these subjects generally considered acceptable in the appliance repair trade. Electrolux Home Products North America cannot be responsible, nor assume any liability, for injury or damage of any kind arising from the use of this Service Data Sheet.

Color Code

BK..... Black R.....Red
 BU.....Blue VIO.....Violet
 BU-O..... Blue/Orange W.....White
 O.....Orange R-Y.....Red/Yellow
 PK.....Pink

Timer Block

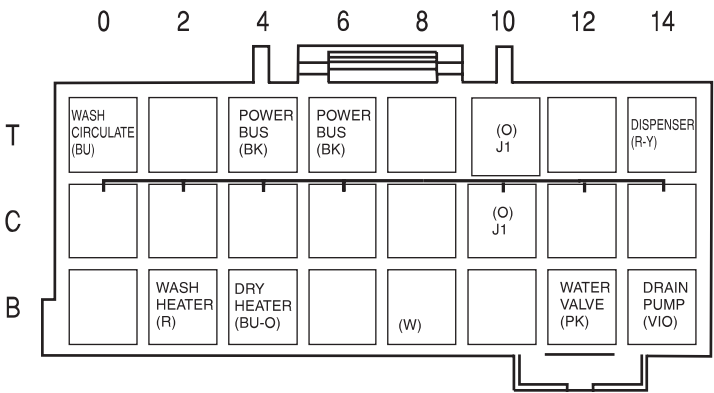

Cycle Chart

		OFF	RINSE & HOLD OFF	PLATE WARMER	DRY	LIGHT WASH	NORMAL WASH	POTS & PANS	OFF
	DETTENT								
BU	0T	WASH MOTOR							
VIO	14B	DRAIN MOTOR							
PK	12B	FILL VALVE							
R	2B	HEATER WASH							
BU-O	4B	HEATER DRY							
R-Y	14T	DISPENSER							
O	10C	TIMER MOTOR							
BK	6T	PWR BUSS							
		TIME IN MINUTES	10	8	200	5	200	2	100
		INTERVAL DURATION SECONDS	102	100	99	100	97	200	94
			91	200	87	200	84	100	82
			80	200	79	200	76	100	74
			74	98	72	100	71	100	69
			67	88	66	92	64	3	64
			61	100	62	100	62	97	64
			59	100	57	100	56	88	54
			53	97	53	300	46	300	41
			36	100	36	100	34	88	33
			31	8	31	8	31	97	30
			28	100	28	100	26	100	25
			22	8	22	8	21	97	21
			13	8	13	100	12	100	10
			8	92	8	92	7	100	7
			5	100	5	100	3	88	3
			2	95	2	95			

Wiring Diagram

