


OPERATING INSTRUCTIONS

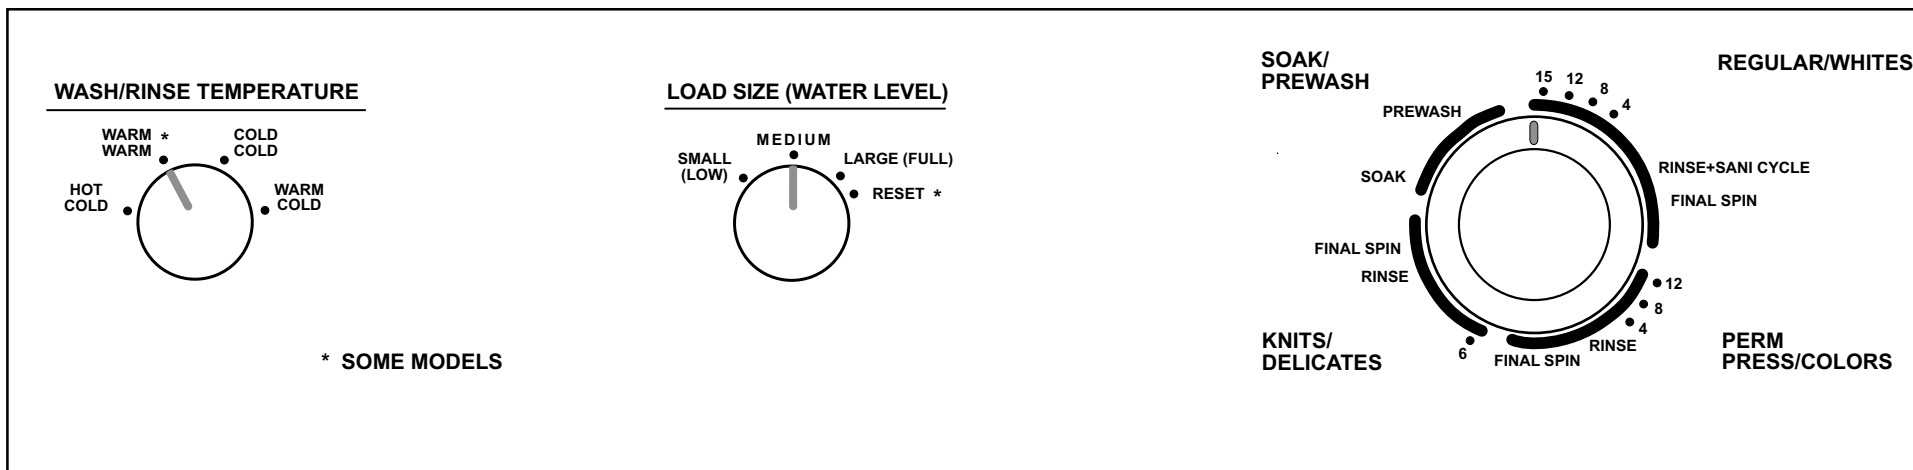

Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131934700.

Spanish Owner's Guides
Frigidaire Company
P.O. Box 212378
Augusta, Georgia 30917

Before Operating Your Washer

Read your washer Owner's Guide. It has important safety and warranty information. It also has many suggestions for best washing results.

⚠ WARNING To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

Operating Steps

Read Washing Procedures in your Owner's Guide. It explains these operating steps in detail.

Printed in U.S.A.

- Sort laundry into loads that can be washed together.
- Prepare items for washing.
- Pretreat stains and heavy soil.
- Add the measured amount of detergent to wash tub before adding the laundry load.
- If desired, add diluted liquid bleach to Bleach Dispenser.
- Add laundry load to wash tub.
- If desired, add liquid fabric softener to the Fabric Softener Dispenser on some models, or during the final rinse.
- Set cycle selector and washer controls according to type, size, and soil level of each load. Push in the cycle selector knob to the desired wash cycle. See **Cycle Selection** for cycle descriptions and **Control Setting Chart** for suggested cycle settings.

- Close lid and pull cycle selector knob to start washer. The washer will operate with the lid open; however the tub will not spin unless the lid is closed. To stop the washer, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart the washer.

- Remove items at end of cycle. As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the end of the spin cycle.

Cycle Selection

Always follow instructions on fabric care labels. Check the **Control Settings Chart** (reverse side) if the care label is not available.

The Regular, Perm Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and final spin.

Regular Cycle

Provides up to 15 minutes of wash agitation for most fabrics.

(continued, reverse side)

P/N 131934600 (0001)

Cycle Selection (continued)

SANI CYCLE

Provides a rinse and spin to clean the **empty** wash tub after washing an especially soiled load.

- Pour 1-1/2 cups (350 ml) liquid chlorine bleach into bleach dispenser. Then add 1 cup (240 ml) water to flush the dispenser.
- Turn Load Size control to Large.
- Turn Wash/Rinse Temperature to Warm/Warm (some models) or Cold/Cold.

Select SANI CYCLE by pushing in cycle selector knob and turning it clockwise to RINSE • SANI CYCLE. Pull out knob to start.

Perm Press Cycle

Provides up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

Knits & Delicates Cycle

Provides up to 6 minutes of wash agitation for the gentle care of knit and delicate items.

Soak & Prewash Cycle

- **Soak** — The Soak setting can be used to treat heavily soiled or stained items. It provides 2 minutes of agitation and 12 minutes of soaking time, then advances to the Prewash portion of the cycle. Use the amount of detergent recommended for a normal wash cycle. For colorfast items, bleach or a soaking agent may also be used. Follow manufacturer's directions on the product label.
- **Prewash** — When soaking is not necessary, the Prewash setting can be used alone to help remove protein-based stains such as milk, grass and blood and to help loosen soils before washing. During Prewash, the washer will agitate the load for 2 minutes, then drain, spin and shut off. Use the amount of detergent and other laundry products recommended for a normal wash cycle.

Note:

- The Soak water temperature is the same as the rinse water temperature selected; the Prewash water temperature is the same as the wash water temperature selected. To avoid setting protein stains, select cold water.
- Soak and Prewash should always be followed by a complete wash cycle using the recommended amount of detergent.

Controls

Always follow instructions on fabric care labels.

WASH/RINSE TEMPERATURE determines water temperatures for washing and rinsing.

LOAD SIZE(WATER LEVEL) determines the amount of wash and rinse water used for the wash load. To increase the water level after the wash cycle begins, turn the Load Size control to "Reset" and hold. When water begins to enter the tub, turn the control to the desired setting.

Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and time setting. **This is only a general guide. For best results, follow label directions on specific items to be washed.**

Fabric Type	Temperature (Wash/Rinse)		Wash Cycle and Setting
REGULAR Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular - 15
Lightly Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular - 8 to 12
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular - 4 to 8
PERMANENT PRESS White or Heavily Soiled	Hot or Warm	Cold	Perm Press - 8 to 12
Colored or Lightly Soiled	Warm or Cold	Cold	Perm Press - 4 to 8
KNITS/DELICATES Knitted Fabrics Delicates	Cold Cold	Cold Cold	Knits & Delicates - 6 Knits & Delicates - 6
Washable Woolens	Warm	Warm	Knits & Delicates - 6