

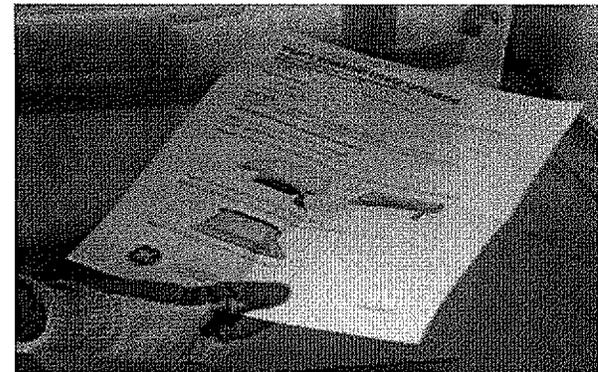
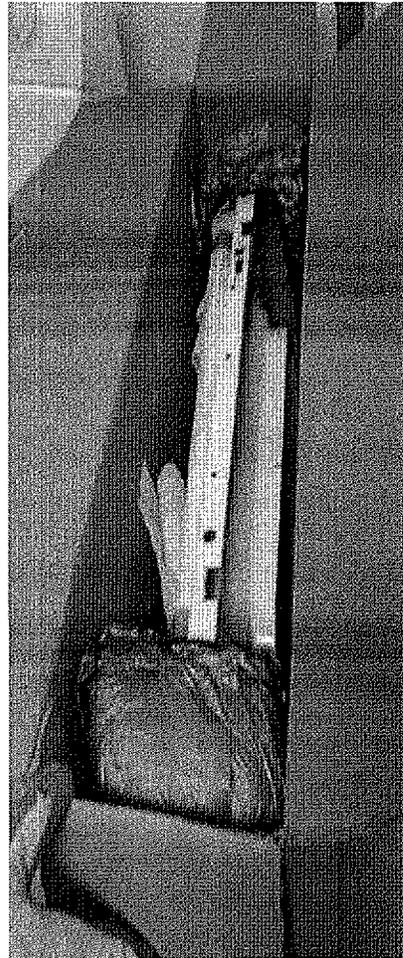
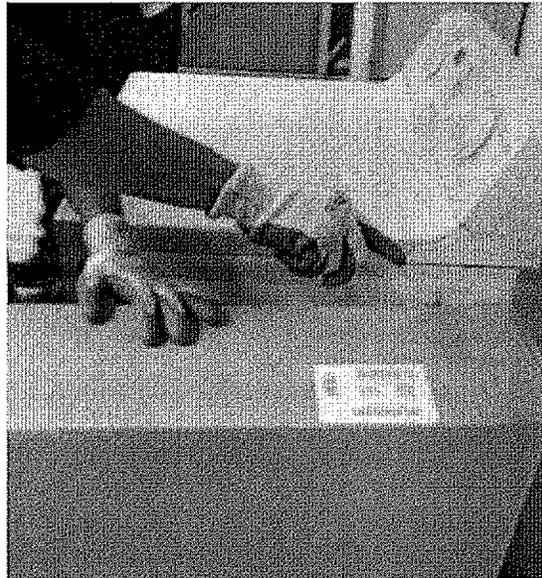
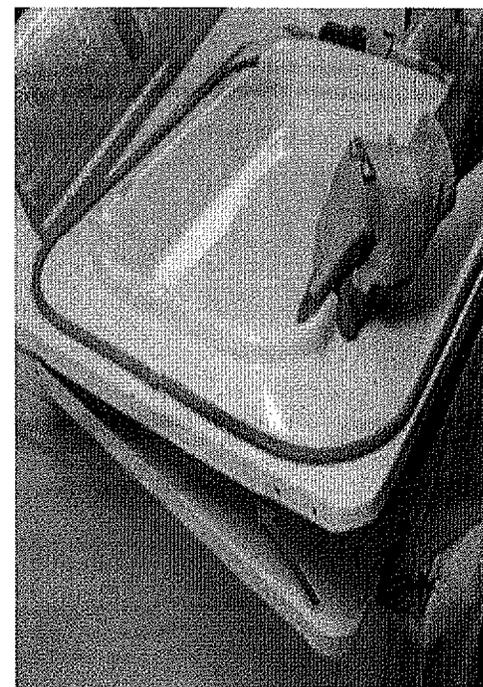


Unpacking "Front panel & Inner Door" Kit.

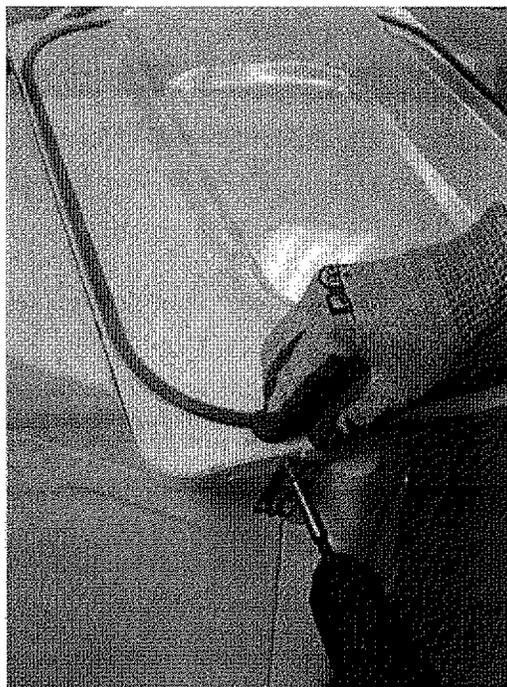


① **Step 1** Remove electrical power from the dryer

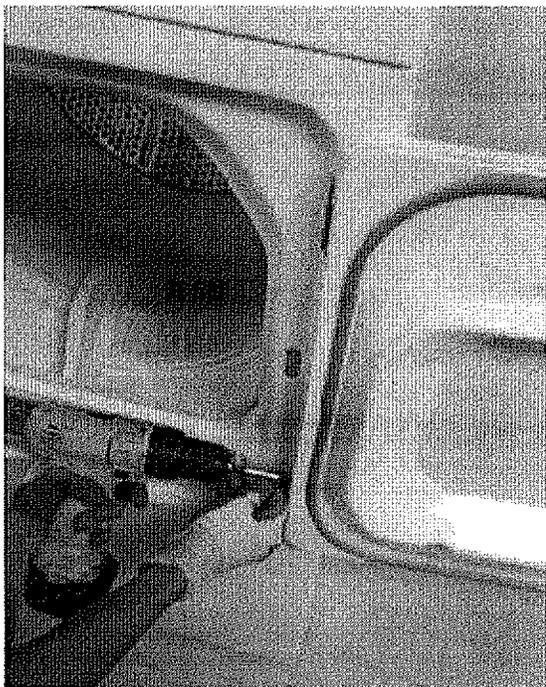




② **Step 2** Remove the door assembly from the front panel.

③ **Step 3** Remove the hinges and screw that mount the inner door panel to the outer door panel




④ **Step 4** Remove the inner door panel from the outer panel.

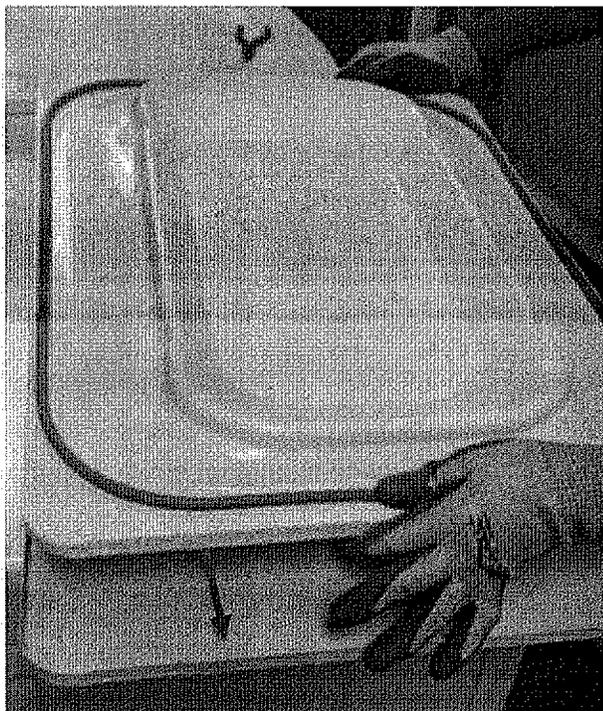


- ✔ **Step 5** Install the inner door panel from the kit into the original outer door panel.

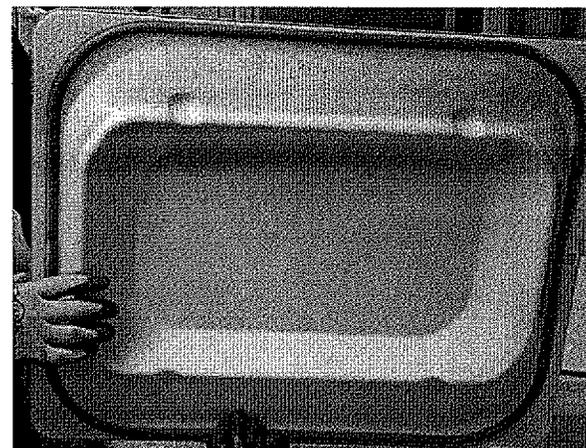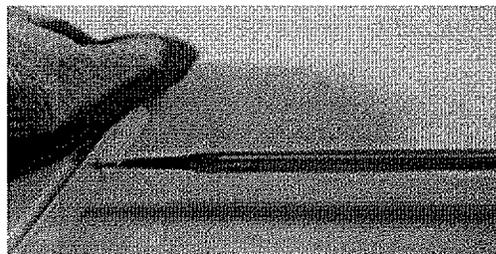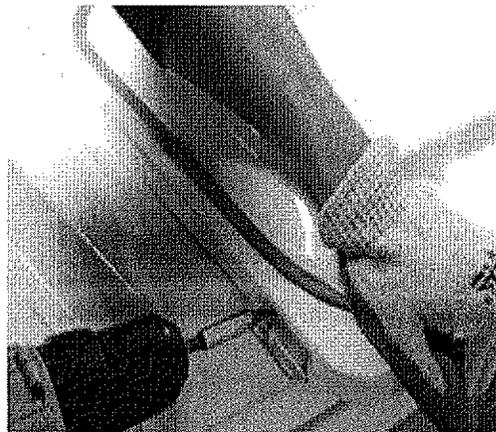


- ✔ **Step 6** Reinstall the hinges and screws to the door panel.

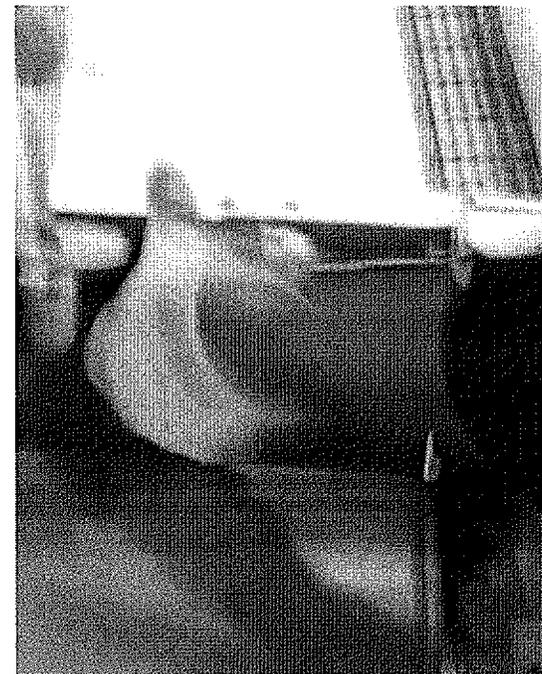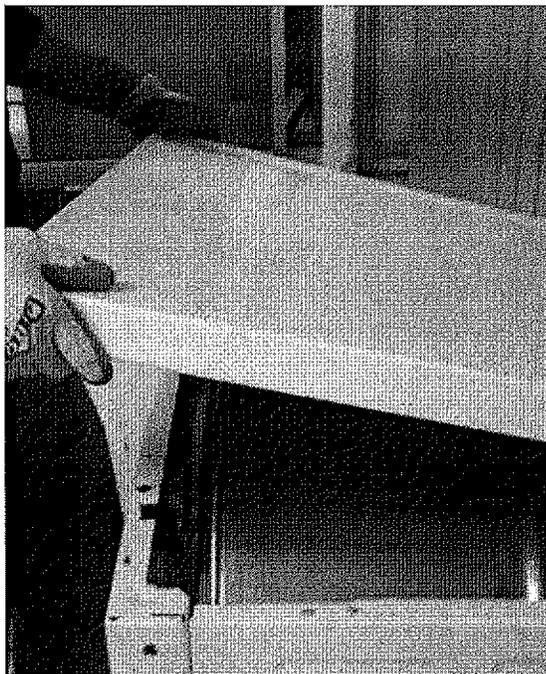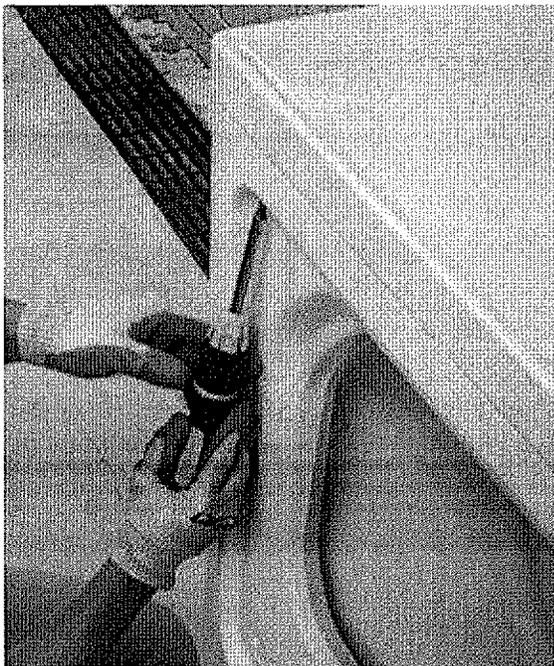

- ✔ **Step 7** Remove the top cover by removing the 2 Philips head screws that secure it to the front panel.
- ✔ **Step 8** Remove the 2 screws on the side of the front panel. And the lift the front panel up and out from the apron and drum assembly

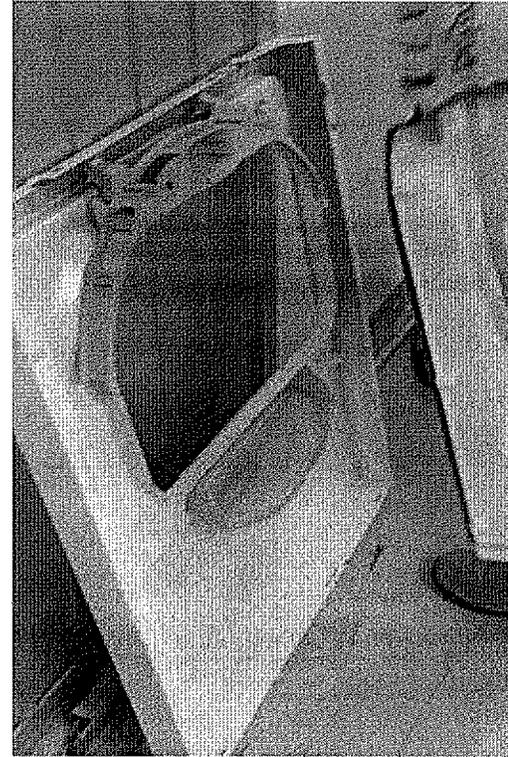

Step 9 Remove the trap duct and the top bearing assembly from the front panel and reinstall it onto the front panel from the kit.

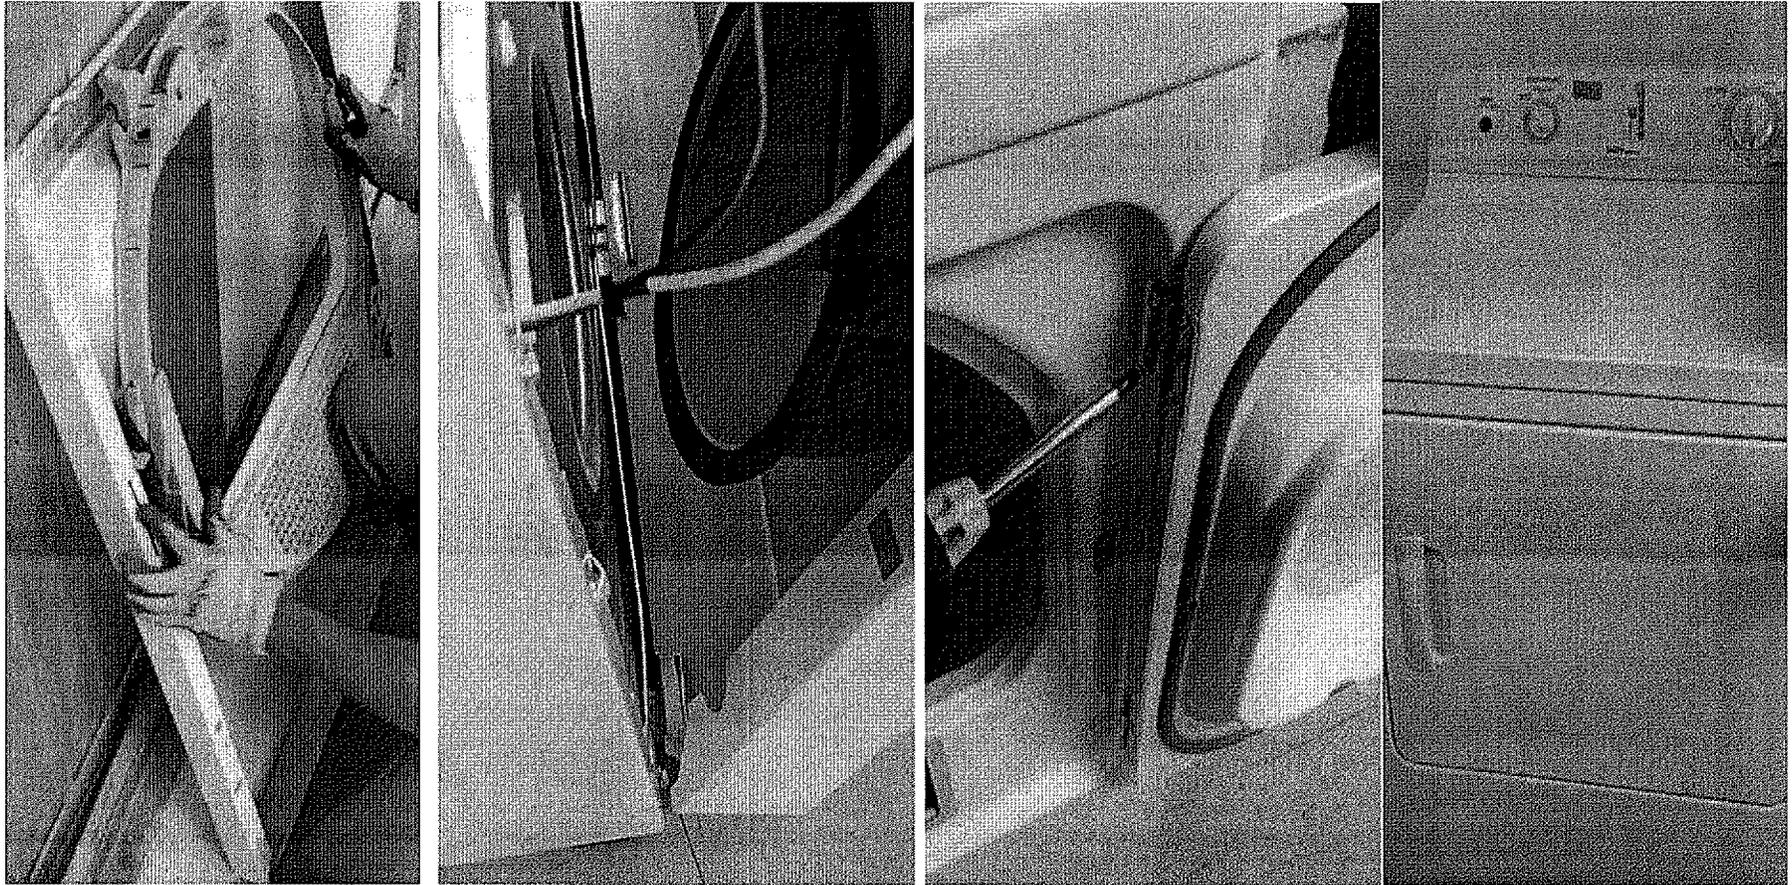

- ✔ Step 10 Reinstall the front panel and top cover to the apron.
- ✔ Step 11 Reapply power and test the Dryer operation.