



LOAD SIZE

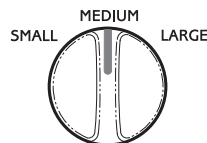

FRIGIDAIRE  
HEAVY DUTY WASHER

EXTRA LARGE CAPACITY - 2 SPEED - 5 CYCLES

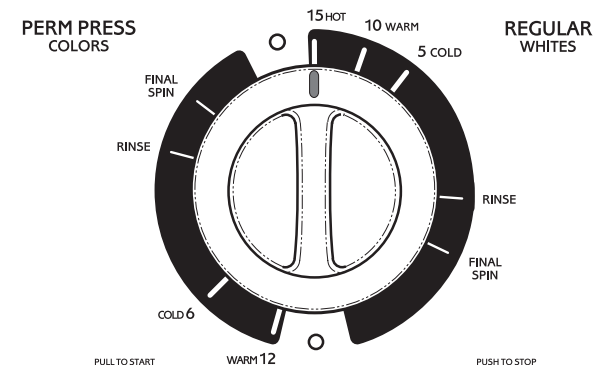

### Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131889200.

Spanish Owner's Guides  
Frigidaire Home Products  
P. O. Box 212378  
Augusta, GA 30917

## Before Operating Your Washer

**Read your washer Owner's Guide.** It contains important safety and warranty information. It also contains many suggestions for obtaining the best results from your washer.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in your washer Owner's Guide before operating this appliance.

## Operating Steps

1. **Sort laundry into loads that can be washed together.**
2. **Prepare items for washing.**
3. **Pretreat stains and heavy soil.**
4. **Add the measured amount of detergent to washer before adding laundry load.**
5. **Add laundry load to wash tub.**
6. **Set Load Size control according to type, size, and soil level of each load.** There should be enough water for items to move freely.
7. **Push in cycle selector knob and turn it clockwise to desired wash cycle.** See **Cycle Selection** for cycle descriptions and the **Control Settings Chart** for suggested cycle settings.
8. **Start washer by closing the lid and pulling out the cycle selector knob.** The washer will operate with the lid open; however, the tub will not spin unless the lid is closed.

To stop the washer, push in the cycle selector knob. To change a cycle, push in the cycle selector knob and turn it clockwise to the desired setting. Pull out the knob to restart washer.

9. **If desired, add diluted bleach after the tub has filled and the load has agitated a few minutes.** DO NOT pour bleach directly onto wash load.
10. **If desired, add diluted liquid fabric softener during the final rinse.**
11. **Remove items when the cycle is completed.** As a safety measure, the lid will AUTOMATICALLY LOCK during the spin portion of each cycle. The lid will automatically unlock approximately 1 minute after the tub stops spinning.

*(continued, reverse side)*

## Cycle Selection

For best results, follow the fabric care label directions on items to be washed. Check the **Control Settings Chart** if the care label is not available.

### Regular Whites Cycle

The Whites cycle provides up to 15 minutes of normal wash agitation for most fabrics. This is followed by a spray rinse, a deep rinse, and a fast final spin.

- **15 Hot** 15 minutes of wash agitation. A hot water wash and a cold water rinse are provided for heavily soiled items.
- **10 Warm** 10 minutes of wash agitation. A warm water wash and a cold water rinse are provided for normally soiled items.
- **5 Cold** 5 minutes of wash agitation. A cold water wash and a cold water rinse are provided for lightly soiled items.

### Perm Press Colors Cycle

The Colors cycle provides up to 12 minutes of gentle wash agitation for permanent press, knit and delicate items. This is followed by a spray rinse, a deep rinse, and a slow final spin.

- **12 Warm** 12 minutes of wash agitation. A warm water wash and a cold water rinse are provided for normally soiled items.
- **6 Cold** 6 minutes of wash agitation. A cold water wash and a cold water rinse are provided for lightly soiled items.

## Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and cycle settings.

**This is only a general guide. For best results, follow fabric care label directions on specific items to be washed.**

Fabric Type	Temperature (Wash / Rinse)		Wash Cycle	Cycle Setting
<b>REGULAR</b>				
Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular Whites	15 Hot
Normally Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular Whites	10 Warm
Lightly Soiled Noncolorfast Bright Colors	Cold	Cold	Regular Whites	5 Cold
<b>PERMANENT PRESS</b>				
White or Normally Soiled	Warm	Cold	Perm Press Colors	12 Warm
Colored or Lightly Soiled	Cold	Cold	Perm Press Colors	6 Cold
<b>KNITS/DELICATES</b>				
Knitted Fabrics	Cold	Cold	Perm Press Colors	6 Cold
Delicates	Cold	Cold	Perm Press Colors	6 Cold
Washable Woolens	Cold	Cold	Perm Press Colors	6 Cold