

COOKTOP

ELEMENT SIZE INDICATORS

Some cooktop zone positions have up to 3 element sizes. You may use the single inner heating ring only or add 1 or 2 more rings with each press of the BURNER SIZE.

Number of circles = number of heating rings available.

- 1 circle = single element
- 2 circles = double element (some positions)
- 3 circles = triple element (left front position) (some positions)

SETTING the COOKTOP


- If needed, wake the control panel.
- Touch the ON OFF key for desired heating zone.
- If heating zone has more than 1 ring size available, press and continue to press the BURNER SIZE for desired element size.
- Press the desired power level key (hi+, med, or lo-) or for more precise level settings use the hi+ or lo- keys to make specific level changes.

SETTINGS for COOKTOP ZONES


| | |
|--------------|--|
| HI (8-Hi) | Start foods, bring water to boil, pan broiling |
| MED HI (5-8) | Continue rapid boil fry |
| MED (3-5) | Maintain slow boil, thicken sauces, steam vegetables |
| MED LO (2-3) | Keep foods cooking, poach, stew |
| LO (Lo-2) | Keep warm, melt, simmer |

SETTINGS for WARMER ZONE


| Food item | Heat level |
|-------------------------|------------|
| Hot beverages | L4 or L5 |
| Fried foods | L4 or L5 |
| Vegetables | L3 |
| Soups (cream) | L3 |
| Stews | L3 |
| Sauces | L3 |
| Meats | L3 |
| Gravies | L2 or L1 |
| Eggs | L2 or L1 |
| Dinner plates with food | L1 |
| Casseroles | L1 |
| Breads/pasteries | L1 |

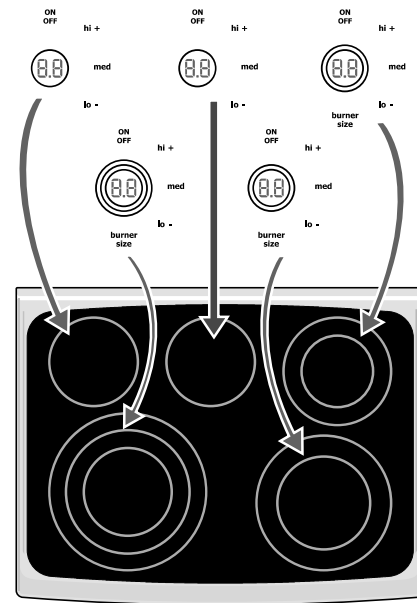

COOKTOP ZONE DISPLAYS

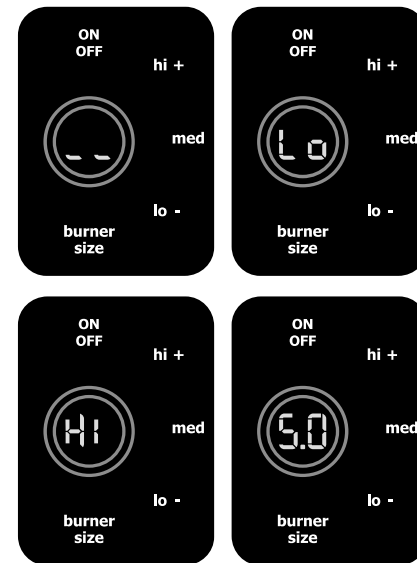

WARMER ZONE DISPLAY

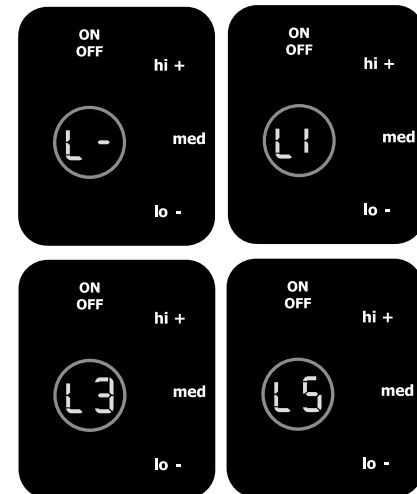

LUXURY-GLIDE™ RACKS

REMOVING GLIDE RACKS

CAUTION

Always use potholders or oven mitts when removing food or adjusting the oven racks. Wait until the oven has completely cooled if possible. Oven racks may be **HOT** and may cause burns.

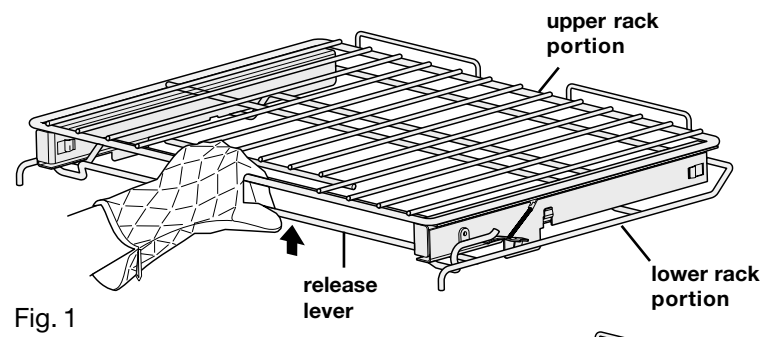


Fig. 1

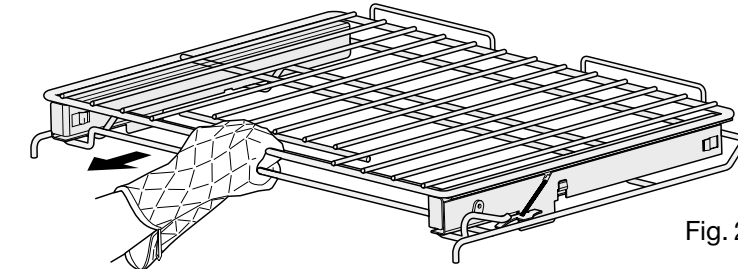


Fig. 2

To remove using one hand, reach through handle opening on top of glide rack and lift up on the release lever located across the lower front of the rack as illustrated -See Fig. 1-.

While holding up on the release lever, pull the glide rack out of the oven until you reach the oven rack stop position -Fig. 2-. Using both hands, grasp the upper and lower portions of the glide rack. Lift up the front of the rack slightly and continue to pull the rack away from the oven -Fig. 3-. Be sure to grasp both upper and lower rack portions together when removing or handling the glide rack - the rack portions move independently and are difficult to handle unless held together.


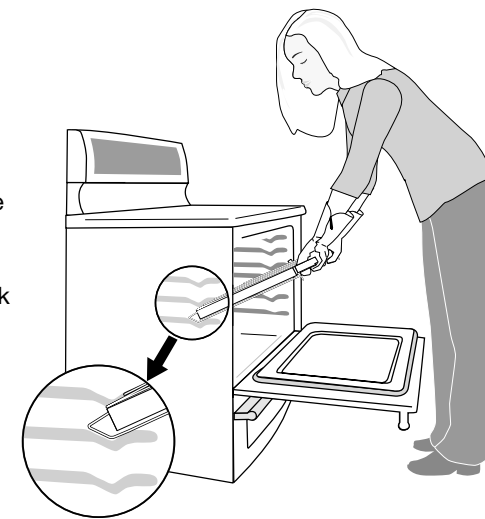


Fig. 3

REPLACING GLIDE RACKS

To replace grasp both upper and lower portions of glide rack, lift and place the rack resting evenly between the oven cavity walls. Tilt the front of the rack upward slightly and slide the rack completely into position. Some force may be necessary to make sure the oven rack has snapped completely back into place.

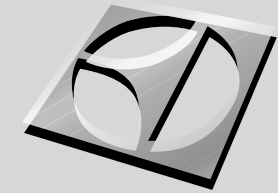

Quick Reference


30" Free-Standing Electric Range

Thank you for choosing Electrolux, the new premium brand in home appliances. We have provided you with this guide so that you may begin using your appliance right away.

SETTING CLOCK AT POWER UP

You will be prompted to enter the time of day in the event of a power failure or when you first provide power to your appliance.

- When your appliance is first powered up, 12:00 will flash in the display.
- Enter the time of day using the numeric key pads and press **START** to set.

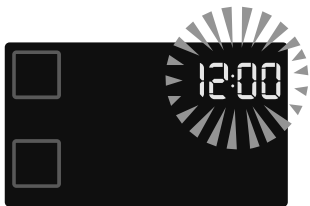


If an invalid time of day is entered, the control will triple beep. Re-enter a valid time of day and press **START**. If **CANCEL** is pressed your clock will start with a time of 12:00.

WAVE TOUCH™ DISPLAY MODES

SLEEP MODE

Your Wave Touch™ control will remain in a sleep mode when not in use. Only the clock will display during this mode. You will need to wake the control to begin an oven or cooktop feature.

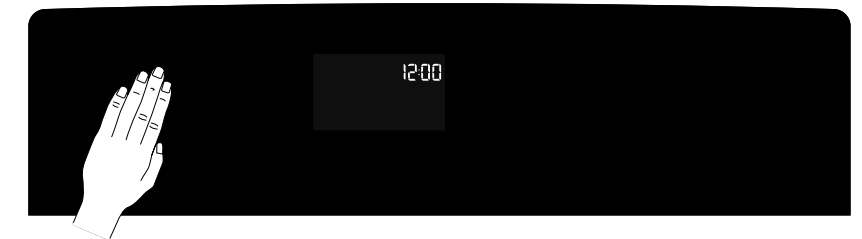

AWAKE MODE

To wake the control touch within the display panel in the general area shown. After 2 minutes without activity, go back into sleep mode. To start cooking you must select either the upper oven, lower oven or a cooktop element. User preferences will be available during this mode as well as timers, oven light and the control lock.



COOKING FEATURES

OVEN OPERATING TEMPERATURES

| Feature | Default | Maximum | Minimum |
|-------------|---------------|---------------|--------------|
| Bake-upper | 350°F/176°C | 550°F/288°C | 170°F/76°C |
| Bake-lower | 350°F/176°C | 450°F/232°C | 170°F/76°C |
| Bread proof | HI 100°F/38°C | HI 100°F/38°C | LO 85°F/30°C |
| Broil | 550°F/288°C | 550°F/288°C | 300°F/148°C |
| Conv bake | 350°F/176°C | 550°F/288°C | 170°F/76°C |
| Conv broil | 550°F/288°C | 550°F/288°C | 300°F/148°C |
| Conv roast | 350°F/176°C | 550°F/288°C | 170°F/76°C |
| Defrost | 80°F/26°C | NA | NA |
| Dehydrate | 120°F/48°C | 225°F/108°C | 100°F/38°C |
| Keep warm | 170°F/76°C | 190°F/88°C | 150°F/66°C |
| Probe | 170°F/76°C | 210°F/98°C | 180°F/82°C |

CONTROL LOCK

| Step | Press |
|------|-------|
|------|-------|

- Choose **CONTROL LOCK** and hold for 3 seconds

To unlock, press and hold **CONTROL LOCK** again for 3 seconds.

Control lock will lock oven controls, cooktop and upper oven door.

DOOR LOCK will flash in the display until the door has finished locking. Once the door has been locked, the door lock indicator will turn on. LOC will then display in the upper cavity only. Do not attempt to open the oven door while **DOOR LOCK** is flashing.

TIMERS

| Step | Press |
|------|-------|
|------|-------|

The two timers serve as extra reminders in the kitchen.

To set a timer:

- Press **TIMER**
- Enter amount of time
- Press **TIMER**

To cancel, press the timer key

This Quick Reference is not intended to replace your Use & Care Guide. Refer to the Use & Care Guide for more complete instructions.

OVEN LIGHT

| Step | Press |
|------|-------|
|------|-------|

- Press **OVEN LIGHT** to turn on lights manually

The oven lights will automatically turn on when the upper oven door is opened.

ABBREVIATIONS

| Code | Explanation | Oven | Cooktop |
|------|-------------------|------|---------|
| -- | Cooktop lock | | x |
| Cln | Self clean | x | |
| CLO | Setting the clock | x | |
| dEF | Defrost | x | |
| E11* | Fault code error | | x |
| End | End of cycle | x | |
| F10* | Fault code error | x | |
| HE | Hot element | | x |
| Hi | Hi setting | x | x |
| Hot | Hot oven | x | |
| Lo | Low setting | x | x |
| Loc | Control lock | x | |
| Sab | Sabbath mode | x | |
| Sb | Sabbath mode | x | x |
| Sd | Demo mode | x | |
| CF | Check food | x | |

* F10 and E11 are examples of fault codes that you may see. These codes will help your servicer repair your appliance.

BAKE

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN** or **LOWER OVEN**
- Press **BAKE***
- Press **START**

BROIL

| Step | Press |
|------|-------|
|------|-------|

- Place boiler insert on broiler pan, then place food on broiler insert. Remember to follow all warnings and cautions.
- Place prepared food directly under broil element. Leave oven door open slightly (about 4 inches).
- Press **UPPER OVEN**
- Press **BROIL***
- Press **START**

CONV BAKE

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN**
- Press **CONV BAKE***
- Press **START**

CONV BROIL

| Step | Press |
|------|-------|
|------|-------|

- Place boiler insert on broiler pan, then place food on insert. Remember to follow all warnings and cautions.
- Place prepared food directly under broil element. **Close oven door.**
- Press **UPPER OVEN**
- Press **CONV BROIL***
- Press **START**

CONV ROAST

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN**
- Press **CONV ROAST***
- Press **START**

KEEP WARM

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN** or **LOWER OVEN**
- Press **KEEP WARM***
- Press **START**

SLOW COOK

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN** or **LOWER OVEN**
- Press **SLOW COOK**
- Press **-lo** to choose the low option. Press **+hi** to choose the high option
- Press **START**

PERFECT TURKEY™

| Step | Press |
|------|-------|
|------|-------|

- Insert probe into food and place food on rack in oven.
- Plug the probe into probe receptacle inside oven
- Press **UPPER OVEN**
- Press **PERFECT TURKEY***
- Press **START**

*Enter your desired temperature at this point if you choose not to use the default temp.

COOKING FEATURES

DEFROST

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN**
- Press **DEFROST**
- Press **START**

DEHYDRATE

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN**
- Press **DEHYDRATE***
- Press **START**

BREAD PROOF

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN**
- Press **BREAD PROOF** Use the **+ hi** or **- lo** keys to change default temperature
- Press **START**

MY FAVORITE (to save)

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN**
- Choose cooking feature & any additional options
- Press **START**
- Press & hold available **MY FAVORITE** for 3 seconds.
- Press **CANCEL**

*Enter your desired temperature at this point if you choose not to use the default temp.

MULTI STAGE

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN**
- Press **MULTI STAGE**

Stage 1 _____

- Choose 1st cooking feature
- Enter temperature
- Press **START**
- Enter cooking time
- Press **START**

Stage 2 _____

- Choose 2nd cooking feature
- Enter temperature
- Press **START**
- Enter cooking time
- Press **START**

Stage 3 _____

- Choose 3rd cooking feature
- Enter temperature
- Press **START**
- Enter cooking time
- Press **START** twice

SELF CLEAN

| Step | Press |
|------|-------|
|------|-------|

- Press **UPPER OVEN**
- Press **CLEAN**
- Choose **LITE, MED** or **HEAVY**
- Press **START**

COOKING OPTIONS

Cook options may be added to cooking features to make your cooking experience easier. The following options are available:

- Cook time
- End time
- Probe
- Rapid preheat
- Convection convert

COOK TIME

| Step | Press |
|------|-------|
|------|-------|

- Choose **UPPER OVEN** or **LOWER OVEN**
- Choose cooking feature
- Press **START**
- Press **COOK OPTIONS**
- Press **COOK TIME**
- Enter amount of cooking time
- Press **START**

COOK TIME WITH END TIME

| Step | Press |
|------|-------|
|------|-------|

- Choose **UPPER OVEN** or **LOWER OVEN**
- Choose cooking feature
- Press **COOK OPTIONS**
- Press **COOK TIME**
- Enter amount of cooking time
- Press **END TIME**
- Enter time of day you wish to stop cooking (00:00 format)
- Press **START**

PROBE

| Step | Press |
|------|-------|
|------|-------|

- Insert probe into food and place in the oven
- Plug probe into probe receptacle inside oven
- Choose **UPPER OVEN**
- Choose cooking feature
- Press **COOK OPTIONS**
- Press **PROBE**
- Press **START**

RAPID PREHEAT

| Step | Press |
|------|-------|
|------|-------|

- Choose **UPPER OVEN**
- Choose cooking feature
- Press **COOK OPTIONS**
- Press **RAPID PREHEAT**
- Press **START**

CONVECTION CONVERT

| Step | Press |
|------|-------|
|------|-------|

- Choose **UPPER OVEN**
- Choose cooking feature
- Press **COOK OPTIONS**
- Press **CONV CONVERT**
- Press **START**

USER PREFERENCES

The user preferences key will allow you to customize the way your appliance operates. User pref is only accessible when you are not cooking or using the timers. You will find options such as setting the clock, audio mode and other changes under the user preferences.