
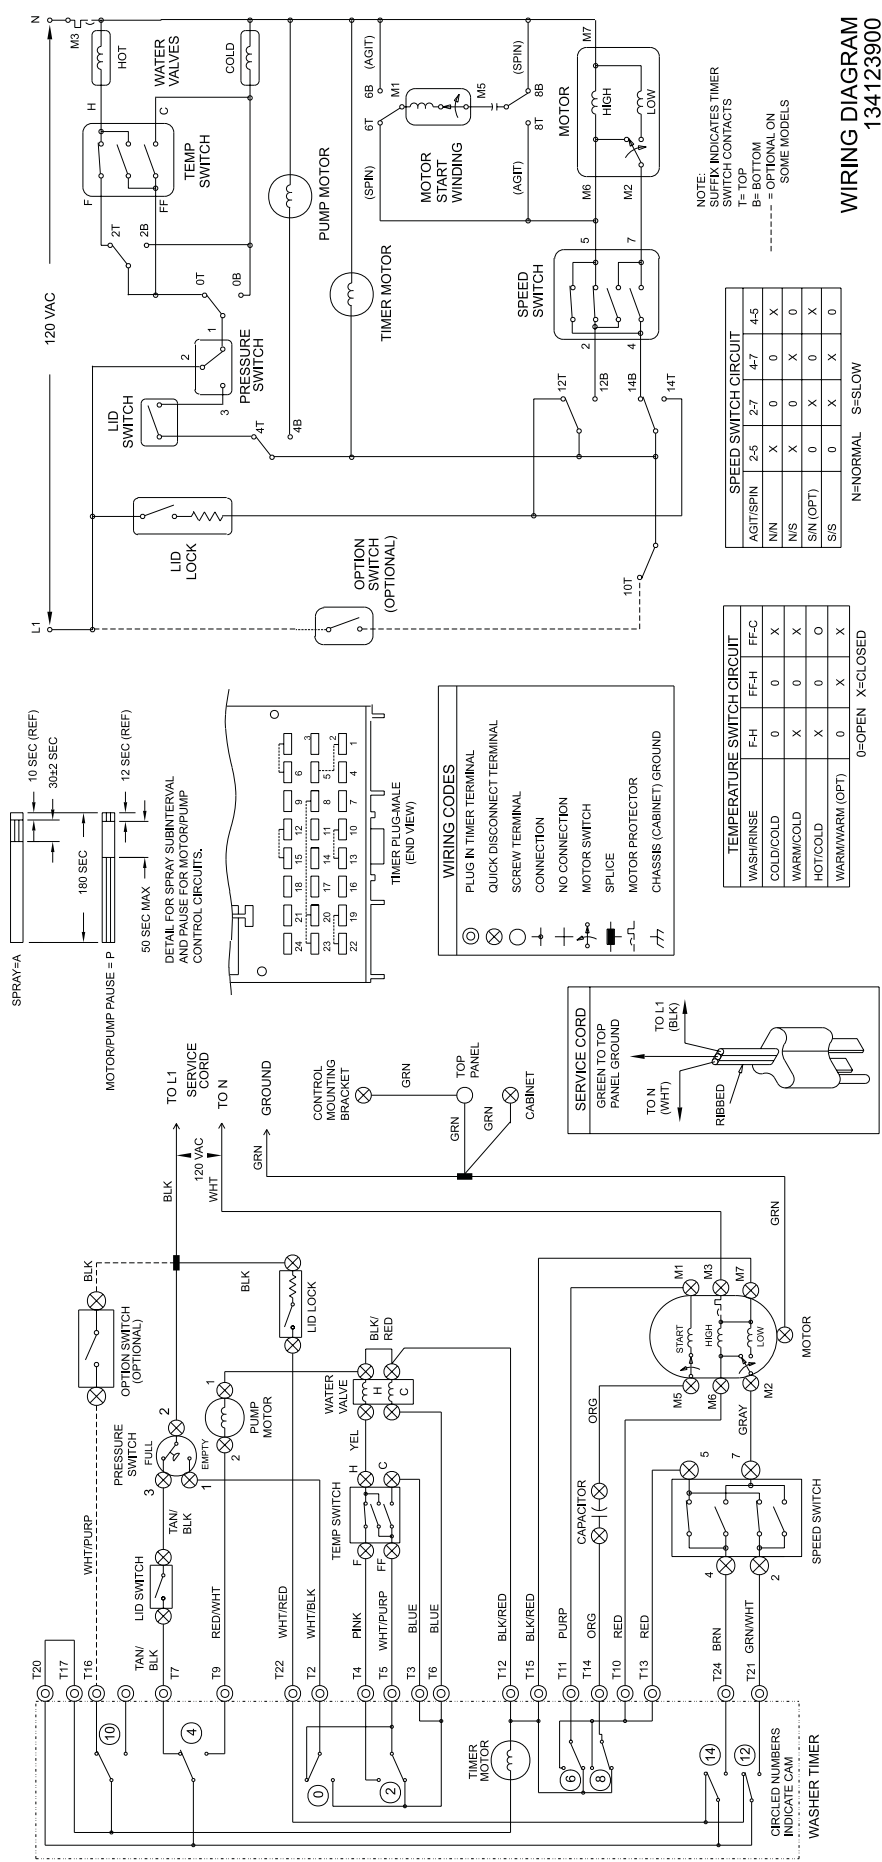


CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

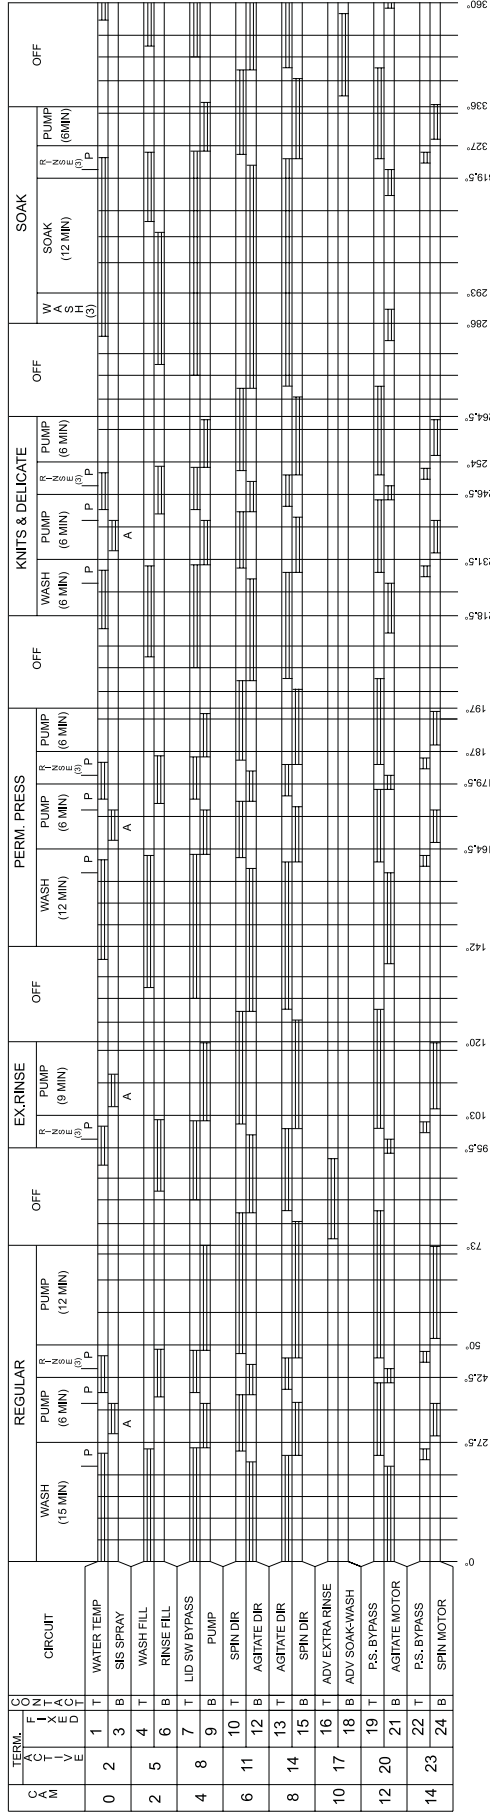

NOTE: SUFFIX INDICATES TIMER SWITCH CONTACTS
T=TOP
B=BOTTOM
--- OPTIONAL ON SOME MODELS

N=NORMAL S=SLOW
0=OPEN X=CLOSED