



### Versión en español

Si desea obtener una copia en español de estas Instrucciones de Funcionamiento, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/N 131693100.

Spanish Owner's Guides  
Frigidaire Company  
P. O. Box 9061  
Dublin, Ohio 43017-0961

## Before Operating Your Washer

**Read your washer Owner's Guide.** It has important safety and warranty information. It also has many suggestions for best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your washer Owner's Guide before operating this appliance.

## Operating Steps

**Read Washing Procedures in your Owner's Guide.** It explains these operating steps in detail.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.
3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to wash tub.
5. If desired, add diluted liquid bleach to Bleach Dispenser.
6. Add laundry load to wash tub.
7. If desired, add liquid fabric softener to the Fabric Softener Dispenser.
8. Set cycle selector and washer controls according to type, size, and soil level of each load.
9. Close lid and pull cycle selector knob to start washer.
10. Remove items at end of cycle. Wait about 1 minute for safety lid lock to release.

## Cycle Selection

**Always follow instructions on fabric care labels.** Check the **Control Settings Chart** (reverse side) if the care label is not available.

The Regular, Perm Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and final spin.

### Regular Cycle

Provides up to 15 minutes of wash agitation for most fabrics.

### SANI CYCLE

Provides a rinse and spin to clean the **empty** wash tub after washing an especially soiled load.

- Pour 1-1/4 cups (300 ml) liquid chlorine bleach into bleach dispenser. Then add 1 cup (240 ml) water to flush the dispenser.
- Turn Load Size control to Small.
- Turn Wash/Rinse Temperature to Hot/Cold.

Select SANI CYCLE by pushing in cycle selector knob and turning it clockwise to RINSE•SANI CYCLE. Pull out knob to start.

*(continued, reverse side)*

## Cycle Selection (continued)

### Extra Rinse Cycle

Provides 3 minutes of rinse agitation, followed by a spin at the selected rinse water temperature and speed. Use the Extra Rinse cycle after a complete wash cycle when an additional rinse is desired to remove excess suds or soil.

Select an extra rinse by pushing in the cycle selector knob and turning it clockwise to Extra Rinse. Pull out knob to start.

### Extra Spin

Provides 5 minutes of spin at the spin speed selected to remove excess water from extra heavy loads such as towels and rugs.

Select an extra spin by pushing in the cycle selector knob and turning it clockwise to Extra Spin. Pull out knob to start.

### Perm Press Cycle

Provides up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

### Knits & Delicates Cycle

Provides up to 6 minutes of wash agitation for the gentle care of knit and delicate items.

### Soak & Prewash Cycle

• **Soak** — The Soak setting can be used to treat heavily soiled or stained items. It provides 3 minutes of agitation and 12 minutes of soaking time, then advances to the Prewash portion of the cycle. Use the amount of detergent recommended for a normal wash cycle. For colorfast items, bleach or a soaking agent may also be used. Follow manufacturer's directions on the product label.

• **Prewash** — When soaking is not necessary, the Prewash setting can be used alone to help remove protein-based stains such as milk, grass and blood and to help loosen soils before washing. During Prewash, the washer will agitate the load for 3 minutes, then drain, spin and shut off. Use the amount of detergent and other laundry products recommended for a normal wash cycle.

#### Note:

- The Soak water temperature is the same as the rinse water temperature selected; the Prewash water temperature is the same as the wash water temperature selected. To avoid setting protein stains, select cold water.

- Select agitate/spin speeds appropriate for the items being soaked or prewashed.
- Soak and Prewash should always be followed by a complete wash cycle using the recommended amount of detergent.

## Controls

**Always follow instructions on fabric care labels.**

Check the **Control Settings Chart** below if the care label is not available.

**WASH/RINSE TEMPERATURE** determines water temperatures for washing and rinsing.

**LOAD SIZE** determines the amount of wash and rinse water used for the wash load. To increase the water level after the wash cycle begins, turn the Load Size control to "Reset" and hold. When water begins to enter the tub, turn the control to the desired setting.

**AGITATE/SPIN SPEED** determines speeds for the agitation and spin portions of each cycle.

**EXTRA RINSE** provides an automatic extra rinse after the Regular cycle. Turn the Extra Rinse control to ON to automatically advance from the Regular cycle to the Extra Rinse cycle. Turn the Extra Rinse control to OFF to conserve water when an automatic extra rinse is not desired.

## Control Settings Chart

Locate fabric type and read across guide for suggested wash and rinse temperatures, wash cycle and time setting, and agitate/spin speeds. **This is only a general guide. For best results, follow label directions on specific items to be washed.**

Fabric Type	Temperature (Wash/Rinse)		Wash Cycle and Setting	Speed (Agitate/Spin)
<b>REGULAR</b> Heavily Soiled Colorfast & White Cotton & Linen	Hot	Cold	Regular - 15	Normal/Fast
Lightly Soiled Colorfast & White Cotton & Linen	Warm	Cold	Regular - 8 to 12	Normal/Fast
Noncolorfast Bright Colors All Fabrics	Cold	Cold	Regular - 4 to 8	Normal/Fast
<b>PERMANENT PRESS</b> White or Heavily Soiled	Hot or Warm	Cold	Perm Press - 8 to 12	Normal/Slow
Colored or Lightly Soiled	Warm or Cold	Cold	Perm Press - 4 to 8	Normal/Slow
<b>KNITS/DELICATES</b> Knitted Fabrics Delicates	Cold Cold	Cold Cold	Knits & Delicates - 6 Knits & Delicates - 6	Gentle/Fast Gentle/Slow
Washable Woolens	Warm	Warm	Knits & Delicates - 6	Gentle/Fast