

OUTSIDE EXTERIOR EXTERIEUR
INSIDE INTERIOR INTERIEUR



OVEN CIRCUIT // CIRCUITO DE HORNO // CIRCUIT DU FOUR

COLOR CODE/CODIGOS DE COLOR/CODE DE COULEUR

G. - GREEN/VERDE/VERT
W. - WHITE/BLANCO/BLANC
R. - RED/ROJO/ROUGE
O. - ORANGE/NARANJA/ORANGE
Y. - YELLOW/AMARILLO/JAUNE
BR. - BROWN/MORENO/BRUN
BL. - BLUE/AZUL/BLEU
BK. - BLACK/NEGRO/NOIR


CODE	GAUGE	TEMP. °C	CSA	UL
CODIGO	MEDIDA			
CODE	CALIBRE			
1	18	125	CL1251	3173
2	16	125	CL1251	3173
3	14	125	CL1251	3173
4	12	125	CL1251	3173
5	18	150	EXL-150	3321
6	16	150	EXL-150	3321
7	14	150	EXL-150	3321
8	12	150	EXL-150	3321
9	10	150	EXL-150	3321
10	18	200	SEW-1	3122
11	16	200	SEW-1	3122
12	12	250		3252
13	16	250		3252
14	20	150	EXL-150	3321
15	8	150	EXL-150	3321
16	8	60		
17	10	60		
18	10	200	SEW-1	3122
19	20	125	CL1251	3173
20	20	200	SEW-1	3122
21	22	125	CL-1251	3173
22	22	150	EXL-150	3321
23	18	200		3573
24	22	150		10109
25	16	450		5107

EXAMPLE/EJEMPLO/EXEMPLE: (R-8)*
* WHEN USING 4000 W. BROIL ELEMENT
* CUANDO SE USA 4000 W. ELEMENTO DE ASADO
* QUAND UTILISE AVEC 4000 W. ELEMENT GRILLAGE

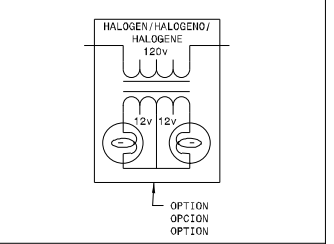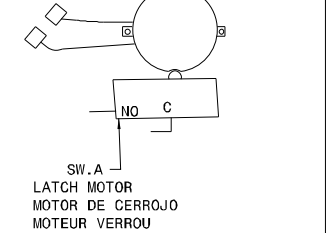

OPTIONAL: * TRUE HIDE BAKE ONLY.
OPCIONAL: * ELEMENTO OCULTO DE HORNO SOLAMENTE.
FACULTATIF: * ELEMENT CACHE SEULEMENT.

LOWER OVEN / HORNO INFERIOR / FOUR INFERIEUR | UPPER OVEN / HORNO SUPERIOR / FOUR SUPERIEUR

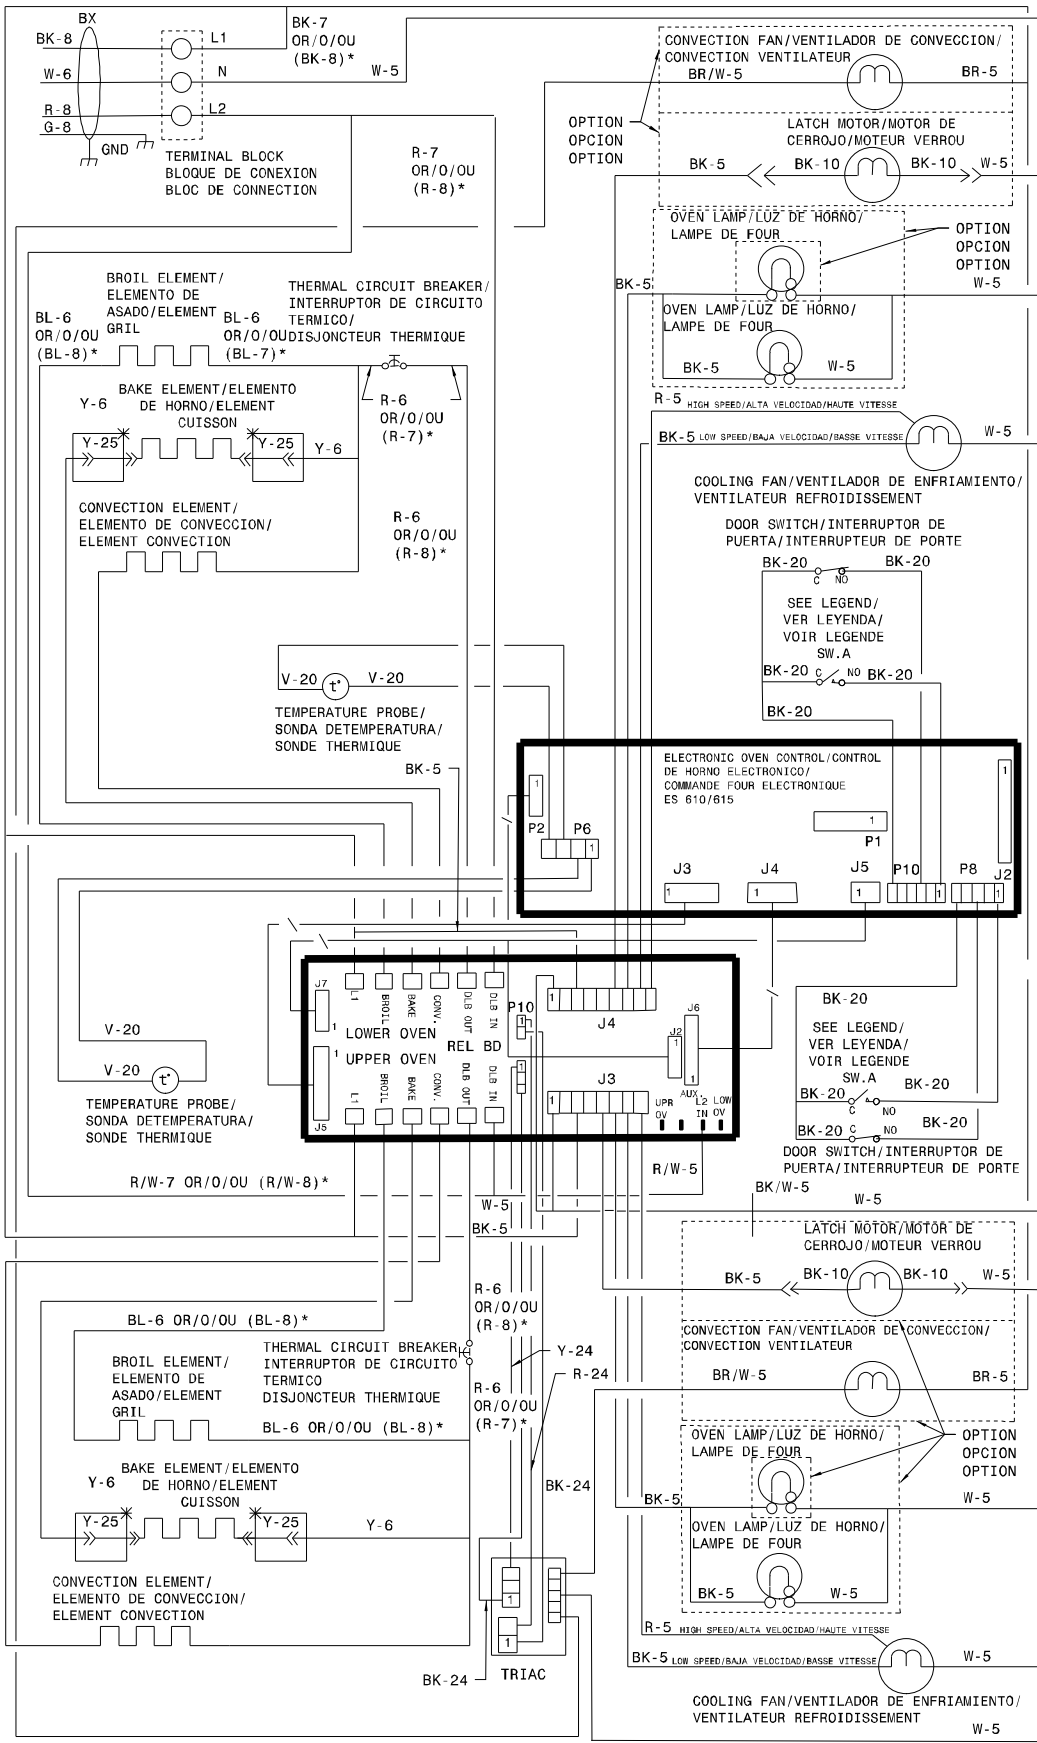

CAUTION: DISCONNECT POWER BEFORE SERVICING UNIT.
ATENCIÓN: CORTAR EL CORRIENTE ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.
ATTENTION: COUPEZ L'ALIMENTATION AVANT D'EFFECTUER LA REPARATION.