



CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

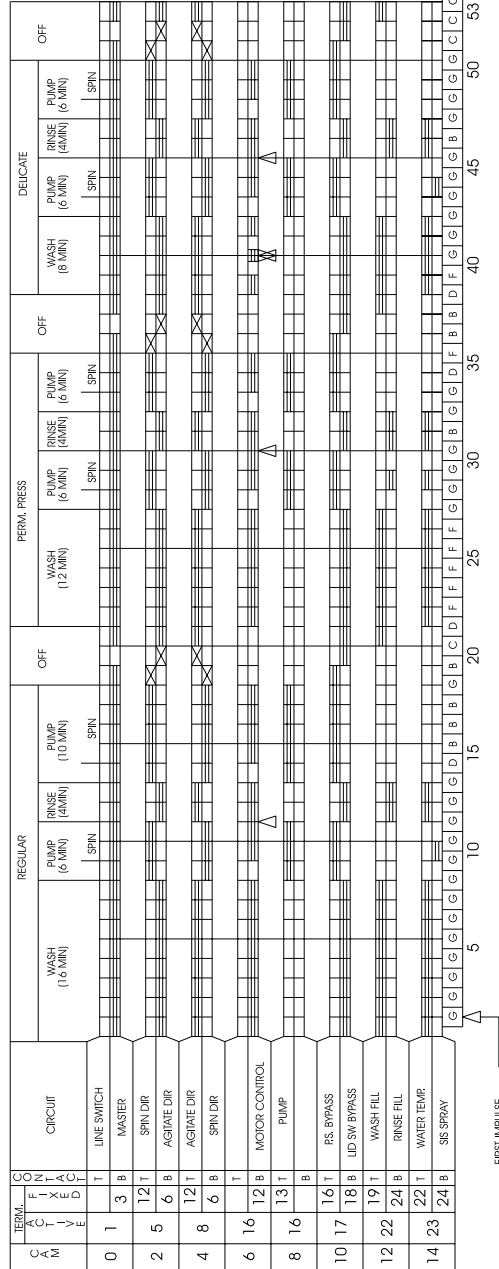

INDICATES SWITCH CLOSED FOR APPROX. 5 SEC.
 INDICATES SWITCH OPEN FOR 9±4 SEC.

RACKET ANGLE LEGEND

A = 4.5°
B = 5.0°
C = 5.5°
D = 6.0°
E = 6.5°
F = 7.0°
G = 7.5°

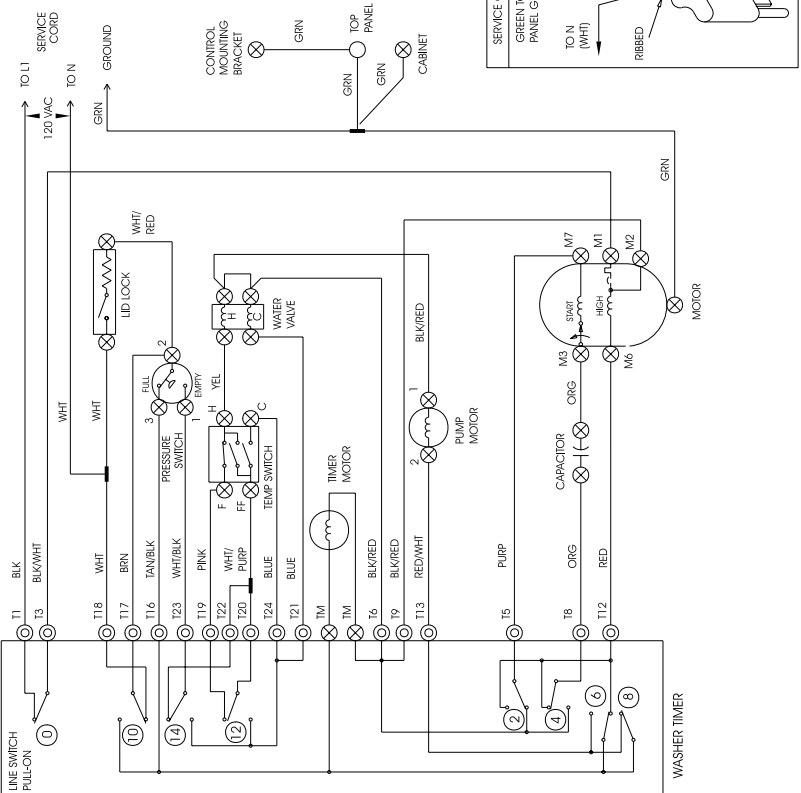

NOTE: SUFFIX INDICATES TIMER SWITCH CONTACTS
 T=TOP
 B=BOTTOM