

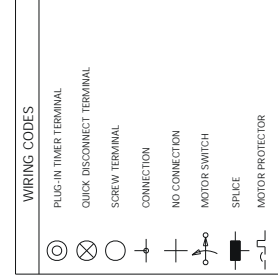
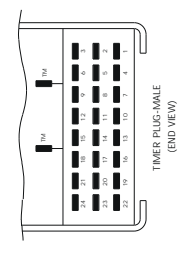
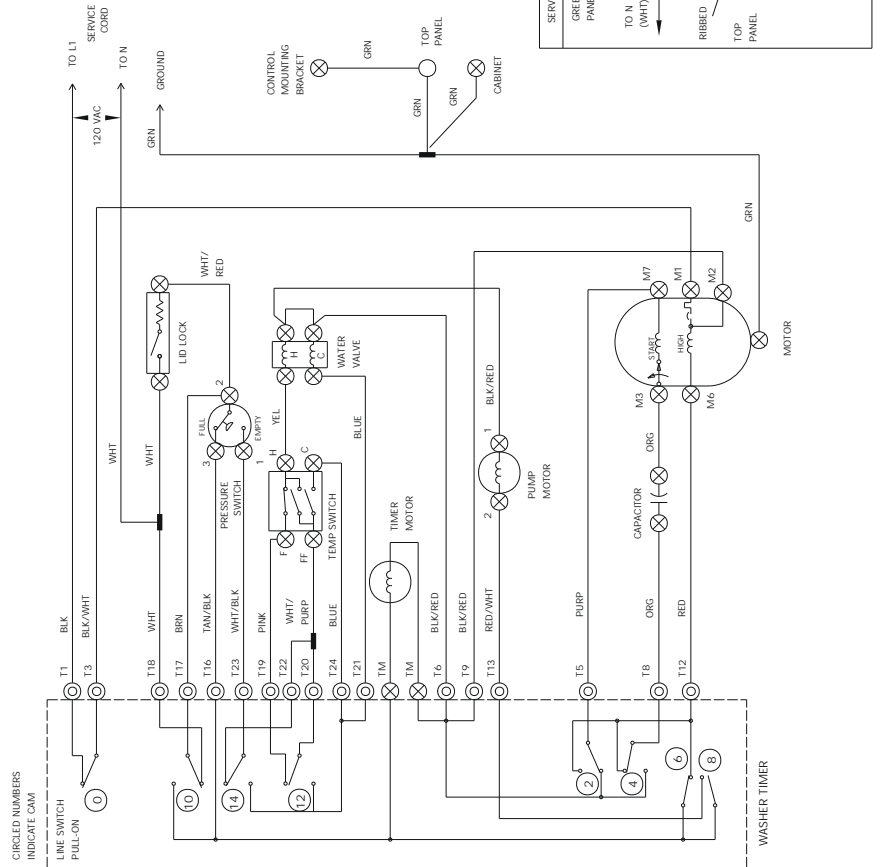


CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

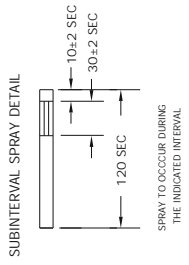

TEMPERATURE SWITCH CIRCUIT	F-H		FF-H		FF-C	
	WASH/RINSE	HOT/COLD	WARM/COLD	COLD/COLD	WARM/WARM(OPT)	
WASH/RINSE	X	O	O	O		
HOT/COLD		X	X	X		
COLD/COLD			O	O		X
WARM/WARM(OPT)					O	X

O=OPEN X=CLOSED
(OPT)-OPTIONAL ON SOME MODELS

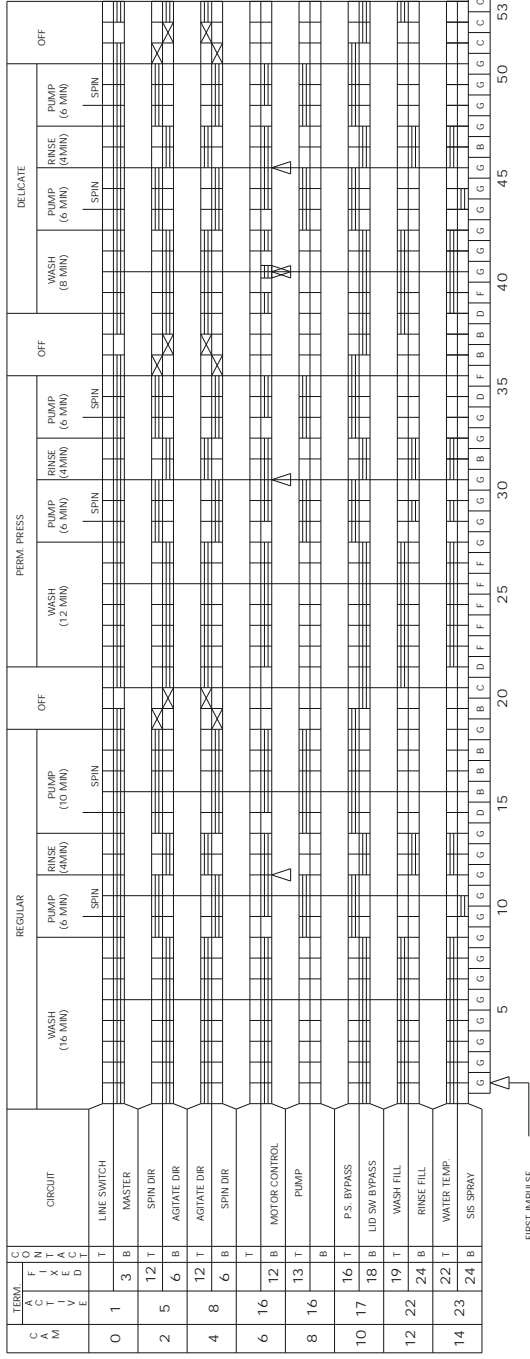