
# Installation Instructions

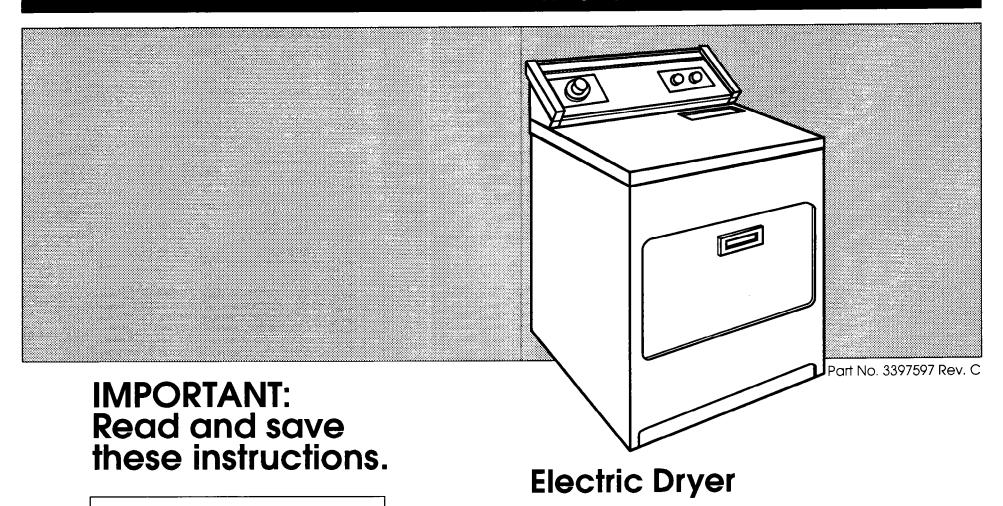

IMPORTANT:

**Installer**: Leave Installation Instructions with the homeowner.

Homeowner: Keep Installation Instructions

for future reference.

**Save** Installation Instructions for local electrical inspector's use.

## Before you start...

Check location where dryer will be installed. Proper installation is your responsibility. The dryer must not be installed or stored in an area where it will be exposed to water and/or weather. Make sure you have everything necessary for correct installation.

Grounded electrical supply is required. See Electrical requirements, Panel A.

#### Four-inch metal exhaust duct is required.

Check code requirements: Some codes limit or do not permit installation of clothes dryers in garages, closets, mobile homes, or sleeping quarters. Contact your local building inspector.


Protection from the weather: Proper operation of dryer cycles requires temperatures above 45°F, or the dryer may not shut off when automatic cycles are used.

Important: Observe all governing codes and ordinances.

Open dryer and remove literature and parts packages.

Support: Floor must be sturdy enough to support dryer weight of 175 pounds.

Level floor: 1-inch maximum slope under entire dryer.

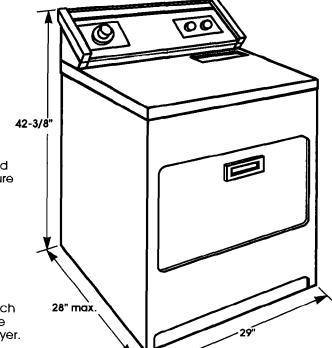

#### **WARNING**

Electrical Shock Hazard

- it is the customer's responsibility:
- To contact a qualified electrical Installer.
- To assure that the electrical installation is adequate and in conformance with National Electrical Code, ANSI/NFPA 70 — latest edition\*, and all local codes and ordinances.

Fallure to do so could result in fire, electrical shock or other personal injury.


#### Fire Hazard

- Do Not store gasoline, paint thinners, or other flammable materials near dryer. Fumes from such materials may result in fire or explosion.
- Never install dryer up against draperies or curtains or on carpet.
- Keep any and all Items from falling or collecting behind the dryer.

Fallure to follow these instructions could result in a fire or explosion.

#### **Dryer door clearances**

Location must be large enough to fully open dryer door. See Panel E for recessed and closet requirements.

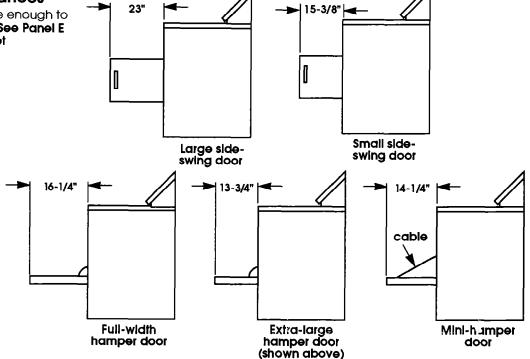

#### **A** WARNING

#### Fire Hazard


If you install the dryer in a garage, carport, or areas near vehicles where tumes from gasoline or other flammable materials may be present, the vapors may be heavier than air and remain near floor. Place dryer a minimum of 18 Inches above floor. Check with your building inspector regarding requirements for this installation.

Failure to follow these instructions could result in fire or explosion.

Copies of the standards listed above may be obtained from:


\* National Fire Protection Association **Batterymarch Park** Quincy, Massachusetts 02269

## Tools and materials needed for installation:

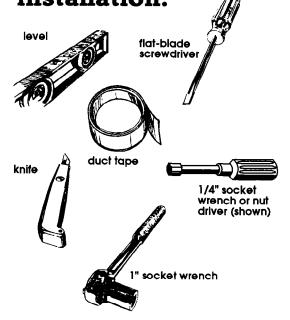

#### Parts supplied for installation:

Remove parts from packages. Check that all parts were included.

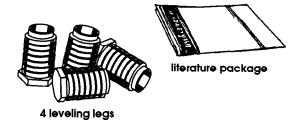


## Electrical requirements

#### **A** WARNING

- **Electrical Shock Hazard**  Electrical ground is required on this appliance.
- Do Not modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
- Do Not have a fuse in the neutral or grounding circuit. A fuse in the neutral or grounding circuit could result in an electrical shock.
- Do Not use an extension cord with this appliance.
- Check with a qualified electrician to be sure this appliance is properly
- Do Not connect plug end of power supply cord into a live receptacle before connecting power supply cord to dryer terminal block.
- Do Not reuse old power supply cord. Fallure to follow these instructions could result in serious injury or death.

If codes permit and a separate grounding wire is used, it is recommended that a qualified electrician determine that the grounding path is adequate.

A three-wire or four-wire, single phase 120/240-volt, 60-Hz, AC-only, electrical supply (or three-wire or four-wire, 120/208volt if specified on serial/rating plate) is required on a separate 30-ampere circuit, fused on both sides of the line. A time-delay fuse or circuit breaker is recommended.

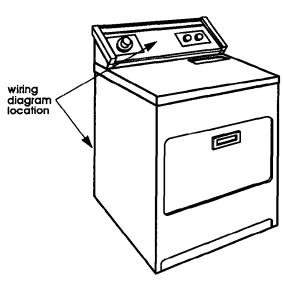

A wiring diagram is located inside the console or on back panel of dryer.

It is the personal responsibility and obligation of the customer to contact a qualified electrician to assure that the electrical installation is adequate and is in conformance with the National Electrical Code, ANSI/NFPA 70 — latest edition\* and all local codes and ordinances.

Copies of the standards listed above may be obtained from:


\* National Fire Protection Association **Batterymarch Park** Quincy, Massachusetts 02269

important: Observe all governing codes and ordinances.


#### Power supply cord

Use a new 30-amp power supply cord.

Local codes may permit the use of a U.L.listed, 120/240-volt minimum, 30-ampere, dryer power supply cord kit (pigtail). Power supply cord should be Type SRD or SRDT and be at least four feet long. The wires that connect to the dryer must end with ring terminals or spade terminals with upturned ends. A 3/4", U.L.-listed strain relief must be installed where the power supply cord connects to the dryer (see Figures 1 and 2).

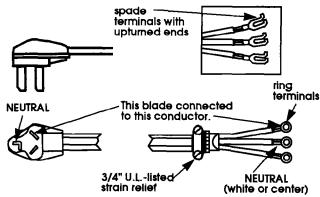

Three-wire power supply cord NEMA 10-30P Figure 1

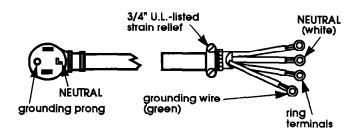

Four-wire power supply cord (Mobile home or other four-wire installations) **NEMA 14-30P** 

Figure 2

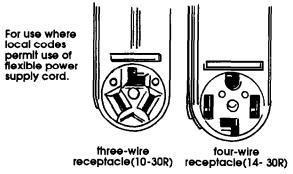


Figure 3

Figure 4

The power supply cord must have three, No.-10 copper wires to match a three-wire receptacle of NEMA Type 10-30R (see Figure 3).

For mobile homes or other four-wire installations, the power supply cord must have four, No.-10 copper wires and match a four-wire receptacle of NEMA Type 14-30R (see Figure 4). The fourth wire (grounding conductor) must be identified with a green cover and the neutral conductor by a white

#### **Direct wire**

The dryer can be connected directly to fused disconnect or circuit breaker box with three-wire or four-wire flexible armored or non-metallic sheathed copper cable (with grounding wire). Do Not use two-wire with bare grounding wire. All current-carrying wires must be insulated.

A conduit connector must be installed at junction box. USE ONLY 10-GAUGE SOLID COPPER WIRE. DO NOT USE ALUMINUM WIRE. Allow four feet of slack in the line so dryer can be moved if servicing is ever necessary.

#### Electrical connection

#### Three-wire connection...

Where local codes permit connecting frame-grounding conductor to the neutral wire:

This dryer is manufactured with the framegrounding conductor connected to the NEUTRAL (center) of the wiring harness at the terminal block. If local codes do Not permit this type of connection, use "Four-wire Connection" instructions.


#### **A** WARNING

Electrical Shock/Fire Hazard Check that wiring you are using matches colors shown in illustrations and specified in instruction steps. If wiring does Not match, it is your responsibility to have a qualified electrician install the correct wirina.

Fallure to install the correct wiring could result in tire, electrical shock or death.

## **POWER SUPPLY CORD**

- 1 Turn power supply off.
- 2. Remove hold-down screw and terminal block cover.

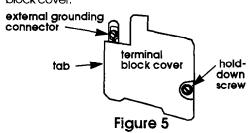

**3.** Attach 3/4" U.L.listed strain relief (U.L. marking on strain relief) to the hole below terminal block opening (see Figure 6). Tighten strain relief firmly to cabinet so it is in a horizontal position. Place power supply cord through strain relief.





Figure 6

4. Loosen or remove terminal block screws. Connect the neutral wire (white or center) of power supply cord under the center screw of the terminal block.

Connect the other two wires to outer terminal block screws (see Figure 7). Tighten all terminal block screws firmly.

Center wire MUST be connected to center

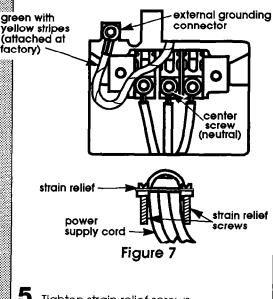

5. Tighten strain relief screws.

**6.** Insert tab of terminal block cover into slot of the dryer rear panel (see Figure 5). Secure cover with hold-down screw.

#### **DIRECT WIRE**


1 Turn power supply off.

#### WARNING


Electrical Shock Hazard Do Not use two wire with a bare grounding wire. All current-carrying wires must be insulated.

Failure to install the correct wiring could result in fire, electrical shock or death.

2. Strip 3-1/2 inches of outer covering from end of cable. If using three-wire cable with grounding wire, cut the bare wire even with outer covering. Strip 1 inch of insulation from the end of each insulated wire (see Figure 8).

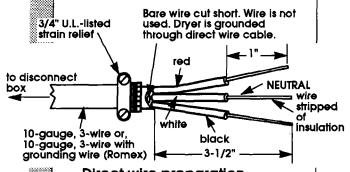

Direct wire preparation Figure 8 Shape the end of each u-shaped wire into a "U" shaped hook hook (see Figure 9). Figure 9 **3** Remove hold-down screw and terminal block cover.

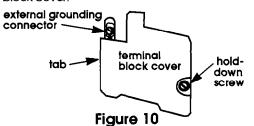

4 Attach 3/4" U.L.listed strain relief (U.L. marking on strain relief) to the hole below terminal block opening (see Figure 11). Tighten strain relief firmly to cabinet so it is in a horizontal position. Place direct wire cable through strain relief.





Figure 11

**5** Loosen or remove terminal block screws. Connect the neutral wire (white or center) of direct wire cable under the center screw of the terminal block. Place the hook-shaped end of the wire over the terminal block screw with open side of the hook facing to the right. Squeeze hook end of wire together to form a loop.

Connect the other two wires under the outer terminal block screws. Attach wires using the same method as the neutral wlre (see Figure 12).

Tighten all terminal block screws firmly.

Center wire MUST be connected to center screw.

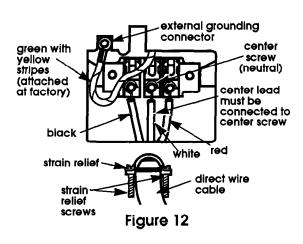

Tighten strain relief screws.


**7** ■ Insert tab of terminal block cover into slot of the dryer rear panel (See Figure 10). Secure cover with hold-down screw.

#### Power Supply Cord or Direct Wire

Where local codes DO NOT permit connecting the frame-grounding conductor to the neutral (white) wire:

1a. Turn power supply off.

**2a.** Complete Power supply cord Steps 2 - 3, or Direct wire Steps 2-4, Panel B.

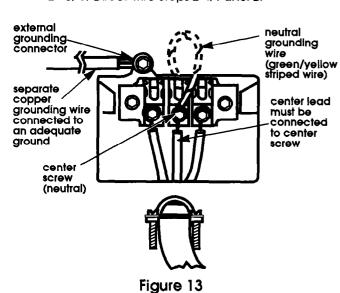

**3a.** Remove the neutral grounding wire (green/yellow striped wire) from external grounding connector screw. Remove center terminal block screw and fasten neutral grounding wire to screw (see Figure 13).

**4a.** Complete Power supply cord Steps 4 - 6 or Direct wire Steps 5 - 7.

**5a.** After reattaching the terminal block cover, connect separate copper grounding wire from external grounding connector to an adequate ground. If codes permit and a separate grounding wire is used, it is recommended that a qualified electrician determine that the grounding path is adequate.

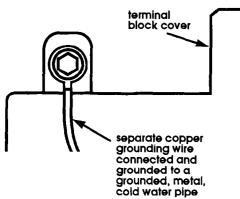


Figure 13a

В.

#### Four-wire connection...

Mobile home or other four-wire installations:

## **WARNING**


Electrical Shock/Fire Hazard
Check that wiring you are using matches
colors shown in illustrations and specified
in instruction steps. If wiring does Not
match, it is your responsibility to have a
qualified electrician install the correct
wiring.

Failure to install the correct wiring could result in fire, electrical shock or death.

## **POWER SUPPLY CORD**

1 Turn power supply off.

**2**■Remove hold-down screw and terminal block cover.

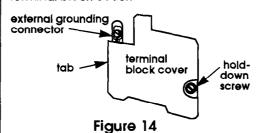

**3.** Attach 3/4" U.L.-listed strain relief (U.L. marking on strain relief) to the hole below terminal block opening (see Figure 15). Tighten strain relief firmly to cabinet so it is in a hortzontal position. Place power supply cord through the strain relief.


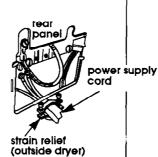


Figure 15

♣ Remove the center terminal block screw. Remove the neutral green with yellow stripe grounding wire from external grounding conductor screw. Connect neutral green with yellow stripe grounding wire and the neutral wire (white or center) of power supply cord under the center screw of terminal block. Connect the other two insulated wires under outer terminal block screws.

Connect the green, grounding wire from the power supply cord to the external grounding conductor screw (see

Tighten all terminal block screws firmly.

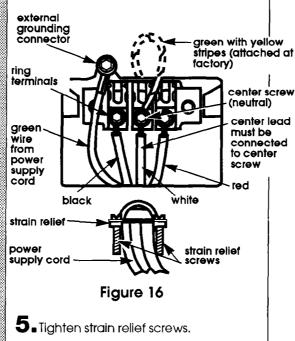

**6.** Insert tab of terminal block cover into slot of the dryer rear panel (see Figure 14). Secure cover with hold-down screw.

# DIRECT WIRE 1. Turn power supply off. 2. Strip 5 Inches of outer covering from end of cable. Leave bare grounding wire at 5 inches. Cut 1-1/2" from 3 remaining insulated wires. Strip insulation back 1 inch (see Figure 17). 3/4" U.L.-listed strain relief

Direct wire preparation
Figure 17

u-shaped hook Shape the end of each

black


disconnect

10-gauge, 3-wire


box

Shape the end of each wire into a "U" shaped hook (see Figure 18). The bare grounding wire must be 4-1/2" long after forming the hook.

**3.** Remove hold-down screw and terminal block cover.

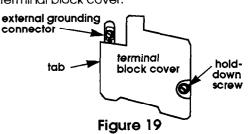

4 Attach 3/4" U.L.Is desired strain relief (U.L.
Is marking on strain relief) to the hole below
terminal block opening
(see Figure 20). Tighten
strain relief firmly to
cabinet so it is in a
horizontal position.
Place direct wire cable
through the strain relief.

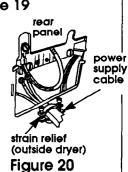

wire stripped of

bare grounding

insulation

**5.** Remove the center terminal block screw. Remove the neutral green with yellow stripe grounding wire from external grounding conductor screw. Connect neutral green with yellow stripe grounding wire and the neutral wire (white or center) of direct wire cable under the center screw of terminal block. Place the hookshaped end of the wire over the terminal block screw with open side of the hook facing to the right. Squeeze hook end of wire together to form a loop.

Connect the other two insulated wires under outer terminal block screws. Attach wires using the same method as the neutral wire.

Connect the direct wire cable (bare) grounding wire to the external grounding conductor screw (see Figure 21).

Tighten all terminal block screws firmly.

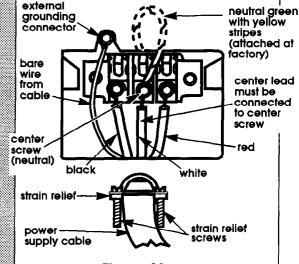


Figure 21

6 ■ Tighten strain relief screws.

**7** ■ Insert tab of terminal block cover into slot of the dryer rear panel (see Figure 19). Secure cover with hold-down screw.

# Exhaust requirements

#### **A** WARNING

Fire/Health Hazard

- Do Not use non-metal, flexible duct.
   Do Not use metal duct smaller than
- Do Not use metal duct smaller than four Inches in diameter.
- Do Not use exhaust hoods with magnetic latches.
- Check that exhaust system is not longer than specified. Exhaust systems longer than specified will:
  - Accumulate lint.
  - Shorten the life of the dryer.
  - Reduce performance, resulting in longer drying times and increased energy usage.

Failure to follow specifications may result in a fire.

- Do Not exhaust dryer into a chimney, furnace cold air duct, attic or crawl space, or any other duct used for venting.
- Clean the exhaust system every other vear.
- Do Not install flexible duct in enclosed walls, cellings or floors.

Accumulated lint could be fuel for a fire or cause moisture damage.

Exhausting your dryer indoors is Not recommended. The moisture and lint indoors may cause:

- Lint to gather inside and around the dryer and be a fuel for fire.
- Moisture damage to woodwork, furniture, paint, wallpaper, carpet, etc.
- Housecleaning problems and possible health problems.

Fallure to follow these instructions could result in fire damage, property damage, personal injury or health problems.


If using an existing exhaust system, clean lint from entire length of exhaust system. Make sure exhaust hood is not plugged with lint.

Replace plastic exhaust duct with rigid metal or flexible metal duct.

**Use duct tape** to seal all joints.



**Four-Inch rigid metal pipe** is preferred. Plan installation to use the fewest number of elbows and turns.

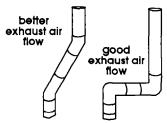

Metal flexible duct must be fully extended and supported when the dryer is in its final position. DO NOT KINK OR CRUSH THE DUCT. The metal flexible duct must be completely open to allow adequate exhaust air to flow.


Allow as much room as possible when using elbows or making turns. Bend duct gradually to avoid kinking. Remove excess flexible

duct to avoid sagging and kinking that may result in reduced air flow.

**Exhaust outlet** is located at the center

located at the center of the bottom dryer back.

The **exhaust duct** can be routed up, down, left, right or straight out the back of the dryer. General space requirements are provided on Panel E. Use the straightest path you can, where possible, to avoid 90° turns.

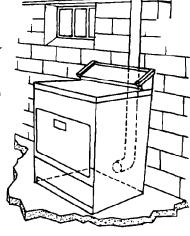

Maximum length of the exhaust system depends upon the type of duct used, number of elbows and the type of exhaust hood. The maximum length for both rigid and flexible duct is shown in chart.

	EXHAUST HOOD TYPE			
NUMBER OF 90° TURNS			2-1/2"	
0 1 2 3 4	64 FT. 54 FT. 44 FT. 35 FT. 27 FT.	64 FT. 54 FT. 44 FT. 35 FT. 27 FT.	58 FT. 48 FT. 38 FT. 29 FT. 21 FT.	MAX. LENGTH OF 4" DIA.RIGID METAL DUCT
0 1 2 3 4	36 FT. 31 FT. 27 FT. 25 FT. 23 FT.	36 FT. 31 FT. 27 FT. 25 FT. 23 FT.	28 FT. 23 FT. 19 FT. 17 FT. 15 FT.	MAX. LENGTH OF 4"DIA. FLEXIBLE METAL DUCT

The maximum length using a 2" x 6" rectangular duct with 2 elbows and a 2-1/2" (TYPE C) exhaust hood is 8 ft.

For exhaust systems not covered by the exhaust length chart, check with your dealer or distributor for information.


**Service check:** The back pressure in any exhaust system used must not exceed 0.6 inches of water column measured with an inclined manometer at the point that the exhaust duct connects to the dryer.

Exhausting the dryer outside is

recommended. A closet installation **must** be exhausted outside. Recessed installation that is not exhausted outside must use Exhaust Deflector Part No. 603197 available from your dealer. See "Recessed and closet installation instructions", Panel E, for adequate unobstructed air opening requirements.

If the dryer is installed in a confined area such as a bedroom, bathroom, or closet, it must be exhausted to the outside and provision must be made for enough air for combustion and ventilation. Check governing codes and ordinances. Also refer to the "Recessed and closet installation instructions," Panel E.

An **exhaust hood** should cap the exhaust duct to prevent exhausted air from returning into dryer. The outlet of the hood must be at least 12 inches from the ground or any object that may be in the path of the exhaust.




hood is preferred. However, a 2-1/2-inch outlet exhaust hood may be used. A 2-1/2-inch outlet exhaust hood can result in longer drying times than other hood types

For permanent installation, a stationary exhaust system is required.

#### Mobile home installation

This appliance is suitable for mobile home installations. The installation of the dryer must conform to the Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280 (formerly the Federal Standard for Mobile Homes Construction and Safety, Title 24, HUD Part 280, 1975) or the latest edition.

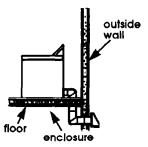

Mobile home exhaust requirements: The dryer must have an outside exhaust. If the dryer is exhausted through the floor and the area under the mobile home is enclosed, the exhaust system must terminate outside the enclosed area. Extension beyond the enclosure will prevent lint and moisture buildup under the mobile home.

## **Now start...**With dryer in laundry area.



Open dryer and remove literature and parts packages. If your dryer has tape on the door, remove tape, open door and remove the rest of the tape from dryer drum. Remove drying rack if your dryer has one. Remove parts from packages. Check that all four leveling legs were included (see Panel A).




If your dryer drum was taped, move drum counterclockwise to make sure all tape was removed. Wipe the interior of the drum thoroughly with a damp cloth to remove any dust before using the dryer.




Take two of the cardboard corners from the carton and place them on the floor in back of the dryer.

Firmly grasp the body of the dryer and gently lay it on its back on the cardboard corners.

minimum



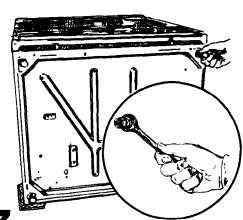

■ Start to screw the legs into the holes by hand. Use a 1" socket wrench or other type wrench to finish turning the legs until you reach the diamond marking.

#### CAUTION


Floor Damage

Slide dryer onto cardboard or hardboard before moving across floor.

Fallure to do so may cause damage to floor covering.

Now stand the dryer up. Slide dryer onto cardboard or hardboard.

Make electrical connection (see "Electrical requirements" and "Electrical connection," Panels A - C).

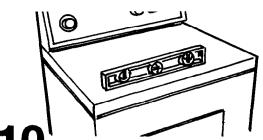

■ Move the dryer close to its permanent location, but leave enough room to connect exhaust duct. Remove cardboard or hardboard from under dryer. Check levelness of dryer by placing level on top of the dryer, first side to side, then front to back. If dryer is not level, adjust the legs of the dryer up or down. Dryer must be level to prevent noise and poor drying performance.




■ Connect exhaust duct to exhaust hood and dryer. (See Exhaust requirements, Panel D.)

- Use the straightest path possible to avoid 90° turns.
- Use duct tape to seal all joints in the exhaust system.
- Use caulking compound to seal exterior wall opening around exhaust hood.



part, go back through the steps to see what



Check to make sure you have all the tools you started with.


14 Plug the power supply cord into the grounded outlet or connect direct wire to power supply. Turn power supply on.



15 Carefully slide dryer into its final location. Check to be sure legs were properly installed and dryer is level.

Read the Use and Care Guide to fully understand your new dryer. Start the dryer and allow it to complete a full heat cycle (not the air cycle). After five minutes, open dryer door. You should feel heat inside the dryer. If you do not feel heat, follow instructions given on back cover, "If dryer does not operate properly."

To get the most efficient use from your new dryer, read your Use and Care Guide. Keep Installation Instructions and Guide close to the dryer for easy reference.

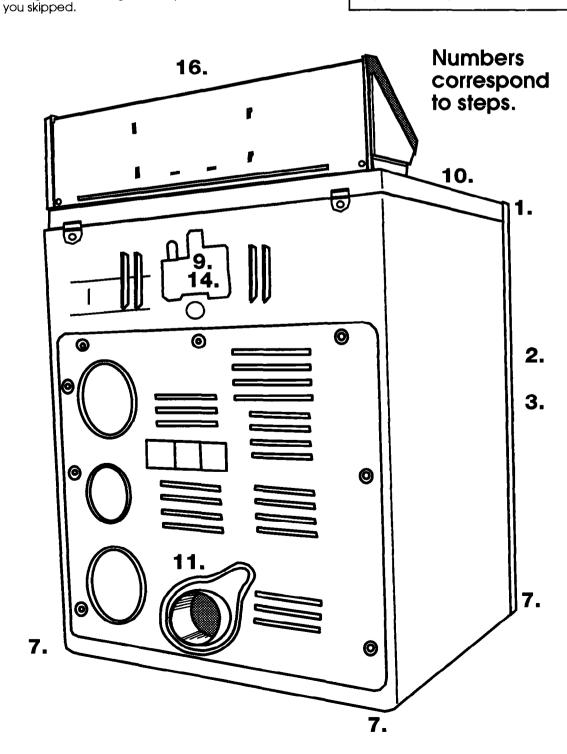

# Recessed and closet installation instructions

The dryer may be installed in a recessed area or closet

#### **WARNING**

#### Fire Hazard

if the dryer is installed in a closet, the dryer MUST be exhausted outside. Fallure to do so may result in a tire.


TO PREVENT LARGE AMOUNTS OF LINT AND MOISTURE FROM ACCUMULATING, TO MAINTAIN DRYING EFFICIENCY AND TO PREVENT EXPOSURE TO POSSIBLE HEALTH HAZARDS, THIS DRYER SHOULD BE EXHAUSTED OUTDOORS.

The installation spacing is in inches and Is minimum allowable.

Additional spacing should be considered for ease of installation, servicing and compliance with local codes and ordinances.


If closet door is installed, the minimum unobstructed air openings in top and bottom is required. Louvered doors with equivalent air openings are acceptable. <u>Closet installation must be exhausted</u>. Other installations must use the minimum dimensions indicated. Companion appliance spacing should be considered.

For recessed, non-exhausted Installation, Exhaust Deflector Kit, Part No. 346001, is required.

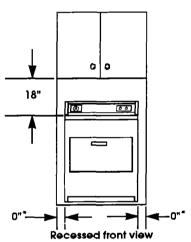

#### Minimum installation spacing

Closet installation <u>must</u> be exhausted.

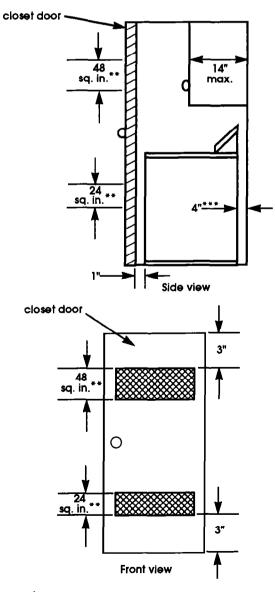

- \* Additional clearances for wall, door and floor moldings may be required.
- \*\* Opening is minimum for closet door. Louvered door with equivalent air openings is
- acceptable.

  \*\*\* Additional space is needed when external exhaust elbow is used.

# If dryer does not operate properly...

If dryer will not operate, check the following to be sure that:

- A. Electrical supply is connected.
- B. House fuse is intact and tight or circuit breaker has not tripped.
- C. Door is closed.
- D. Controls are set in a running or "On" position.
- E. Start button has been pushed firmly.

#### **A** CAUTION

Floor Damage

Silde dryer onto cardboard or hardboard before moving across floor.

Fallure to do so may cause damage to floor covering.

#### When moving your dryer...

- Shut off electric supply to dryer.
- Disconnect power supply cord and tape securely to dryer.
- Tape the drum to the front panel.
- Tape the dryer door and lint screen.
- Screw leveling legs all the way in.

Before having your electric dryer installed in your new home, check with a licensed electrician to confirm that the supply voltage matches the voltage specified on the serial/rating plate.

# If you need assistance...

Check your Use and Care Guide for a toll-free number to call, or call the dealer from whom you purchased this appliance. The dealer is listed in the Yellow Pages of your phone directory under "Appliances — Household — Major — Service and Repair."

When you call, you will need the dryer model number and serial number. Both numbers are on the serial/rating plate located in the door well behind dryer door and on front of opening.

