
SEARS

INSTALLATION INSTRUCTION MANUAL

MODEL No. 721.62772 721.62774 721.62779

Read and save these installation instructions.



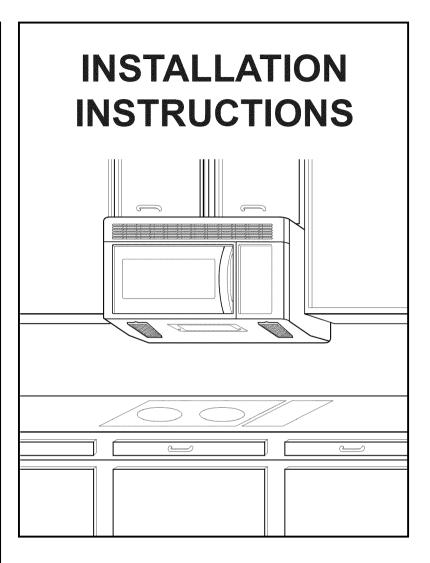

Microwave Hood Combination

Printed in Korea

BEFORE YOU START

Proper installation is the installer's responsibility!

Read the entire manual before you begin. The Model number label is located on the oven front.
 See Figure 1. Mounting plate is located on back side of microwave oven. See Figure 2.

BE SURE TO READ THE FOLLOWING SAFETY INSTRUCTIONS:

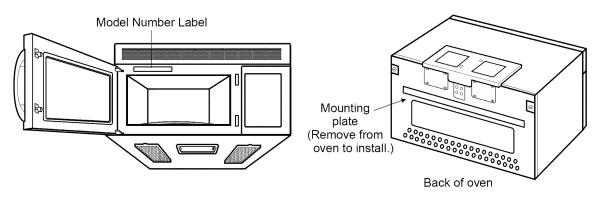


Figure 1 Figure 2



FOR YOUR SAFETY:

You will need TWO people to install this oven. It is heavy and could cause personal injury if not handled properly. The dimensions of the oven are as follows:

> Height: 16 7/16 inches Width: 29 15/16 inches Depth: 15 3/8 inches Weight: 58 pounds

Avoid Electrical Shock!

- Before you drill into the wall, note where electrical outlets are and where electrical wires might be behind
 concealed the wall, YOU COULD GET AN ELECTRIC SHOCK it you contact electrical wires with your
 drill bit.
- Locate and disconnect the power of any electrical circuits that could be affected by installing this oven.
 IF YOU DO NOT DISCONNECT THE POWER, YOU COULD GET AN ELECTRIC SHOCK.

• ELECTRICAL RATING OF THIS OVEN: 120V AC. 60Hz.

14 Amps / 1600 Watts (Microwave oven + Cooktop Lamps + Ventilation Fan)

 You need a 120V, 60Hz, AC only, 15A or 20A, fused electrical supply (located in the cabinet above the microwave as close as possible to the microwave circuit) serving only the microwave.


THIS APPLIANCE MUST BE GROUNDED!

- If there is an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug.
 - Place the plug into a properly installed and grounded outlet. See Figure 3.
 - Do not use an extension cord.
 - Keep the power cord dry and do not pinch or crush it.

 DO NOT, UNDER ANY CIRCUMSTANCES, REMOVE THE POWER SUPPLY CORD GROUNDING PRONG!

This appliance MUST be grounded!

PROPERLY POLARIZED AND GROUNDED OUTLET

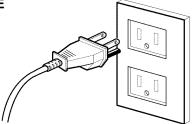

Three-Pronged (Grounding) plug Figure 3

A

WARNING



If you use the grounding plug improperly, you risk electric shock!

Check with a qualified electrician if you are not sure whether the oven is properly grounded or if you do
not completely understand the grounding instructions.

DO NOT USE A FUSE IN THE NEUTRAL OR GROUNDING CIRCUIT.



WARNING 🕰



Improper grounding could result in electric shock or other personal injury.

SAVE THESE INSTRUCTIONS FOR THE LOCAL ELECTRICAL INSPECTOR'S USE.

• DO NOT EXPOSE YOURSELF TO EXCESSIVE MICROWAVE ENERGY!

- DO NOT try to operate the microwave oven with the door open.
- DO NOT tamper with or defeat the safety interlocks.
- DO NOT place objects between the microwave oven front face and the door.
- DO NOT allow soil or cleaner residue to build up on the flat surfaces around the microwave oven door.
- DO NOT operate the microwave oven if it is damaged.
- The microwave oven door must close properly to operate safely.
- DO NOT USE THE MICROWAVE OVEN:
 - If the door is bent.
 - If the hinges or latches are broken or loose.
 - If the door seals, sealing surfaces or glass is broken.
- DO NOT ATTEMPT TO ADJUST OR REPAIR THE OVEN YOURSELF!
 It should be adjusted and repaired by a qualified technician who can check for microwave leakage after repairing the oven.



WARNING 🕰



If you do not use the microwave oven as instructed, you could be exposed to excessive microwave energy.


YOUR SAFETY FIRST

MAKE SURE YOU HAVE ENOUGH SPACE AND SUPPORT.

- Mount the oven against a flat, vertical wall, so that it is supported by the wall. The wall should be constructed of minimum 2" x 4" wood studding and 3/8" thick drywall or plaster/lath.
- ATTACH AT LEAST ONE of the two lag screws supporting the oven to a vertical, 2" x 4" wall stud.
- DO NOT mount the microwave oven to an island or peninsula cabinet.
- BE SURE the upper cabinet and rear wall structures are able to support 150 lbs., plus the weight of any items you place inside the oven or upper cabinet.
- Locate the oven away from strong draft areas, such as windows, doors, and strong heating vents.
- BE SURE you have enough space. See Figure 4 below for minimum vertical and horizontal clearance.



If you do not mount the oven as instructed, you risk personal injury and/or property damage.

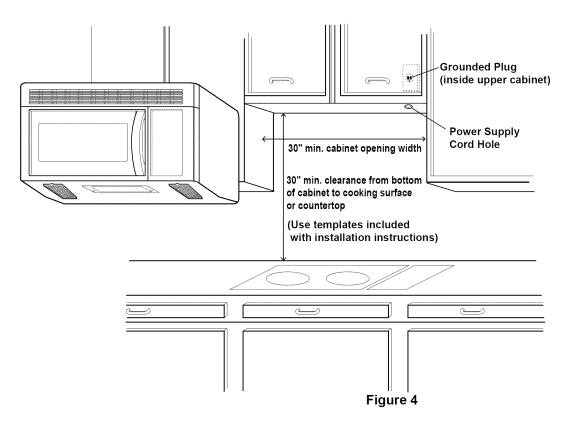


CAUTION


Before you begin installing the oven, PLACE APIECE OF THE CARTON OR OTHER HEAVY
MATERIAL (a blanket) over the countertop or cooktop to protect it. Do not use a plastic cover.
Failure to protect these surfaces could result inproperty damage.

PARTS, TOOLS, MATERIALS

THE FOLLOWING PARTS ARE SUPPLIED WITH THE OVEN:


NOTE: Depending on your ventilation requirements, you may not use all of these parts.

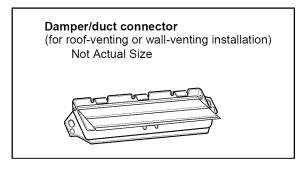

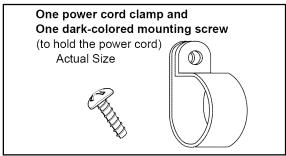

Two tapping screws - Actual Size (for attaching the damper duct connector)






One power cord clamp bushing - Actual Size (for the cord hole in a metal upper cabinet)

Four 1/4" x 2" lag screws - Actual Size (for wall stud holes)






Two 1/4" x 2" bolts - Actual Size (for securing to the upper cabinet)



Two washers - Actual Size (for the two upper cabinet bolts)



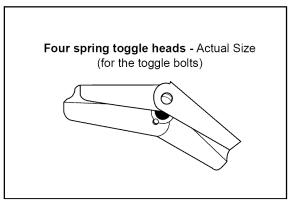


NOTE: You need to install at least one lag screw into a 2" x 4" stud and four anchor bolts into the wall and the mounting area must meet the 150 lbs. weight requirement.

PARTS, TOOLS, MATERIALS

YOU WILL NEED THE FOLLOWING TOOLS AND MATERIALS FOR THE INSTALLATION:

Carton or other heavy material for covering the counter top.

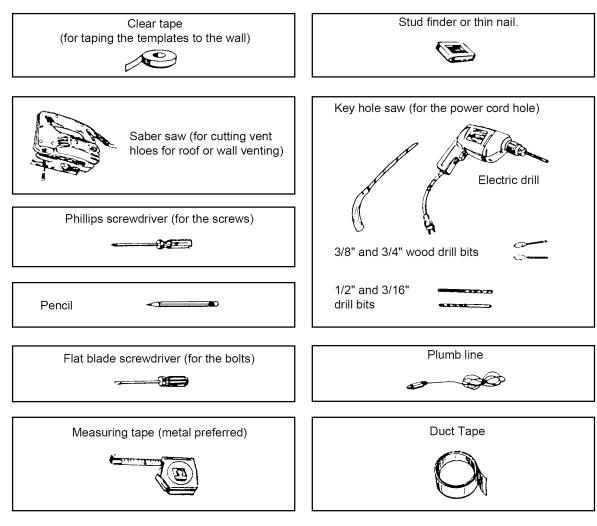

• If you have brick or masonry walls, you need special hardware and tools.

Small side cutters or tin snips

• The ductwork you need for the installation is not included. All wall and roof caps must have a back-draft damper.

Caulking gun

STEP 1: PREPARE THE ELECTRICAL CONNECTIONS



AVOID ELECTRICAL SHOCK! THIS APPLIANCE MUST BE GROUNDED!

1. Locate the grounded electric outlet for this oven in the cabinet above the oven, as shown in Figure 4 Detail.


NOTE: The outlet should be on a circuit dedicated to the microwave oven 120V, 60Hz., AC only, with a 20ampere fused electrical supply.

IMPORTANT: If you do not have the proper wall outlet, you MUST have one installed by a qualified electrician.

You will cut the power-supply-cord hole (shown in Figure 4 Detail) later when you prepare the wall and upper cabinet in Step 4.

NOTE: Do not use an extension cord.

Keep the power cord dry and do not pinch or crush it.

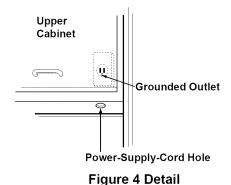



WARNING 🗚



Improper grounding could result in electric shock or other personal injury.

 DO NOT, UNDER ANY CIRCUMSTANCES, REMOVE THE POWER SUPPLY CORD GROUNDING PRONG! This appliance MUST be grounded!

STEP 2:

PREPARE THE VENTING SYSTEM

NOTE: The ductwork you need for outside ventilation is not included with your oven. The standard ductwork fittings and length are shown in Figure 9, page 9.



THIS OVEN MUST BE PROPERLY VENTED!


You may vent your oven in one of three ways:


Roof-venting If your oven is located on an outside wall near the roof, as in Figures 6 (31/4" x 10" duct) and 8 (6" round duct.)

Wall-venting If your oven is located on an outside wall on the first floor of your house, as in Figures 5 (3 1/4" x 10" duct) and 8 (6" round duct.)

Room-venting If your oven is located on an inside wall of your house, as in Figure 7.


NOTE: If you choose the rear exhaust method (roof-or wall-venting), be sure there is enough clearance within the wall for the exhaust duct.

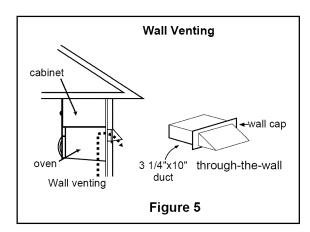


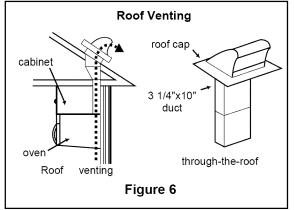

REMEMBER AS YOU INSTALL THE VENTING:

- Keep the length of the ductwork and the number of elbows to a minimum to ventilate your oven efficiently.
 See examples on page 9.
- Keep the size of the ductwork the same.
- Do not install two elbows together.
- Use duct tape to seal all joints in the duct system.
- Use caulking to seal the exterior wall or roof opening around the cap.

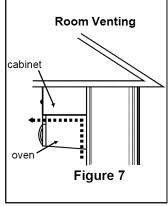

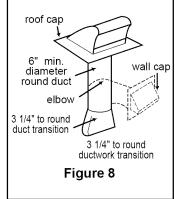

STEP 2: PREPARE THE VENTING SYSYTEM

STANDARD FITTINGS

NOTE: If the existing duct is round, you must use a rectangular-to-round adapter, with a rectangular 3" extension duct installed between the damper assembly and the adapter to prevent the exhaust damper sticking.

DUCT LENGTH

The total length of the duct system, including straight duct, elbows, transitions, wall or roof caps **must not** exceed the equivalent of 140 feet.

For best performance, do not use more than three 90 degree elbows.

Below are the standard fittings and their equivalent length in feet.


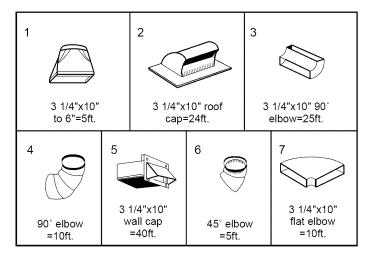


Figure 9

To calculate the equivalent length of each duct piece used, see the examples below.

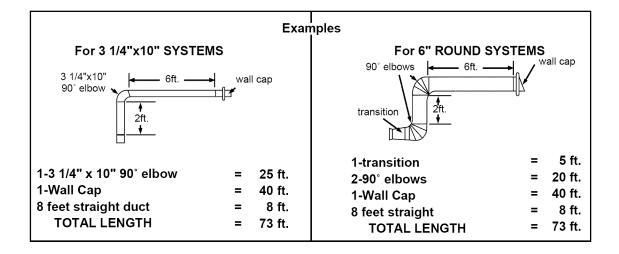

STEP 3:

PREPARE THE VENTING BLOWER

Your microwave oven is shipped with the blower assembled for room-vented(recirculating). You need to adjust the blower if you want wall-venting or roof-vented installation.



WARNING



ELECTRICAL SHOCK HAZARD! UNPLUG UNIT BEFORE WORKING ON IT.

 DO NOT PULL OR STRETCH THE BLOWER WIRING! Pulling and stretching the blower wiring could result in electrical shock.

Remove two screws that attach mounting plate to microwave oven cabinet. See Figure 10.


Remove mounting plate and set aside. Replace the screws.

ROOM-VENTED INSTALLATION:

Go to STEP 4 on page 12.

WALL-VENTED INSTALLATION:

- Remove one blower unit mounting screw and two blower plate screws. Remove the blower plate from cabinet. See Figure 11.
- 2. Carefully lift the blower unit out of the microwave oven.
- Use side cutters or tin snips to cut and remove knockouts "B" from Back plate. Discard knockouts.
 Be careful not to distort the plate. See Figure 12.
- 4. Reassemble the blower wire. See Figure 13.
- Rotate the unit so that the exhaust ports face the rear of the cabinet. See Figure 14. When you insert blower unit, blower wire must be like figure 14.
- Place blower unit back into cabinet. Check that the exhaust ports face towards the rear of the cabinet. See Figure 15.
- Reattach the blower plate to cabinet so the exhaust ports and blower plate opening are aligned. Attach with one blower unit mounting screw and then two blower plate mounting screws. See Figure 16.

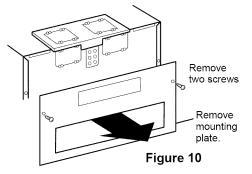

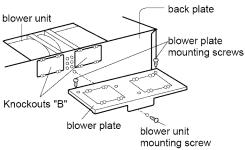
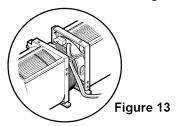


Figure 11



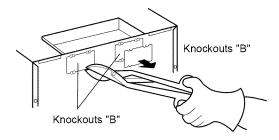


Figure 12

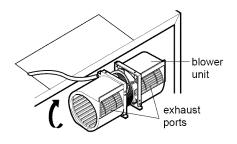


Figure 14

STEP 3: PREPARE THE VENTING BLOWER

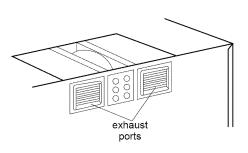


Figure 15

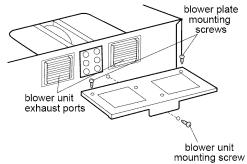


Figure 16

ROOF-VENTED INSTALLATION:

- Remove one blower unit mounting screw and two blower plate screws. Remove the blower plate from cabinet. See Figure 17.
- 2. Carefully lift the blower unit out of the microwave oven.
- 3. Rotate blower unit 90° so that the exhaust ports face the top of the cabinet. See Figure 18.
- 4. Place blower unit back into microwave oven.
- Use side cutters or tin snips to cut and remove knockouts "A" from blower plate. Discard knockouts. Be careful not to distort the plate. See Figure 19.
- Reattach blower plate to microwave oven. Attach with the one blower unit mounting screw and then the two blower plate mounting screws.
 See Figure 20.

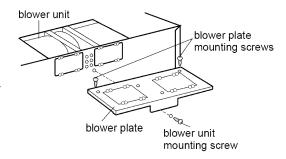
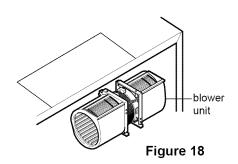


Figure 17



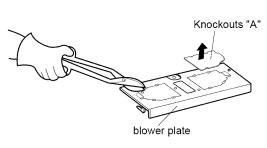


Figure 19

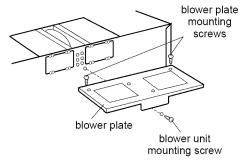


Figure 20

STEP 4: PREPARE THE WALL AND UPPER CABINET FOR INSTALLATION

BEFORE YOU START

- Remove any shipping materials and parts from inside the microwave oven.
- Cover the counter top or cooktop with a thick, protective covering to protect it from damage and dirt. See Figure 21.

NOTE: If you have a free-standing range, disconnect it, move it onto a piece of cardboard or hardboard and pull it away from the wall, so that you can get closer to the upper cabinet and back wall for easier measuring and drilling.

MEASURE AND TACK / TAPE UP THE TEMPLATES

- Using a plumb line and (metal) measuring tape, find and mark the vertical center line on the back wall, as in Figure 22.
- Find and mark one or two points where the studs are on the wall (Studs are normally 16 inches apart.) and then measure and mark the stud locations within the area marked "H" on the wall template.
 If you cannot find any wall stud, consult a local building contractor.

CAUTION

DO NOT ATTEMPT TO INSTALL THE MICROWAVE OVEN IF YOU CANNOT FIND A WALL STUD.

- 3. Line up the plumb line on the wall with the center line on the wall template.
 - NOTE: Be sure the minimum width is 30 inches and the distance from the top of the wall template to the range or counter top at least 30 inches.

 See Figure 4 on page 4.
- Securely tape or tack the wall template to the wall. See Figure 23.
 - NOTE: If the cabinets are not plumb, adjust the wall template to the cabinets.

 If the front edge of the cabinet is lower than the back edge, adjust the wall template to be level with the cabinet front.
- 5. Measure the bottom of the upper cabinet frame. Trim the edges "A" "B" and "C" on the upper cabinet template so that the template will fit on the bottom of the upper cabinet. If upper cabinet has a recessed frame, trim template so that it fits inside the recessed area. Align the centerline of the upper cabinet template with the centerline of the wall template; then securely tape or tack the upper cabinet template in place. See Figure 23.

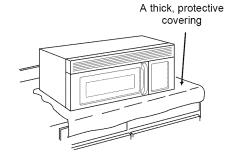


Figure 21

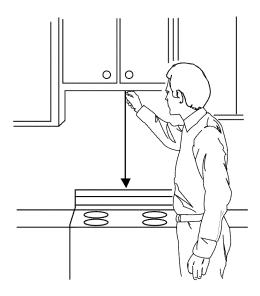


Figure 22

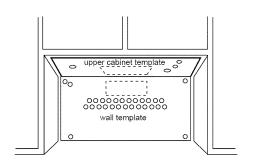


Figure 23

STEP 4: PREPARE THE WALL AND UPPER CABINET FOR INSTALLATION

DRILL THE HOLES IN THE WALL AND UPPER CABINET.

🛕 WARNING 🛕

BE VERY CAREFUL WHEN DRILLING HOLES INTO THE WALL.

Electrical wires could be concealed behind the wall covering and if the drill hits them you could get an electric shock.

- 1. Find the points on the wall template labeled "D", "E", "F", and "G". Drill a 3/16" diameter hole at any points that are over a wall stud. Drill a 3/4" diameter hole at any points over drywall.
- 2. Locate the wall stud closest to the center of the areas marked "H" and "I" on the wall template. Drill 3/16" holes into the wall stud in each of the areas. If a wall stud is not located within these areas, drill 3/4" diameter holes nearest to the center of the areas as possible.

If there is not a wall stud within the areas marked "H" and "I" and not behind points marked "D", "E", "F" and "G", DO NOT install microwave oven. (Consult building inspector.)

- 3. Drill a 3/8" hole at points "J", "K" and "N" on the upper cabinet template.

 NOTE: If the bottom of the upper cabinet is recessed 3/4" or more, you will need 2"x2" filler blocks (not included) to provide additional support for the bolts. See Figure 24.
 - Mark the center of each filler block and drill a 3/8" diameter hole at the marks.
 - Align filler blocks over the two openings in the top of the microwave oven cabinet and attach to cabinet with masking tape. See Figure 25.
- 4. Cut or drill a "2" diameter hole at the area marked "M", "Power-supply-cord-hole" on the upper cabinet template. If the upper cabinet is metal, you will need to cover the edge of the hole with the power-supply-cord bushing (supplied) to prevent damage to the cord from the rough metal edge.



WARNING



YOU MUST COVER THE EDGE OF THE POWER-SUPPLY-CORD-HOLE IN A METAL CABINET WITH THE POWER-SUPPLY-CORD BUSHING. FAILURE TO DO SO COULD RESULT IN DAMAGE TO THE CORE AND ELECTRIC SHOCK.

- 5. Cut out the venting areas (with the saber saw):
 - Roof-Vented-cut out the shaded area marked "L" on the upper cabinet template.
 - Wall-Vented-cut out the shaded area marked "O" on the wall template. Go to STEP 5 on the next page.
- Complete whichever venting system you have chosen. Use caulking compound to seal the exterior wall or roof opening around the wall cap or roof cap.

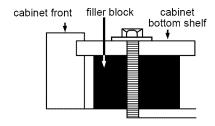


Figure 24

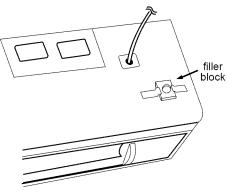



Figure 25

STEP 5: INSTALL THE MOUNTING PLATE

1. Remove the upper cabinet and wall templates.


NOTE: If you are venting the oven through the wall, be sure you align the damper/connector on the rear of the mounting plate with the 3 1/4"x10" duct. Be sure the damper moves freely. See Figure 26.

2. Prepare the toggle bolts by attaching a spring toggle head to the end of each toggle bolt as shown in Figure 27.



NOTE: Be sure to leave at least one wall-thickness of space between the head of the toggle bolt and the spring toggle head so that the spring toggle can open on the other side of the wall, as shown in Figure 29.

- 4. Locate the stud holes (3/16") and insert the lag screws through the mounting plate and into the holes. See Figure 30.
- 5. Insert the toggle bolts through the dry wall holes (3/4"). Tighten the toggle bolts.
- Slide washer onto lock pin and place inside upper cabinet for future use as directed on the next page. See Figure 31.

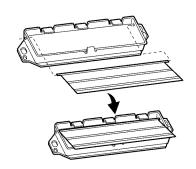

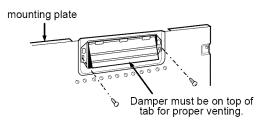
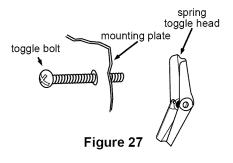


Figure 26






Figure 28




Figure 29




Figure 30




Figure 31

STEP 6: ATTACH THE OVEN TO THE WALL





👠 WARNING 🕰




You will need two people to lift this microwave. Failure to use more than one person could result in personal injury.

- 1. Carefully lift microwave oven and hang it on support tabs (See Figure 28) at the bottom of the mounting plate. Reaching through upper cabinet, thread power supply cord through the power supply cord hole in the bottom of the upper cabinet. See Figure 32.
- 2. Rotate microwave upward so that top of oven is against bottom of upper cabinet or cabinet frame.







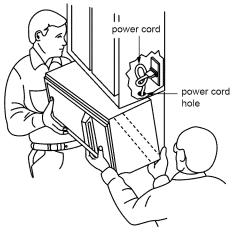


Figure 32

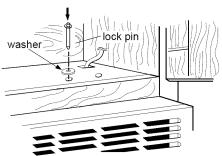


Figure 33

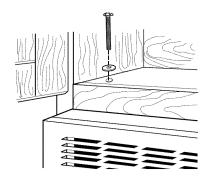



Figure 34


STEP 6:


ATTACH THE OVEN TO THE WALL

Roof-vented installation: Align the damper/duct connector
with the vent on top of the microwave oven. Damper
should be on top of tab. Use two tapping screws(brightcolored) to attach damper/duct connector to the microwave
oven. See Figure 36.


NOTE: Damper/duct connector must be attached to microwave oven after microwave oven is installed.







- 10. Plug in the power supply cord.
- 11. Read your Owner's Manual, then check the operation of your microwave oven.

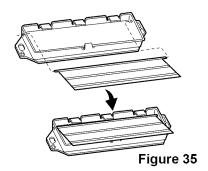

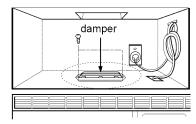


Figure 36




Figure 36 Detail

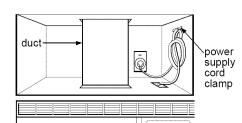


Figure 37

Figure 38

