

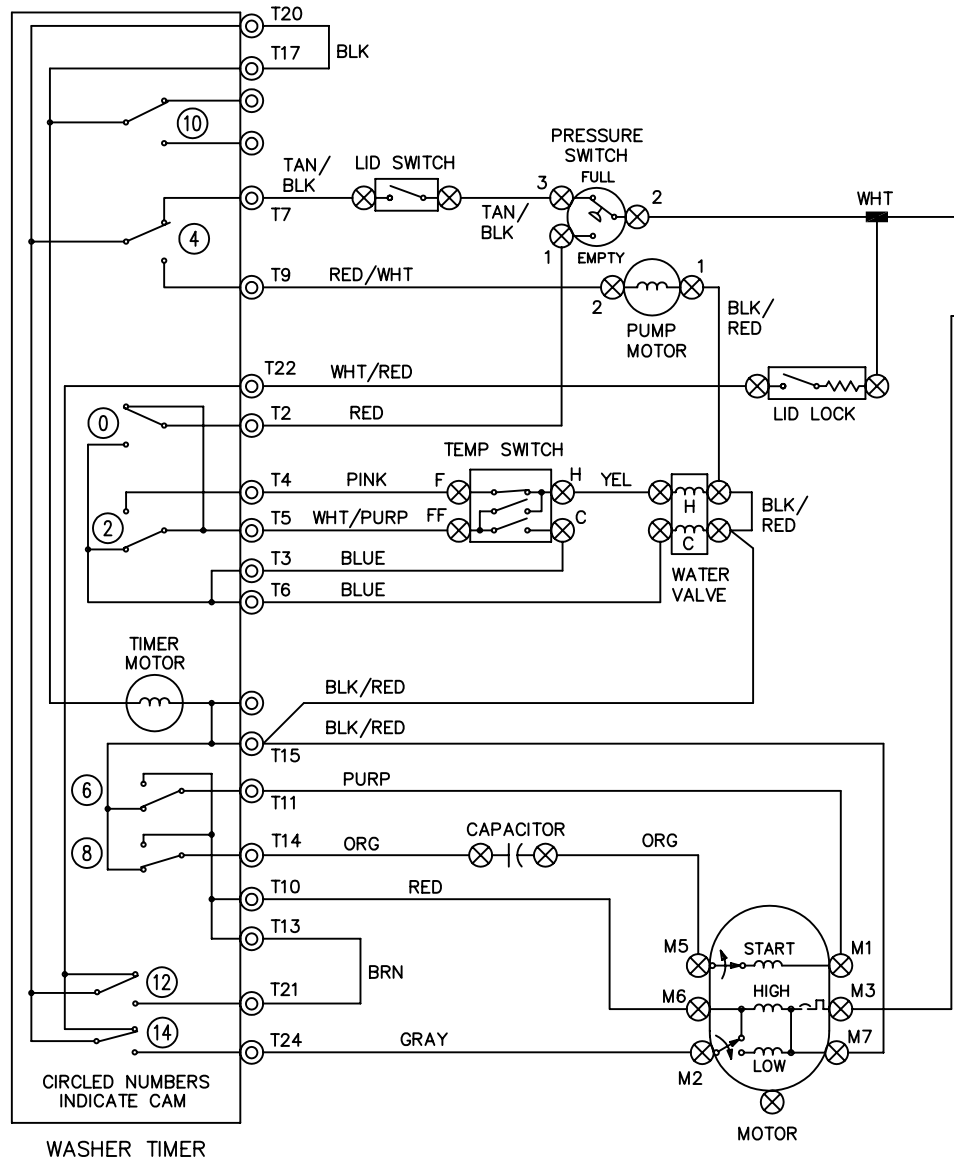


CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

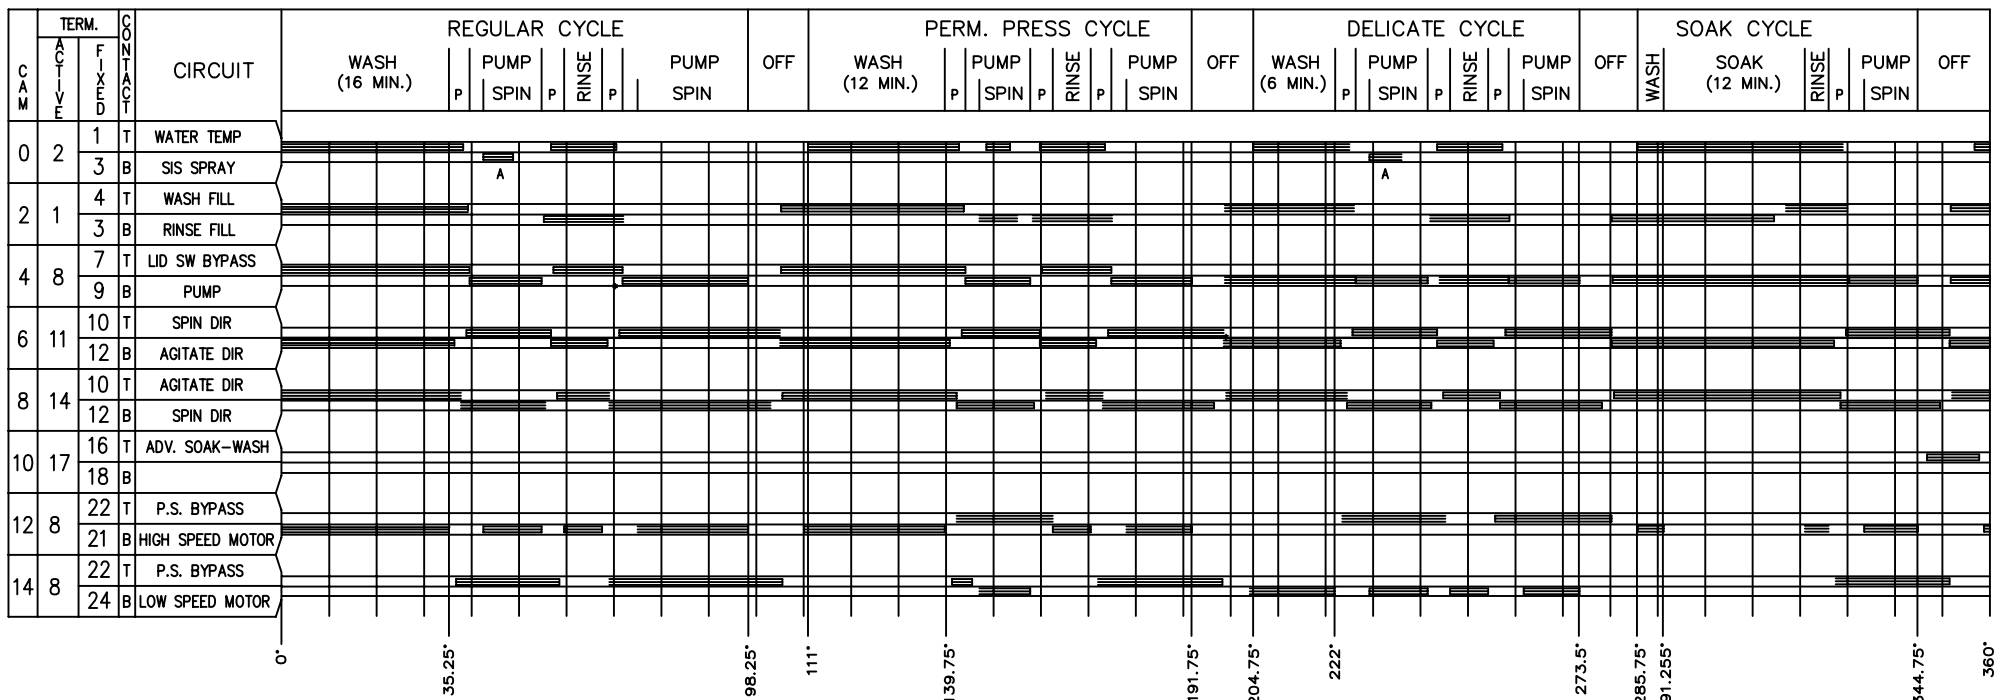

SUBINTERVAL SPRAY DETAIL

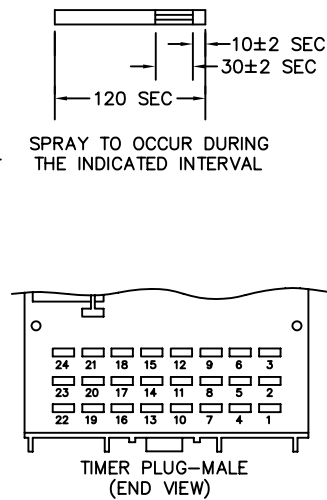

WIRING CODES


- ⊙ PLUG IN TIMER TERMINAL
- ⊗ QUICK DISCONNECT TERMINAL
- SCREW TERMINAL
- ⊕ CONNECTION
- ⊖ NO CONNECTION
- ⊗ MOTOR SWITCH
- ⊖ SPlice
- ⊖ MOTOR PROTECTOR
- ⊖ CHASSIS (CABINET) GROUND
- ⊖ HARNESS CONNECTOR TERMINAL
- ⊖ INSULATED TERMINAL

- NOTES:
- ALL WIRING MUST CONFORM TO LOCAL ELECTRICAL CODES.
 - CONNECT DRYER TO 30 AMP INDIVIDUAL BRANCH CIRCUIT.
 - DRYER TIMER SHOWN IN OFF POSITION DOOR SWITCH CLOSED, MOTOR AT REST, AN THERMOSTAT CLOSED, AND FABRIC SELECTOR SWITCH AT HIGH HEAT.
- WASHER TIMER SHOWN IN ON POSITION TEMPERATURE SELECTOR SWITCH AT HOT WASH/COLD RINSE, AND PRESSURE SWITCH FULL.

TEMPERATURE SWITCH CIRCUIT

WASH/RINSE	F-H	FF-H	FF-C
HOT/COLD	X		
WARM/WARM (OPT)		X	X
COLD/COLD			X
WARM/COLD	X		X

X=CONTACTS CLOSED

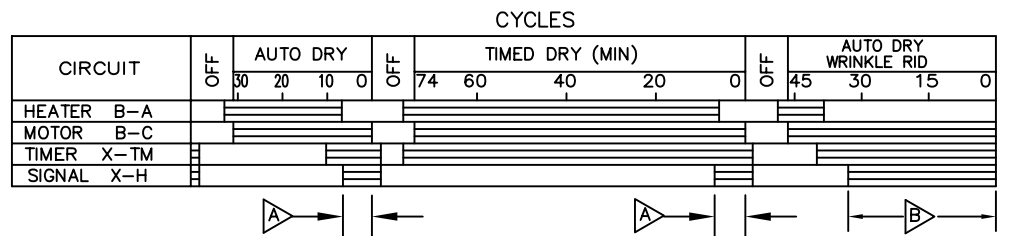

THE BAR CHART ABOVE REPRESENTS ONE COMPLETE REVOLUTION OF TIMER SHAFT.

SHADED PORTION OF BAR CHART INDICATES THE PROPORTIONAL TIMES THAT INTERNAL TIMER CONTACTS ARE CLOSED.


A PULSER CAM, LOCATED NEXT TO THE BUZZER CAM AND ROTATING AT 12 REVELUTIONS PER HOUR, ALLOWS CURCUIT "X-H" TO CLOSE FOR 5 SECONDS (±3 SECONDS)

- A 1 OR 2 TIMES IN THIS AREA
- B 6 TO 8 TIMES IN THIS AREA

FABRIC SELECTOR SWITCH

POSITION	1-2	3-4	4-5
NO HEAT			
LOW HEAT	X		X
MEDIUM HEAT	X	X	
HIGH HEAT	X		

X=CONTACTS CLOSED

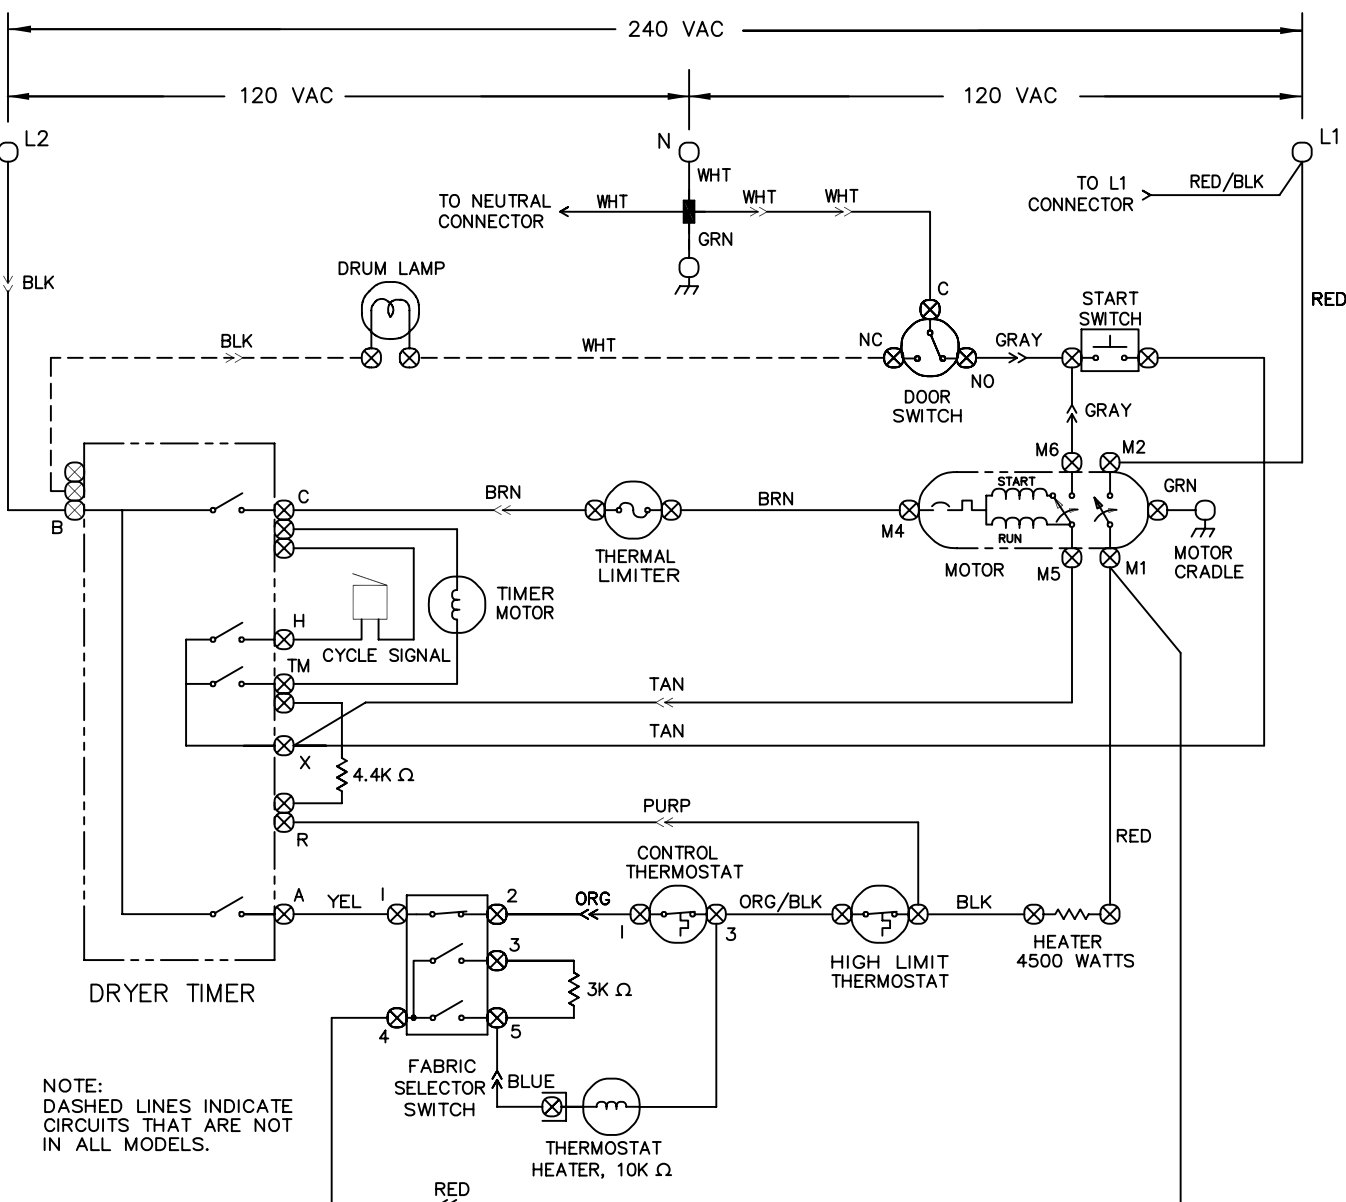

NOTE: DASHED LINES INDICATE CIRCUITS THAT ARE NOT IN ALL MODELS.