


Installation Instructions



Part No. 3188084 Rev. A

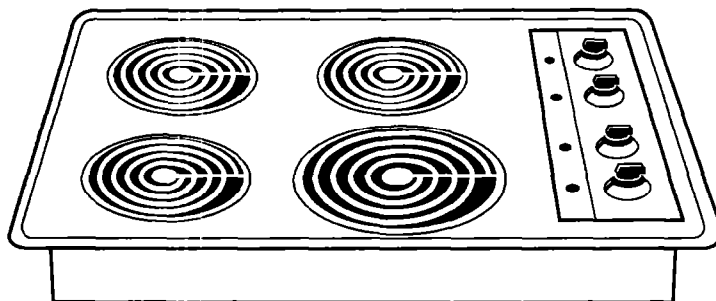

30" (76.2) Electric Built-in Cooktop

IMPORTANT:
**Read and save these
instructions.**

IMPORTANT:

Installer: Leave Installation Instructions with the homeowner.

Homeowner: Keep Installation Instructions for future reference.

Save Installation Instructions for local electrical inspector's use.

3194


Before you start...

Proper installation is your responsibility. Make sure you have everything for correct installation. It is the responsibility of the installer to comply with the installation clearances specified on the serial/rating plate. The serial/rating plate is found on the bottom of the cooktop.

Important:
Observe all governing codes and ordinances.
Failure to meet governing codes and ordinances could lead to fire or electrical shock.

30" (76.2 cm) min. base cabinet is required. If cabinet has a drawer, a 3" (7.6 cm) depth clearance from the countertop to the top of the drawer (or other obstruction) in base cabinet is required.

Check location where cooktop will be installed. The location should be away from strong draft areas, such as windows, doors and strong heating vents or fans. The cooktop should be located for convenient use in the kitchen.

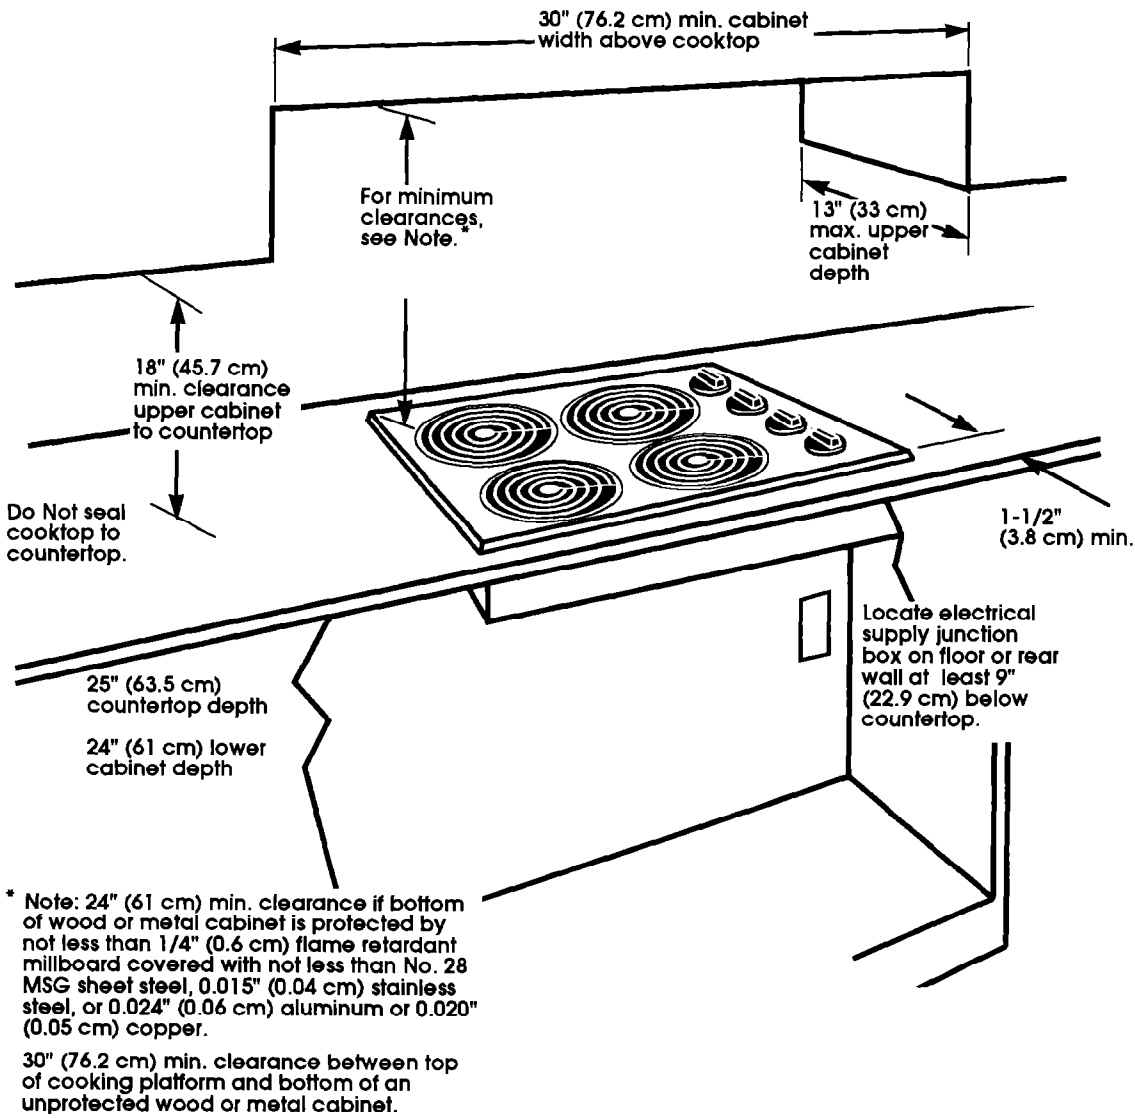

⚠ WARNING

Electrical Shock Hazard

It is the customer's responsibility:

- To contact a qualified electrical installer.
- To assure that the electrical installation is adequate and in conformance with National Electrical Code, ANSI/NFPA 70 — latest edition**, or Canadian Electrical Code, C22.1-1982 and C22.2 No. 01982 (or latest edition)***and all local codes and ordinances.

Failure to do so could result in electrical shock or other personal injury.

Personal Injury Hazard

To eliminate the risk of burns or fire, avoid installing cabinet storage above the cooking surface. If cabinets are already installed, reduce the hazard of reaching over a heated cooking surface by installing a range hood.

The range hood should extend a minimum of 5 inches (12.7 cm) out from the bottom of the cabinets.


Reaching over a heated cooking surface could result in a serious burn.

Copies of standards listed may be obtained from:

** National Fire Protection Association
Battymarch Park
Quincy, Massachusetts 02269

***Canadian Standard Association
178 Rexdale Boulevard
Rexdale (Toronto), Ontario M9W 1R3

Cooktop dimensions:

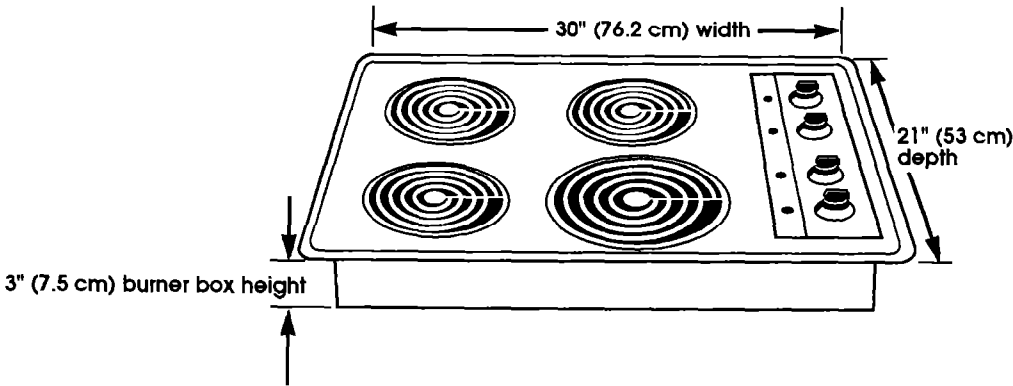


Cutout dimensions:


New installations -
Follow minimum dimensions given.

Replacement installations- Be sure that front edge of cooktop is at least 1-1/2" (3.8 cm) back from front edge of countertop.

Countertop opening dimensions that are shown must be used. Given dimensions are minimum clearances and provide required 0" (0 cm) clearance.

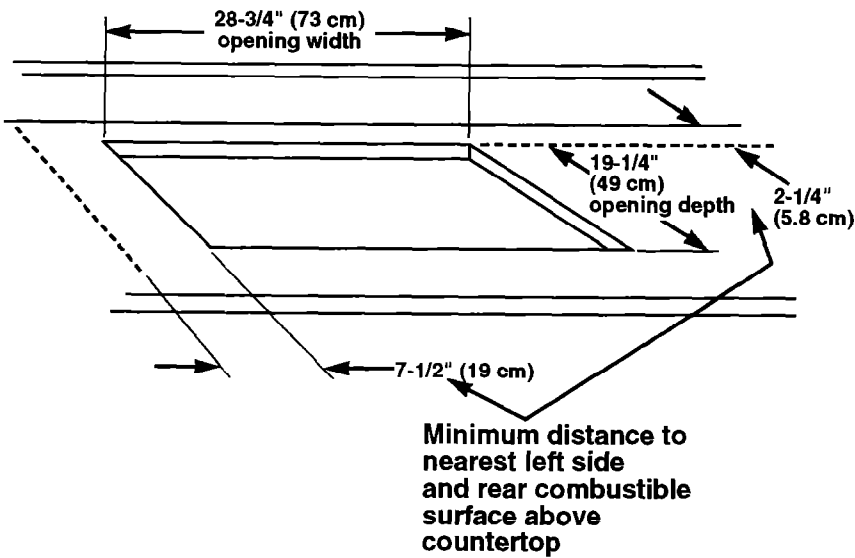

Tools needed for installation:

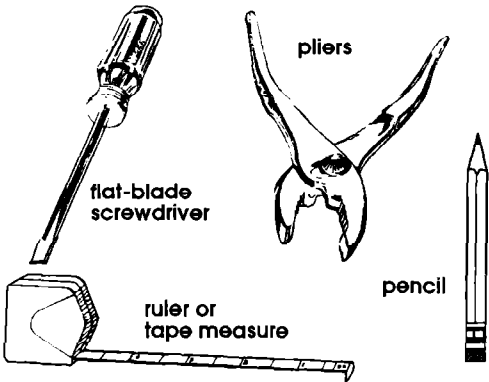

Electrical requirements

⚠ WARNING

Electrical Shock Hazard

- Electrical ground is required on this appliance.
- Do Not have a fuse in the neutral or grounding circuit. A fuse in the neutral or grounding circuit could result in an electrical shock.
- Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.

Failure to follow these instructions could result in an electrical shock, serious injury or death.

If codes permit and a separate grounding wire is used, it is recommended that a qualified electrician determine that the grounding path is adequate.

IMPORTANT:
Save Installation Instructions for electrical inspector's use.

A. A three-wire, single-phase, 240-volt, 60-Hz, AC-only electrical supply is required on a separate, 40-ampere circuit, fused on both sides of the line. A time-delay fuse or circuit breaker is recommended. The rating of the fuse or circuit breaker should be equal to the marked current rating (amps) on the appliance, but not larger than the next standard fuse or circuit breaker size. The marked current rating is specified on the serial/rating plate located on the bottom of the cooktop.

B. THE COOKTOP MUST BE CONNECTED WITH COPPER WIRE ONLY.

C. Wire sizes and connections must conform to the requirements of the National Electrical Code ANSI/NFPA 70 — latest edition**, or the Canadian Electrical Code C22.1-1982 and C22.2 No. 01982 (or latest edition)***, and all local codes and ordinances.

Copies of the standards listed may be obtained from:

** National Fire Protection Association
Batterymarch Park
Quincy, Massachusetts 02269

*** Canadian Standard Association
178 Rexdale Boulevard
Rexdale (Toronto), Ontario M9W 1R3

D. The appliance should be connected directly to the fused disconnect or circuit breaker box through flexible, armored or non-metallic sheathed, copper cable. The flexible, armored cable extending from the appliance should be connected directly to the junction box.

E. Locate the junction box to allow as much slack as possible between junction box and the cooktop so that the cooktop can be moved if servicing is ever necessary. **Do Not cut the conduit.**

F. A U.L.- or C.S.A.-listed conduit connector must be provided at each end of the power supply cable (at the appliance and at the junction box).

Electrical connection

⚠ WARNING

Electrical Shock Hazard


- Electrical ground is required on this appliance.
- This appliance must be connected to a grounded, permanent wiring system or a grounding connector should be connected to the grounding terminal or wire lead on the appliance.
- Disconnect power to the junction box.
- Do Not connect to the electrical supply until appliance is permanently grounded.

Failure to do so could result in electrical shock, serious injury, or death.

This appliance is manufactured with a frame-connected, green or bare grounding wire.

Connect the appliance cable to the junction box through the U.L.-listed conduit connector. Complete electrical connection according to local codes and ordinances.

A. Where local codes permit connecting the frame-grounding conductor to the neutral (white) junction box wire:

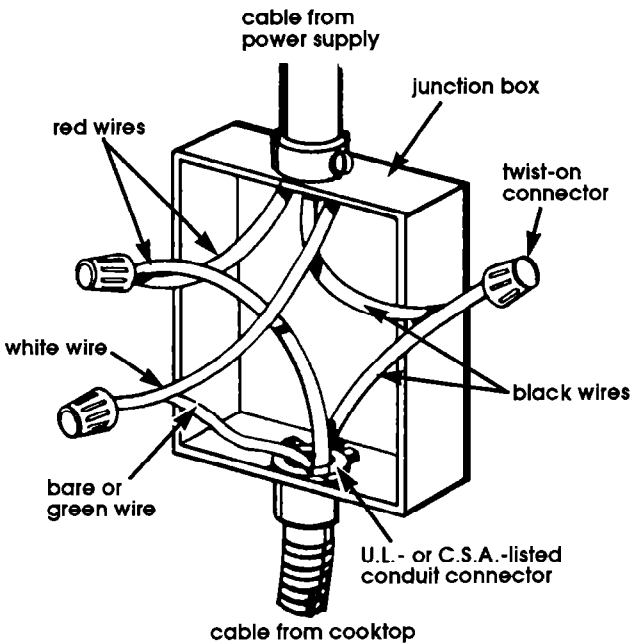


Grounded neutral

Figure 1

1. Disconnect power supply.
2. Connect the flexible armored cable from the cooktop to the junction box using a U.L.- or C.S.A.-listed conduit connector. Tighten screws on conduit connector.
3. Connect the green (or bare) appliance cable wire with the neutral (white) wire in the junction box.
4. Connect the two black wires together; then connect the two red wires together with twist-on wire connectors. (See Figure 1.)

B. Where local codes Do Not permit connecting the frame-grounding conductor to the neutral (white) junction box wire:

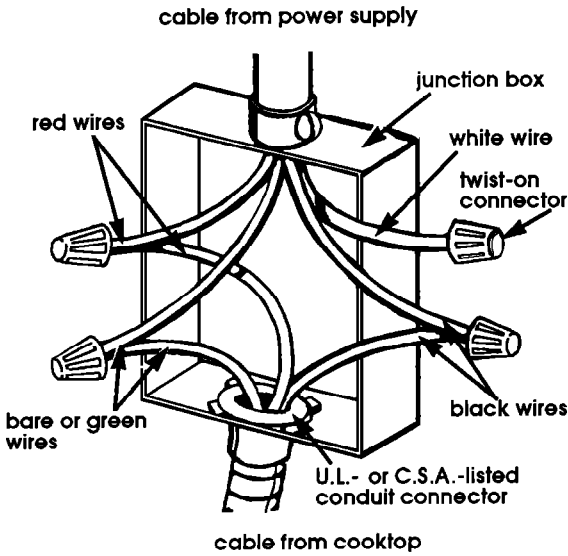


Ungrounded neutral

Figure 2


1. Disconnect power supply.
2. Connect the flexible armored cable from the cooktop to the junction box using a U.L.- or C.S.A.-listed conduit connector. Tighten screws on conduit connector.
3. Connect the two black wires together; then connect the two red wires together with twist-on wire connectors. (See Figure 2.)
4. Connect the green (or bare) grounding wire from the appliance cable to the grounded wire in the junction box or other grounded connector.
5. Put a twist-on wire connector on end of white wire.
6. Contact a qualified electrician to assure the cooktop is properly grounded.
7. **Do Not ground to a gas supply pipe or hot water pipe.** Do Not connect to electrical supply until appliance is permanently grounded.

Now start...
With cooktop in kitchen.



**CAUTION**

Property Damage

Lift entire cooktop up from cutout when repositioning cooktop in countertop opening. Failure to do so could scratch the countertop.

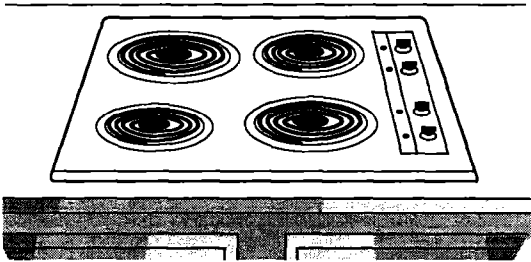

- 1.** Insert the cooktop into the countertop opening. Center the cooktop in the cutout. Check that the front of the cooktop is parallel to the front edge of the countertop. Check that all required clearances are met. If cooktop is not properly positioned, lift the entire cooktop out of opening to make adjustments.

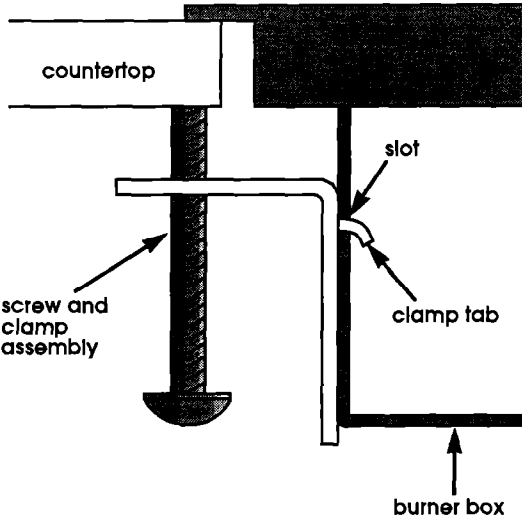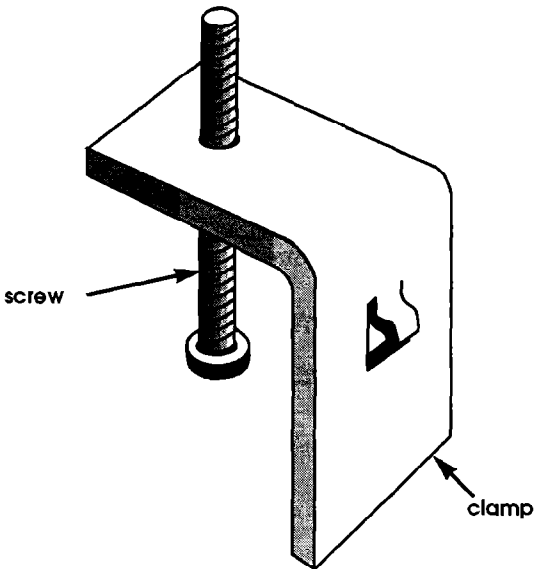

- 2.** Insert one clamp tab through each slot located on sides of the burner box.

**WARNING**


Personal Injury Hazard

Do Not overtighten screws. Overtightening screws could cause personal injury or product damage.

- 3.** Secure cooktop to countertop by hand-tightening each screw; then use a screwdriver to tighten each screw 1 to 1-1/2 more turns. Do Not overtighten screws.

- 4.** Make the electrical connection. (See "Electrical requirements" and "Electrical connection" sections, Panel B, for details.)

- 5.** Turn on the power supply.

**WARNING**

Personal Injury Hazard

Do Not touch cooktop surface. Areas near elements may be hot. Touching a heated cooking surface could result in a serious burn.


- 6.** Push in and turn each control knob to the "HI" position. Check the operation of the cooktop heating elements and indicator lights.

You have just finished installing your new Whirlpool cooktop. To get the most efficient use from your new cooktop, read your Whirlpool Use & Care Guide.

Congratulations!

Keep Installation Instructions and Guide close to cooktop for easy reference. The instructions will make reinstalling your Whirlpool cooktop in another home as easy as the first installation.

Numbers correspond to steps.

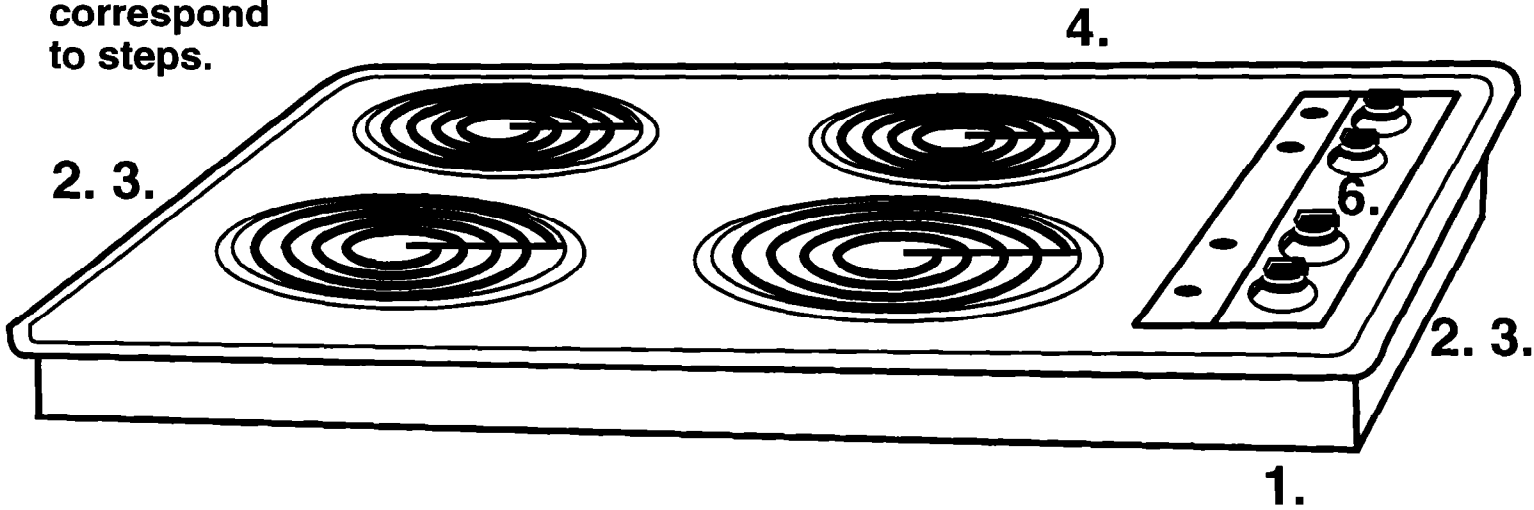


If cooktop does not operate...

- Check that the circuit breaker is not tripped or the house fuse blown.
- See Use and Care Guide for troubleshooting checklist.

Note: Refer to Use and Care Guide for operating and cleaning instructions.

If you need service...

In the event that your appliance should need service, call the nearest Procare Appliance Service depot. See the listings in the Use and Care Guide or consult your telephone directory.

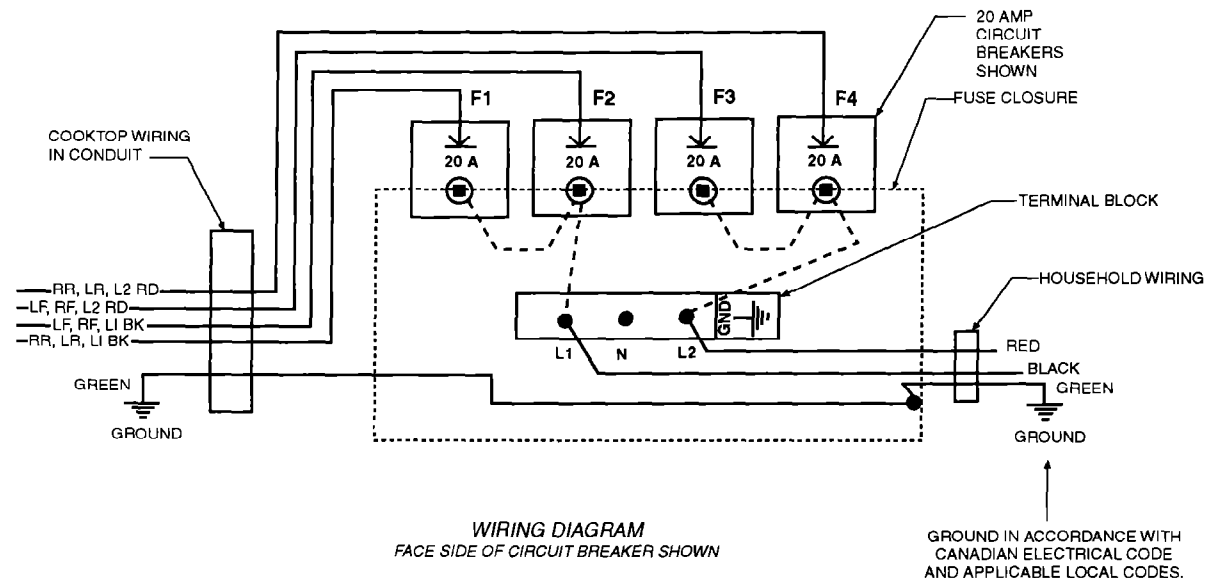

Printed on recycled paper.
10% post consumer waste/
50% recovered materials.